INSTRUCTIONS FOR ASSEMBLY
OF THE AXLE AND BRAKING SYSTEM – C255



TO ASSEMBLY YOU NEED:

- WRENCH 17mm




- WRENCH 19mm





WARNING!


For axles without brakes, skip the steps: 3,4,5

STEP 1

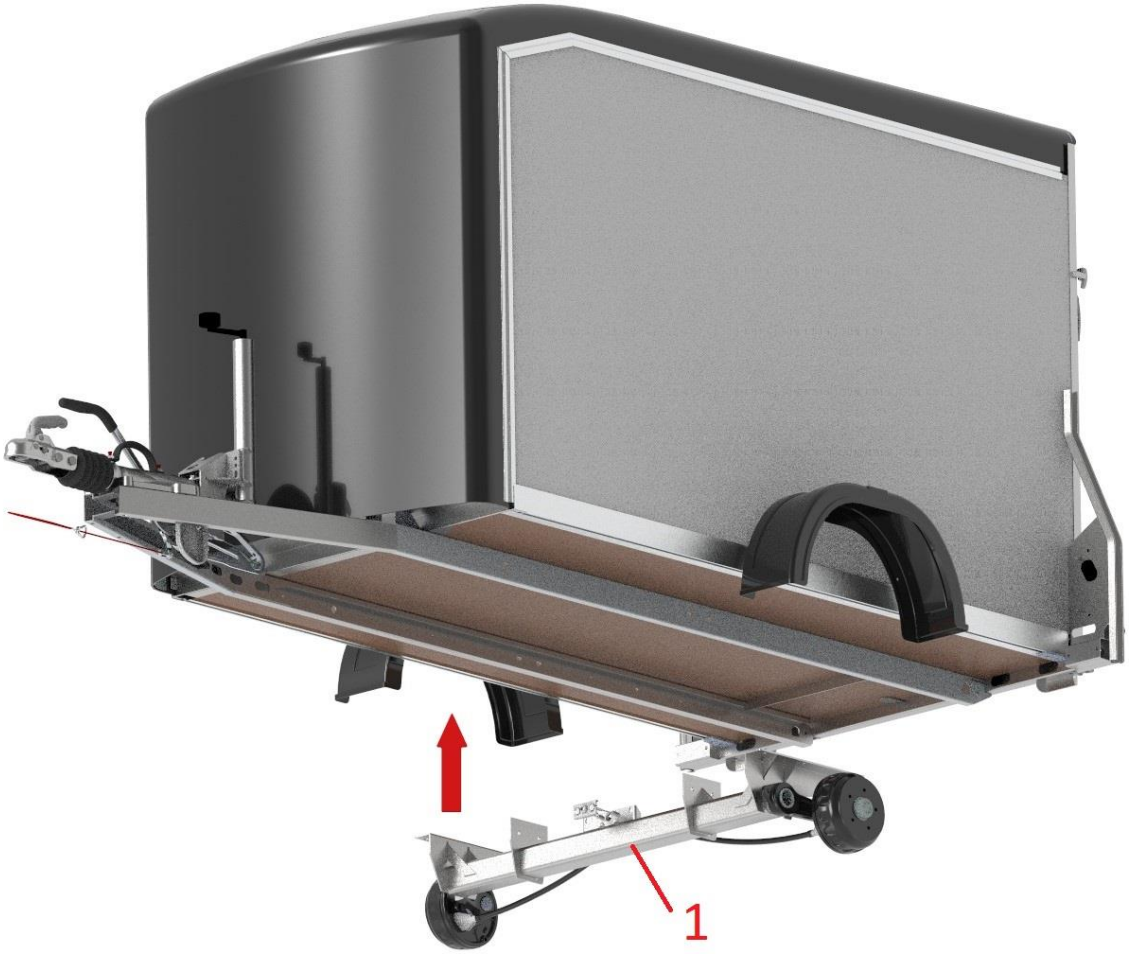


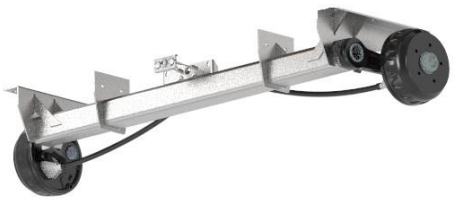
NUMBER	PICTURE	PCS
1		1

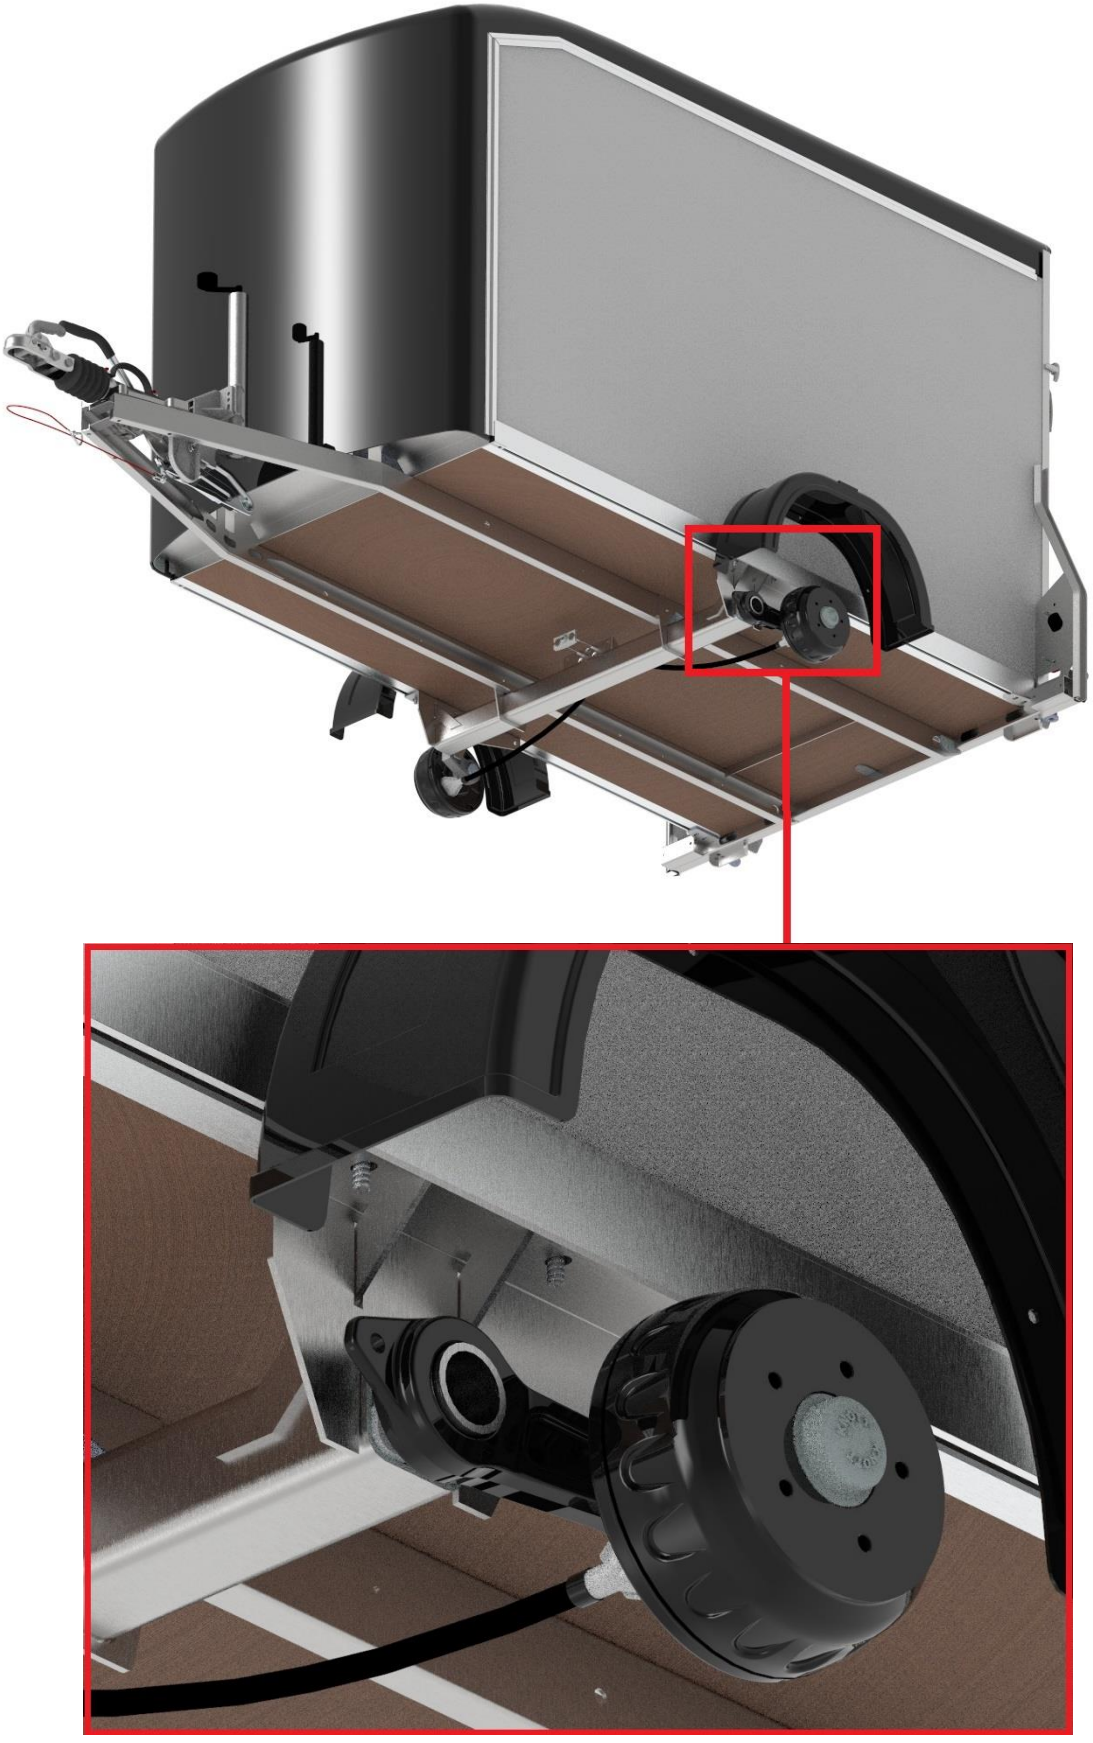

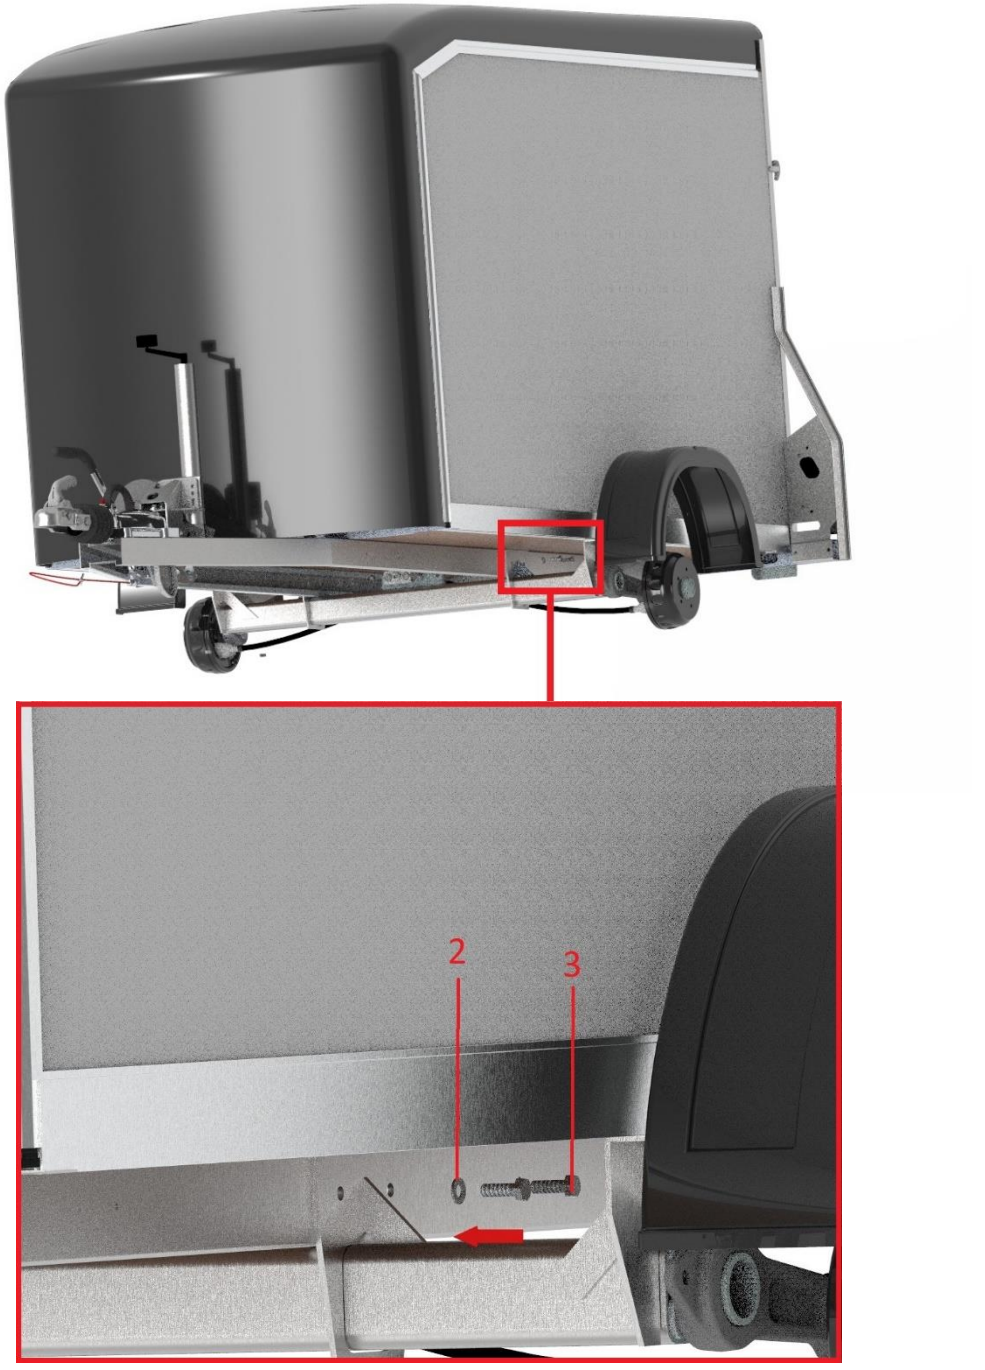

NUMBER	PICTURE	PCS
2		4
3		4

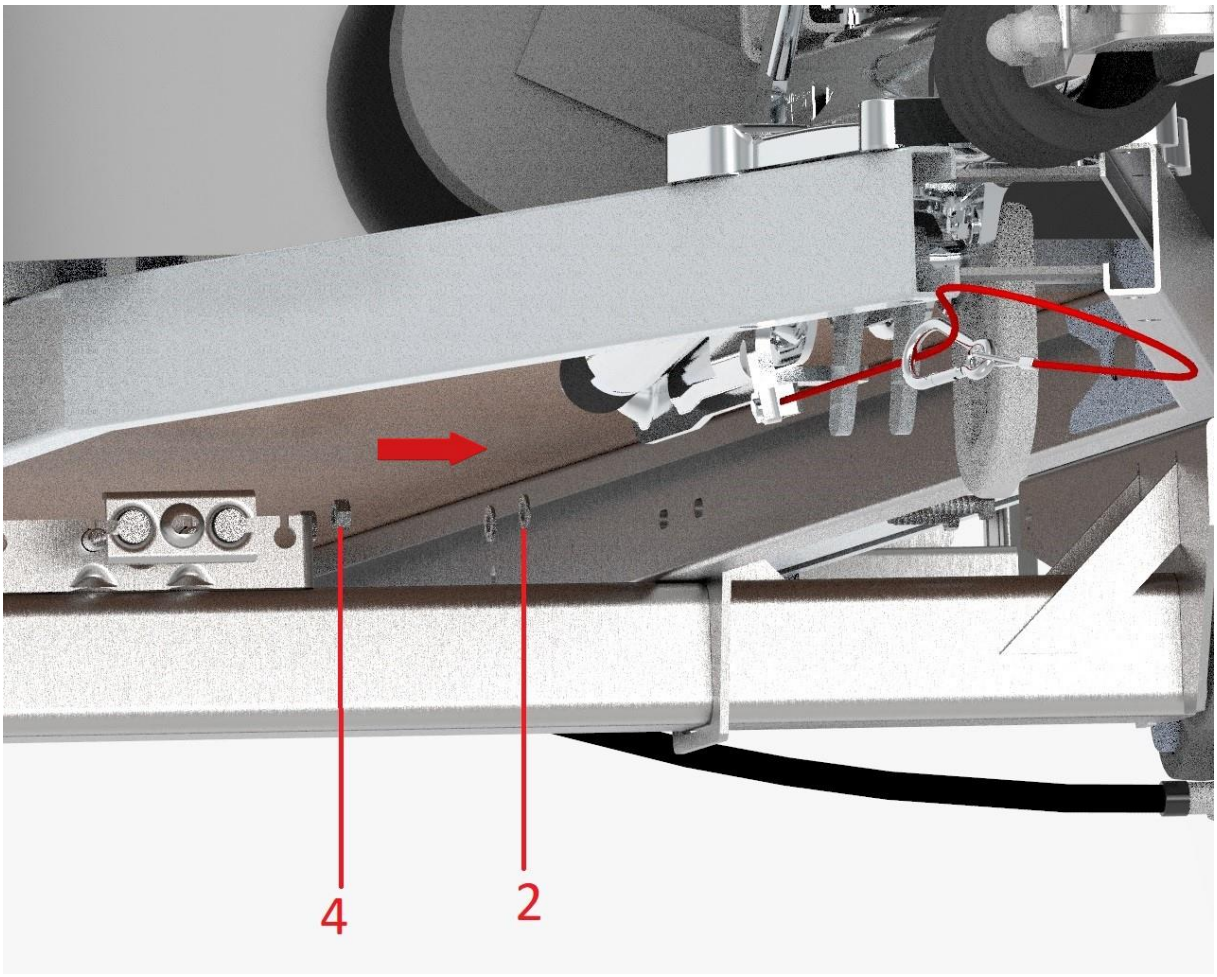


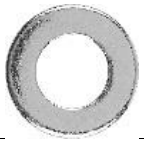
NUMBER	PICTURE	PCS
2		4
4	 TIGHTENING TORQUE =110Nm	4

CORRECT INSTALLATION



STEP 2

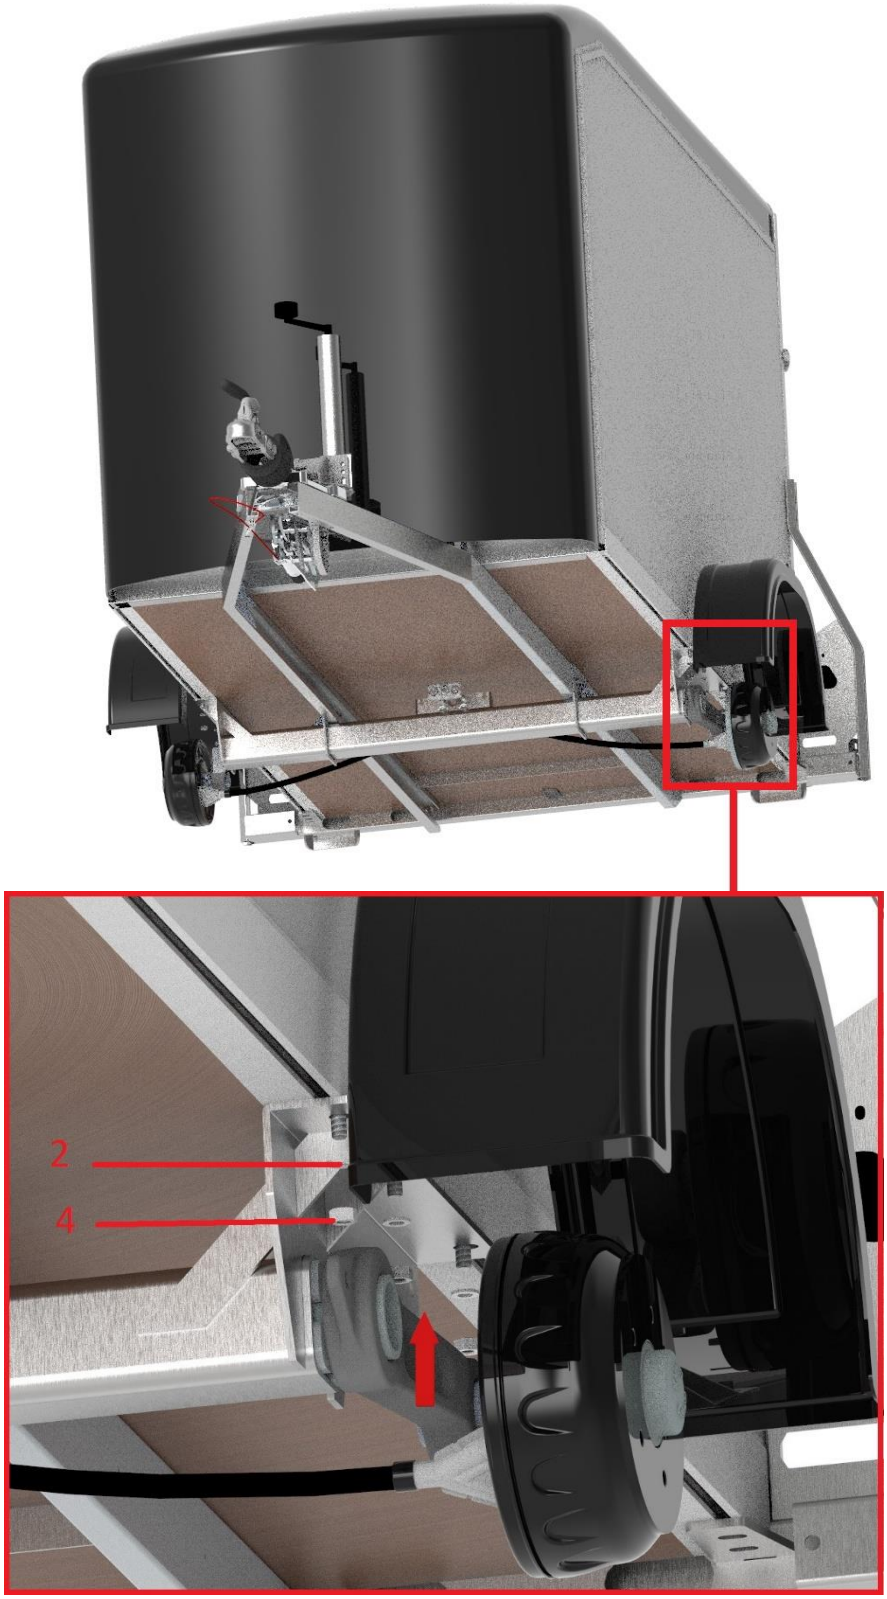


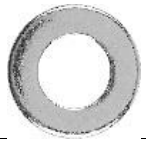NUMBER	PICTURE	PCS
2		4
4	 TIGHTENING TORQUE =110Nm	4

CORRECT INSTALLATION




STEP 3

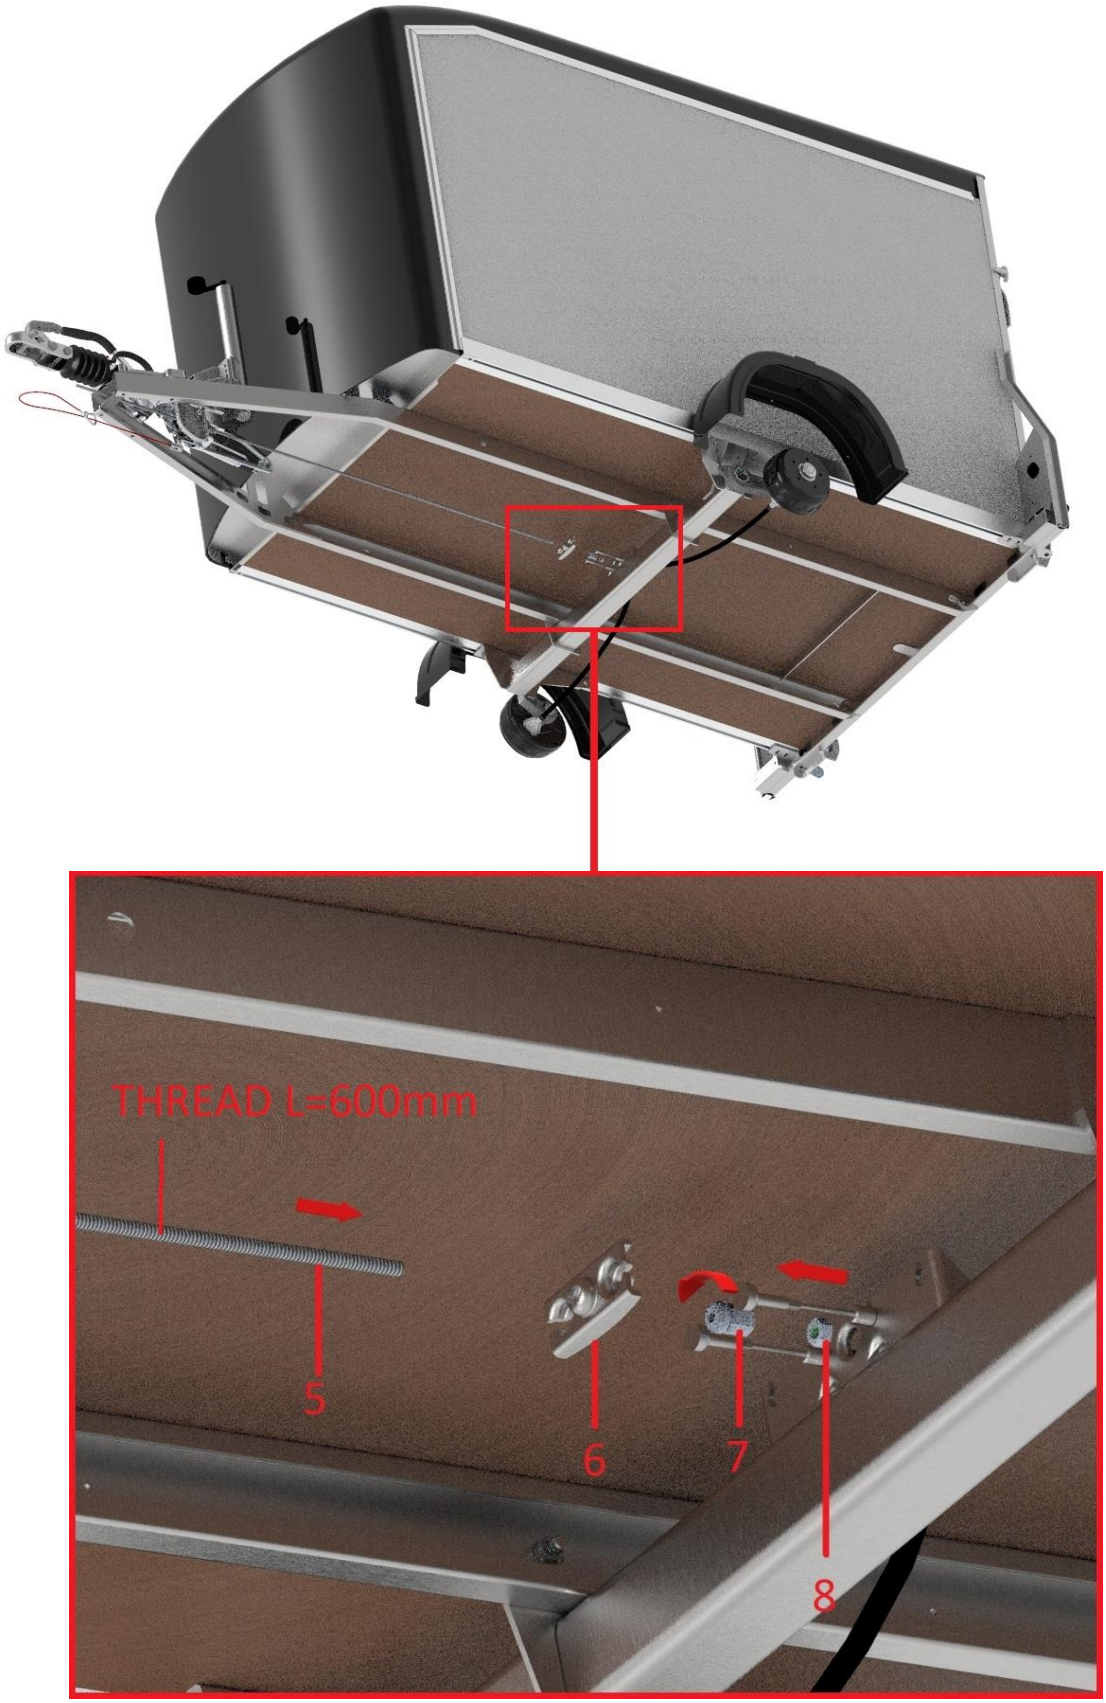





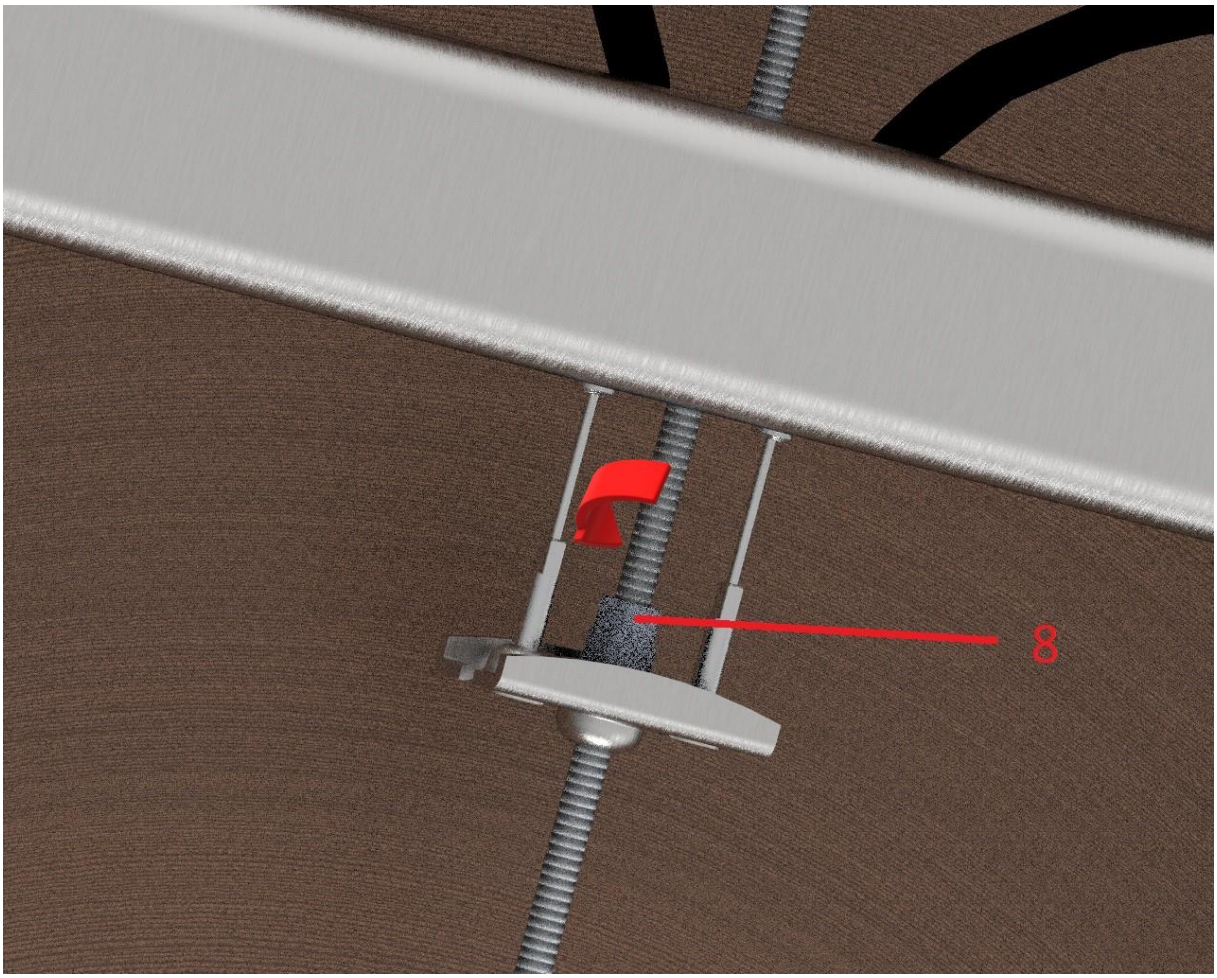


NUMBER	PICTURE	PCS
5		1
6		1
7		1
8		1

CORRECT INSTALLATION




STEP 4



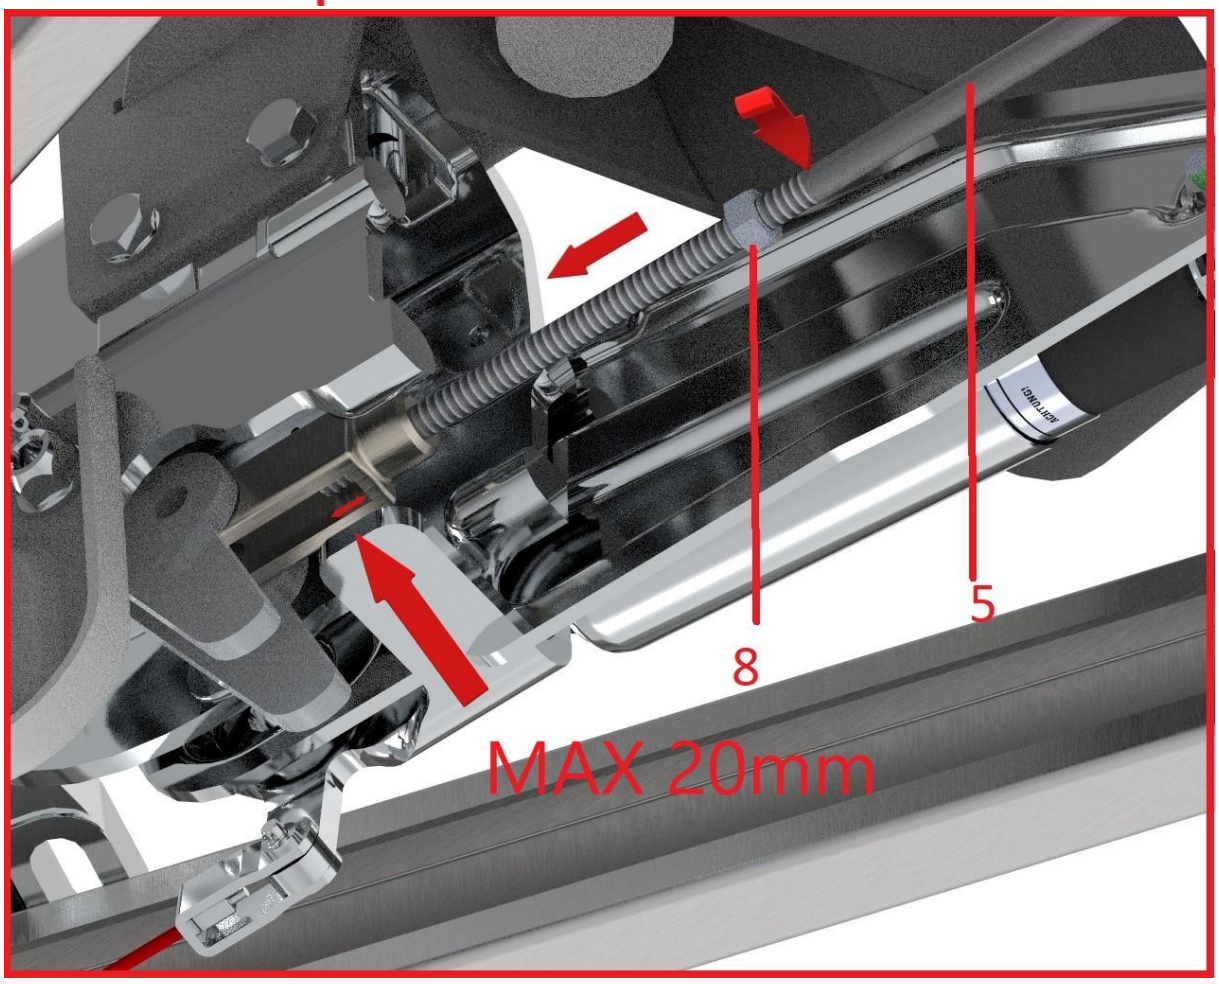


NUMBER	PICTURE	PCS
5		1
8		1

CORRECT INSTALLATION

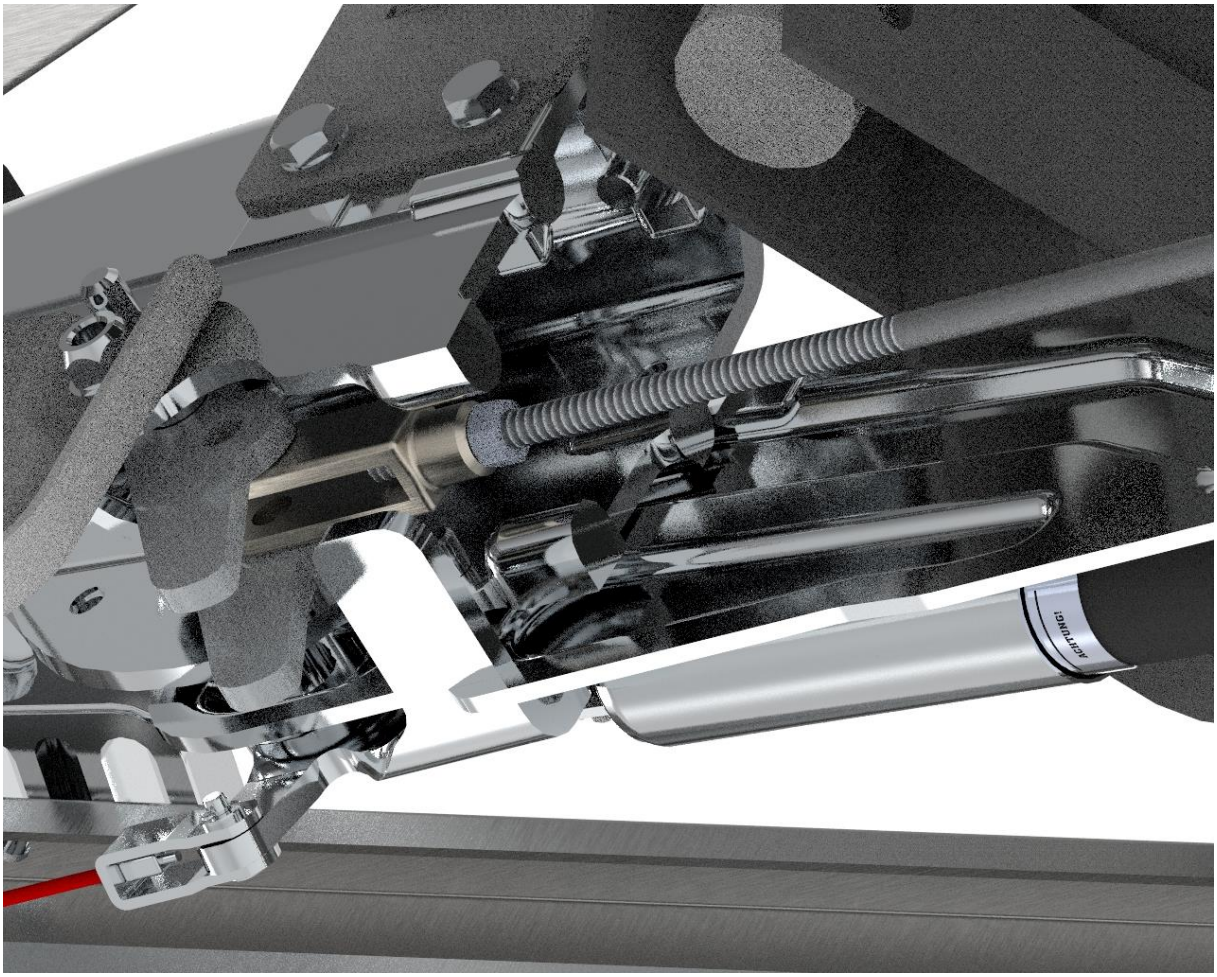


STEP 5

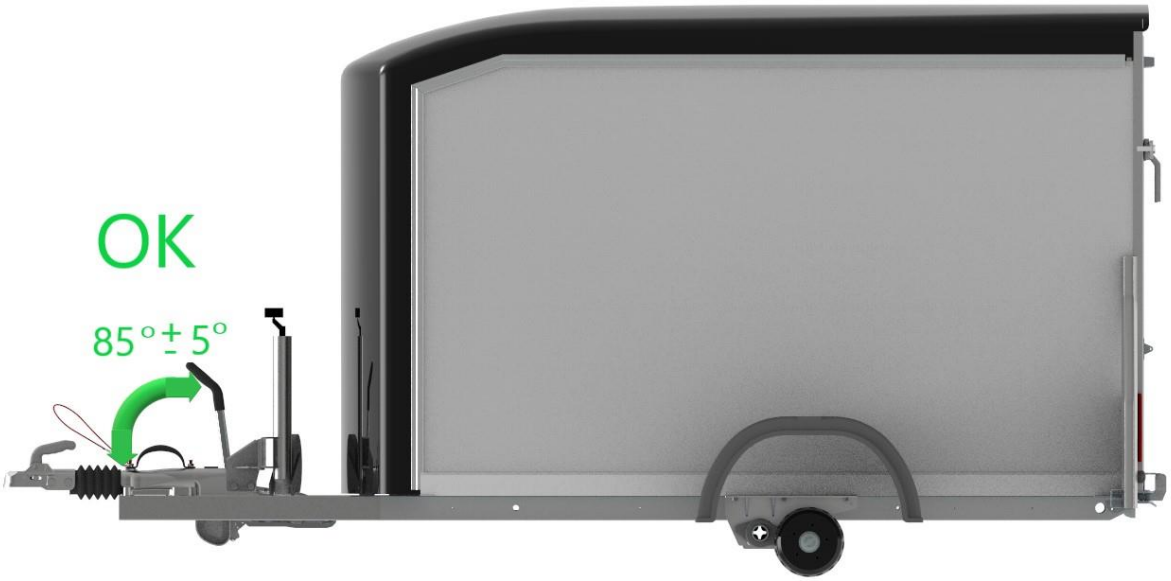

WARNING!
IF THE LEVER IS OUT OF THE RANGE, REPEAT ADJUSTMENT AS IN STEP 3 TO SATISFY THE REQUIRED EFFECT!

STEP 6

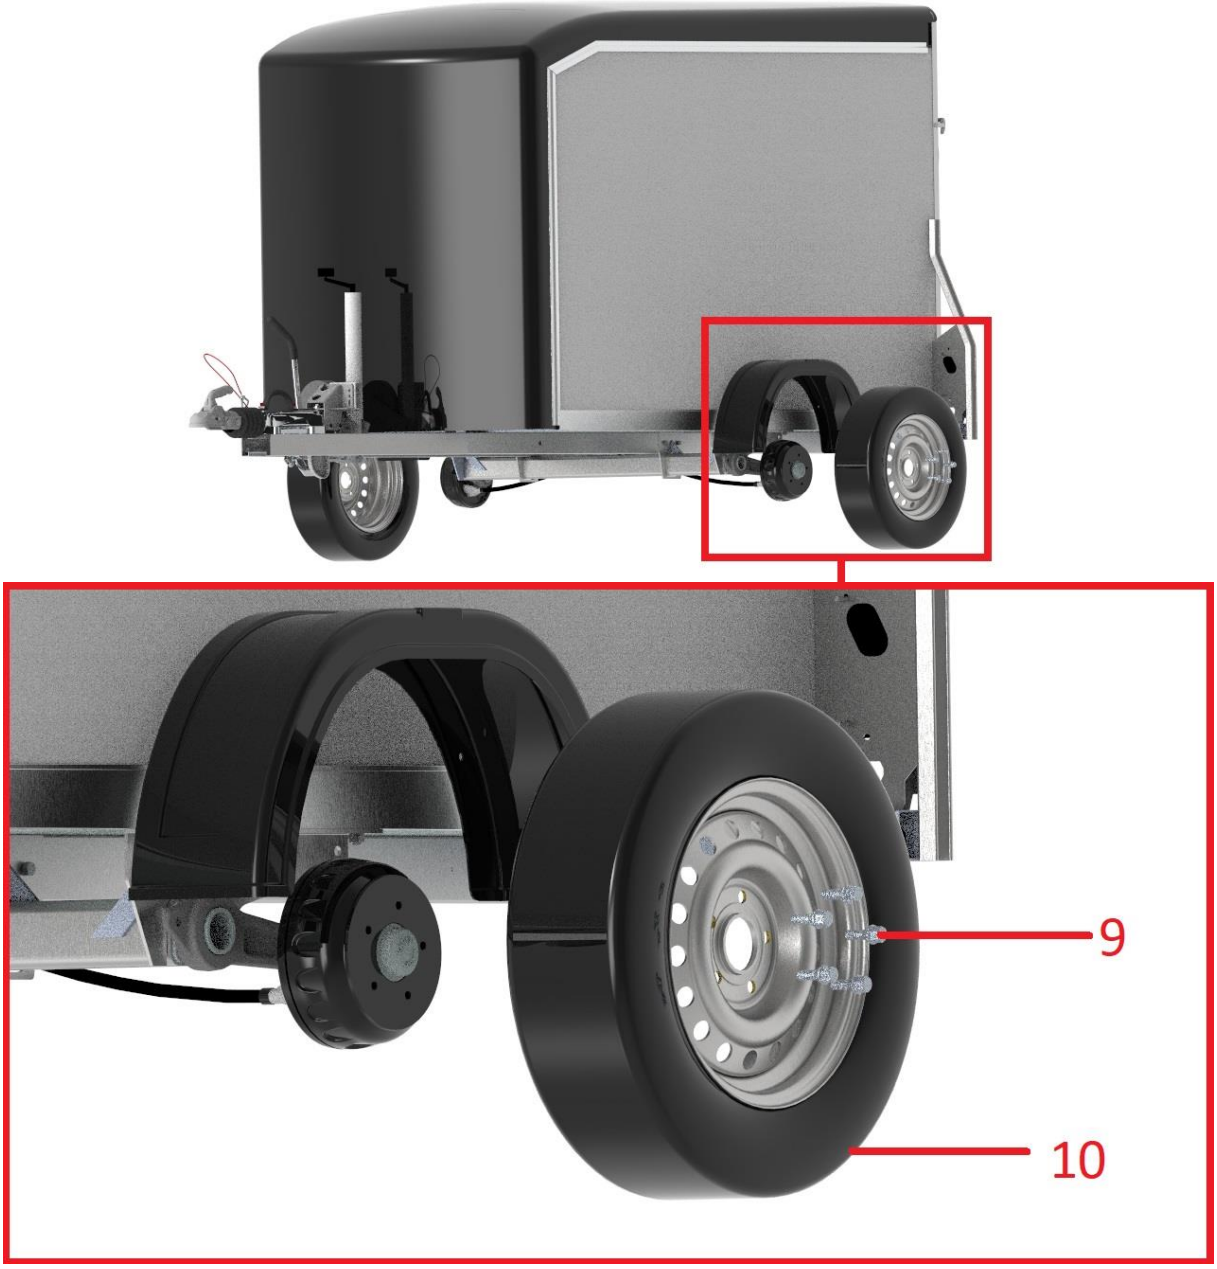

NUMBER	PICTURE	PCS
9	 TIGHTENING TORQUE = 90Nm	10
10		2

CORRECT INSTALLATION

