INSTALLATION INSTRUCTIONS OF BACK FLAP – OPTIMAX / MINIMAX



WARNING!


You will need extra to adapt the back flap yourself:


- Driller
- Drill 6mm and 11mm
- Riveter to river nuts

You will need to exchange it:

- Allen wrench 4mm
- Wrench 10mm and 13mm

STEP 1

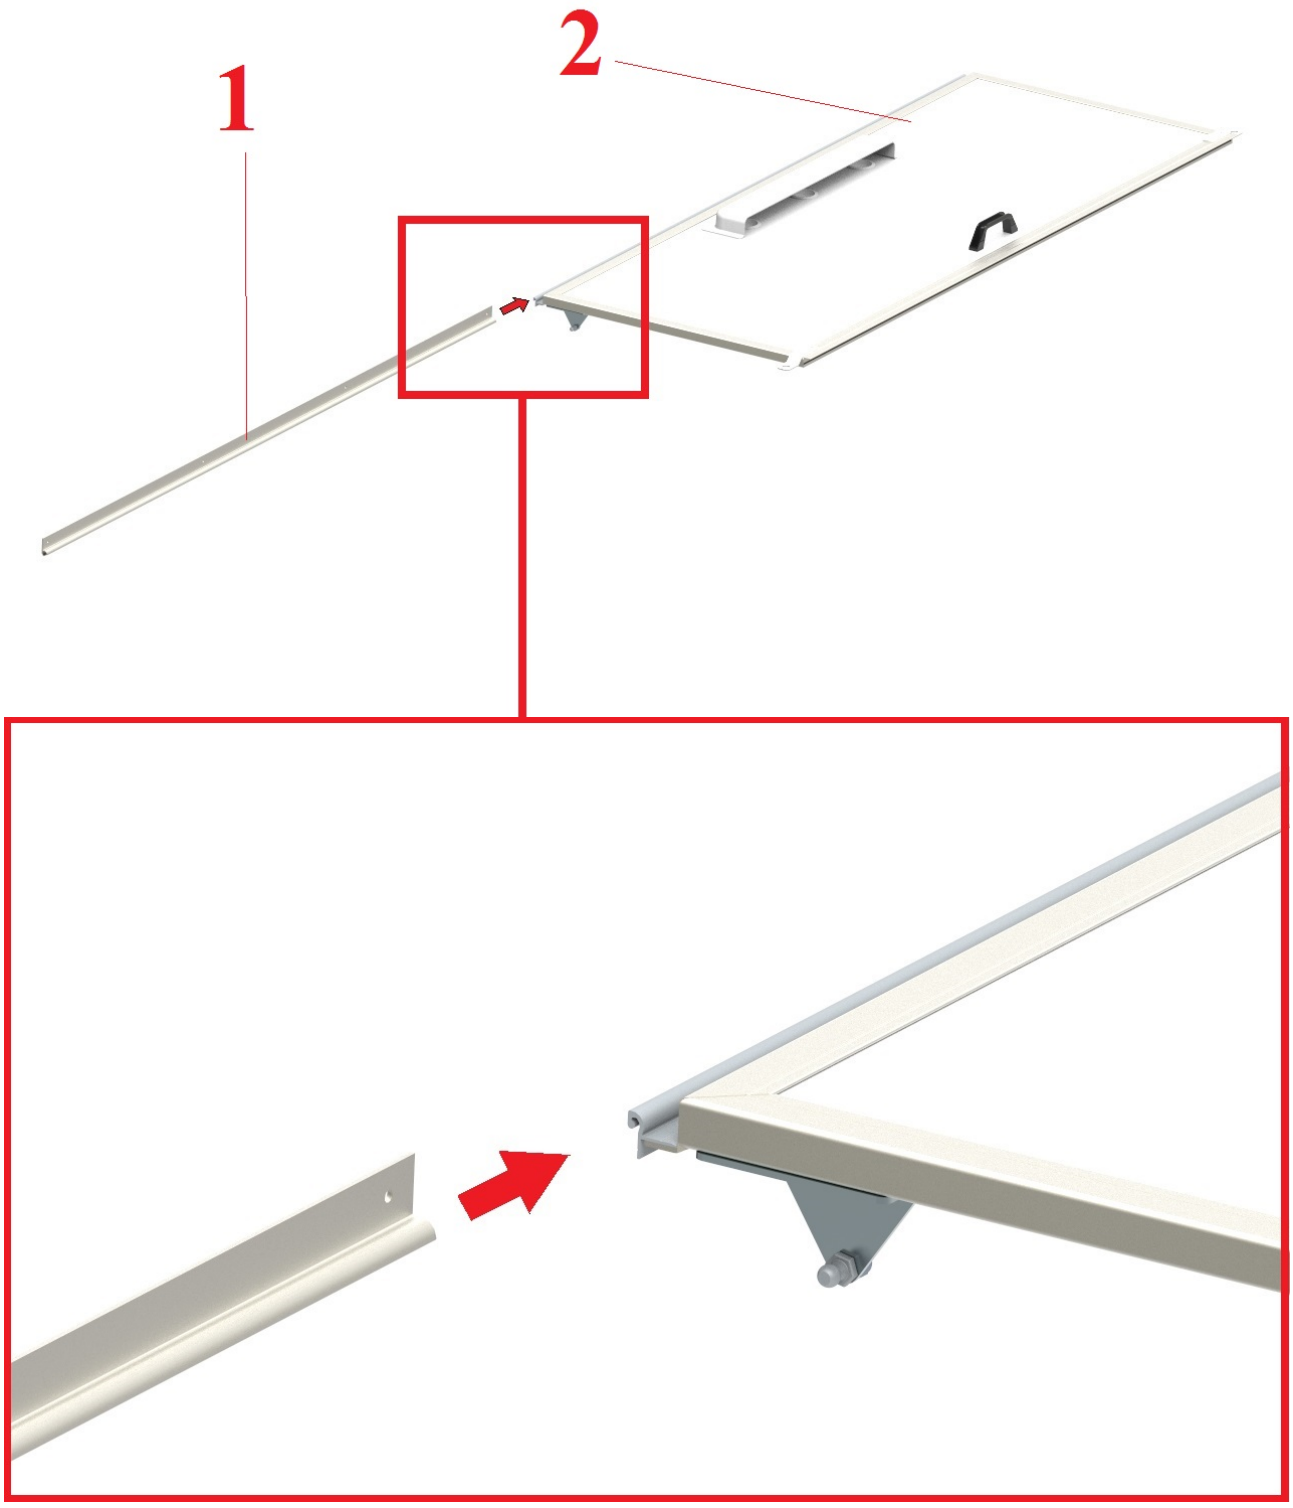


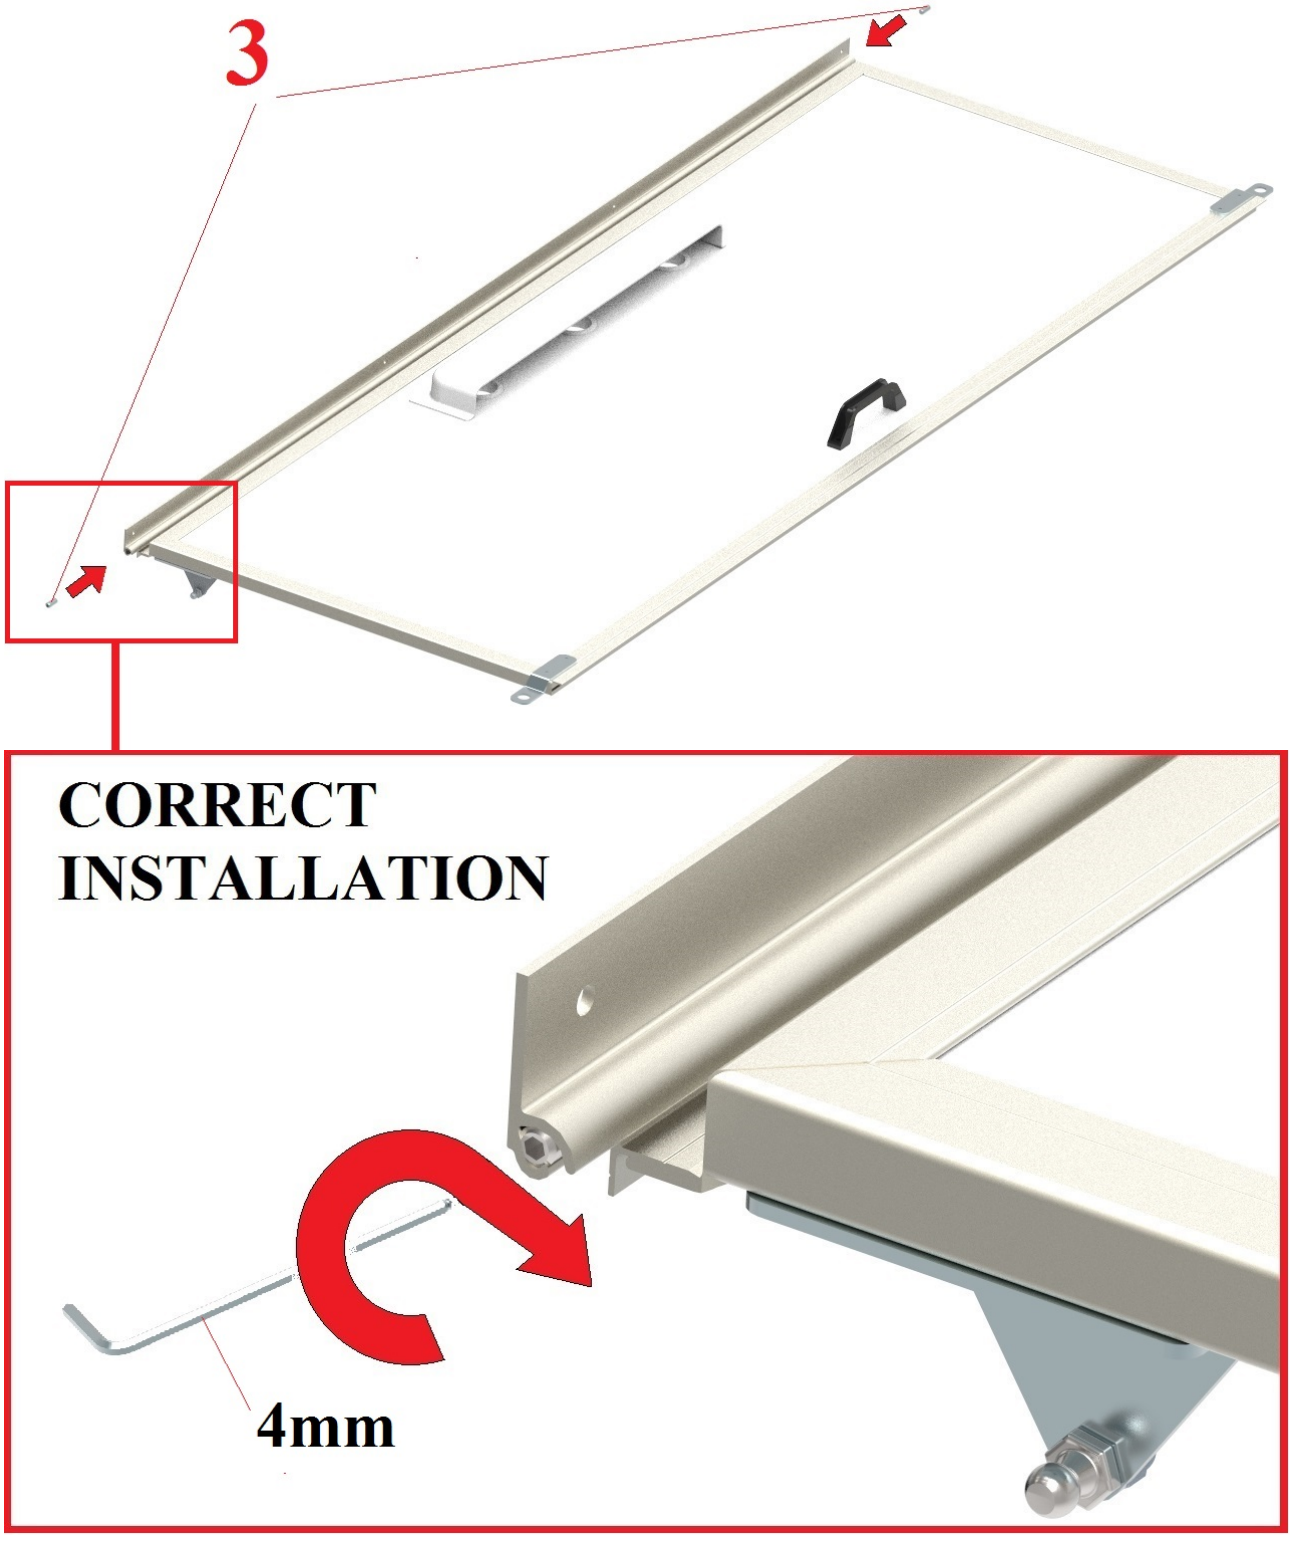



PLEASE INSTALL THE FLAP IN CENTER!

NUMBER	PICTURE	PCS
1		1
2		1
3		2

STEP 2

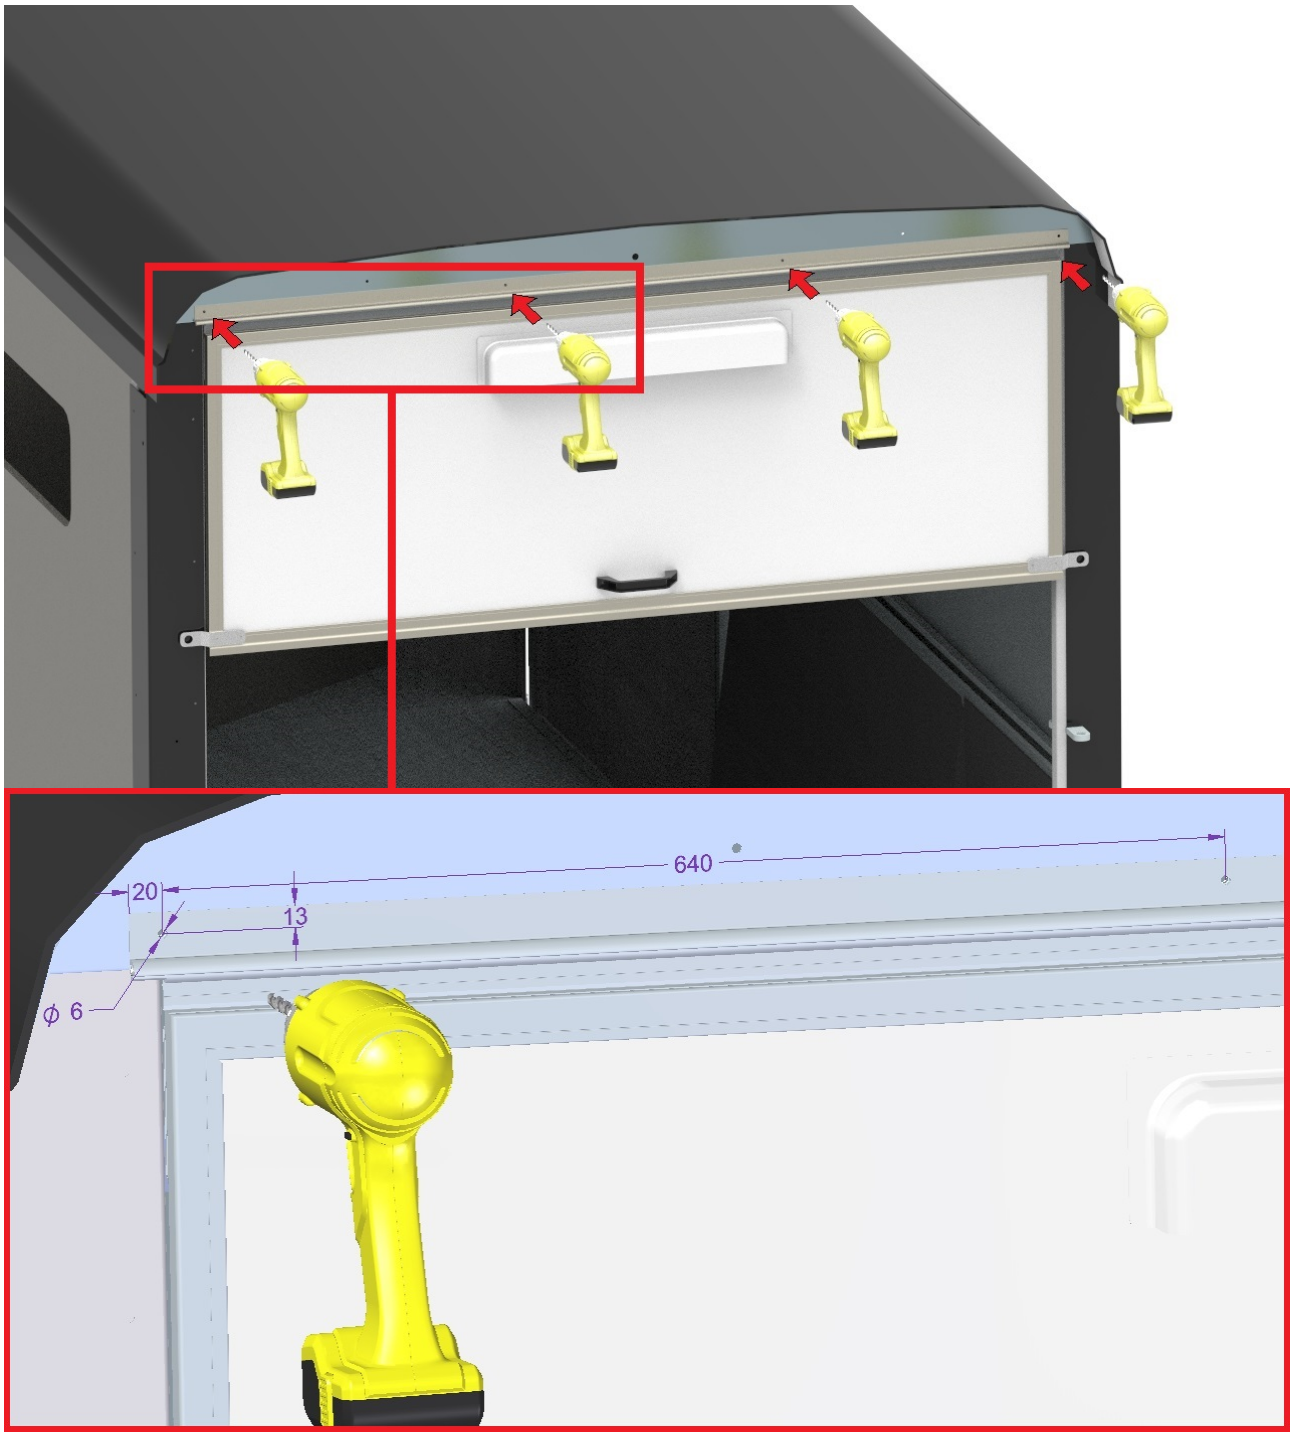

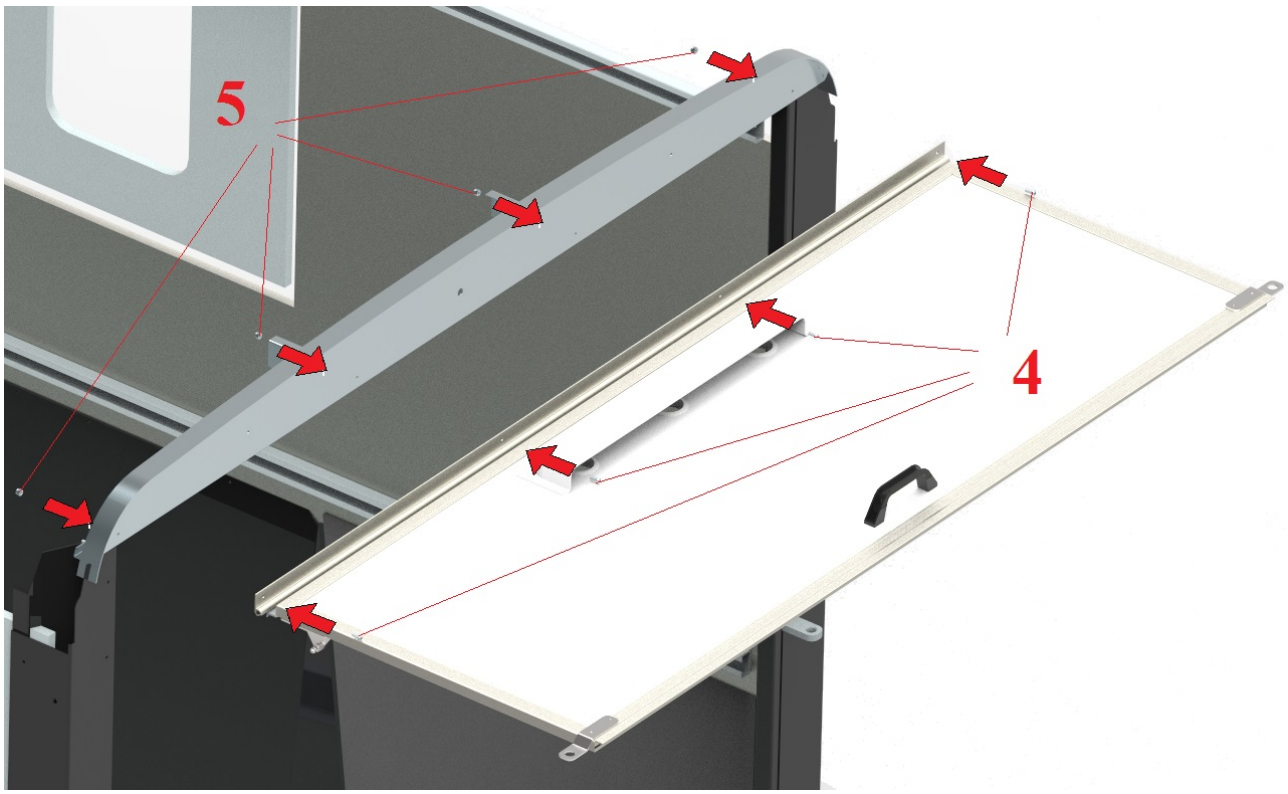

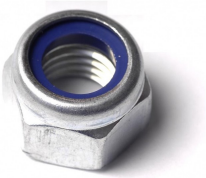
NUMBER	PICTURE	PCS
4		4
5		4

CORRECT INSTALLATION




STEP 3



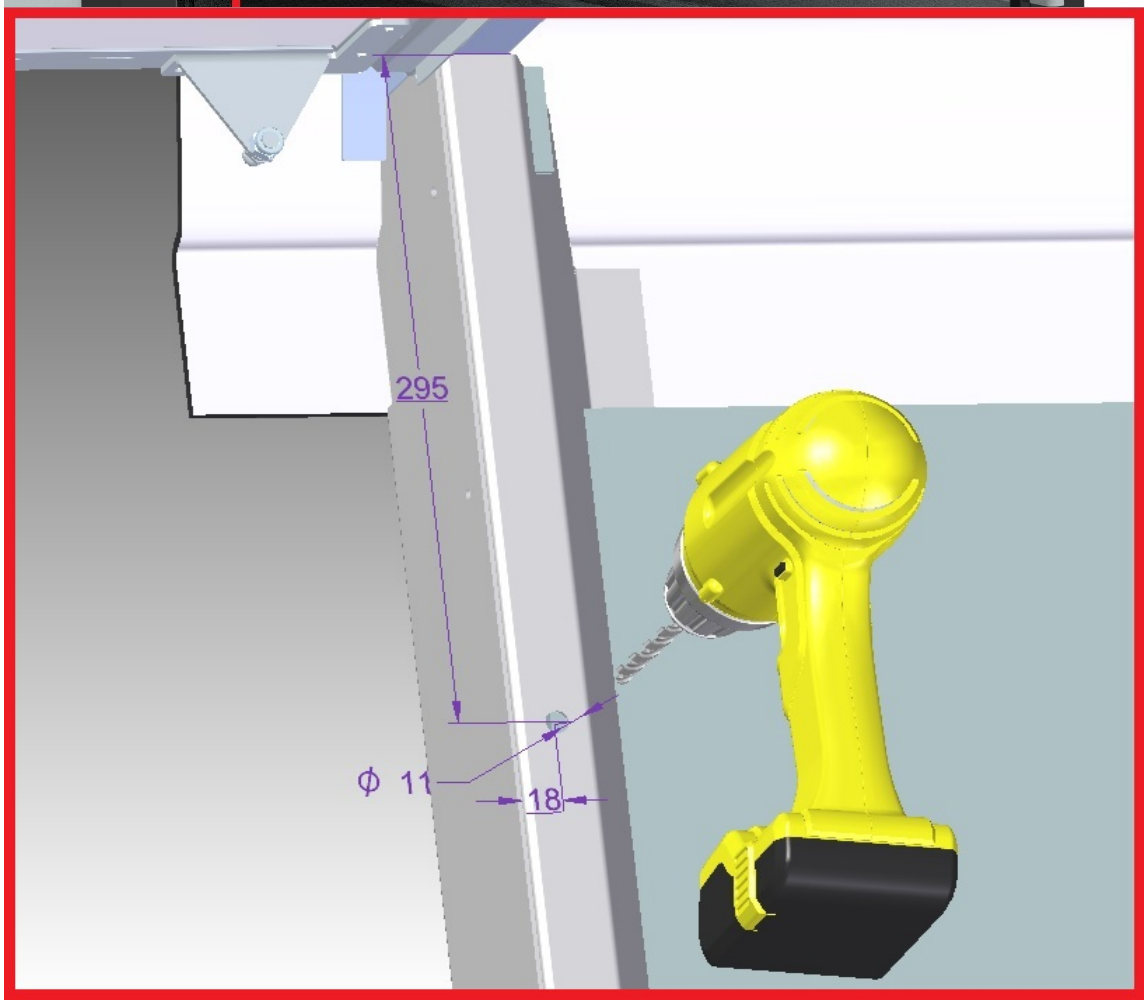


STEP 4

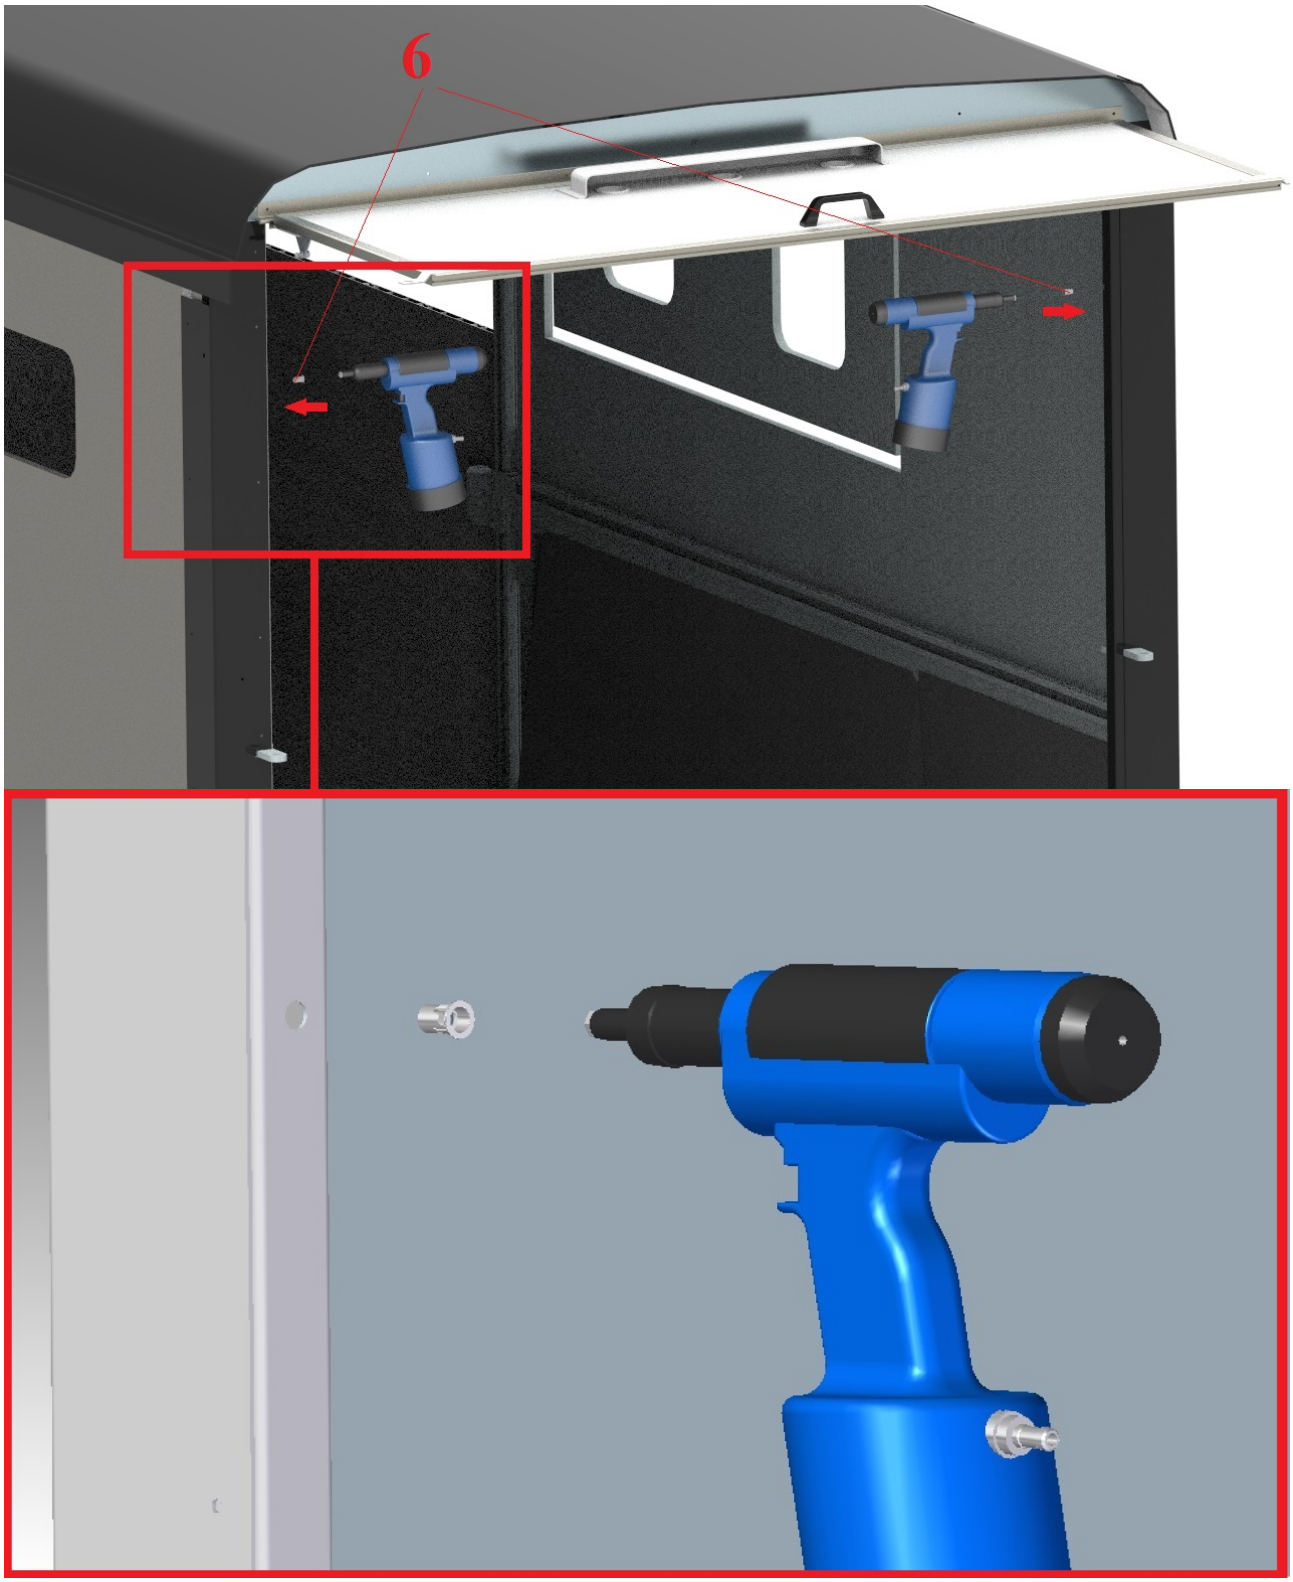



NUMBER	PICTURE	PCS
6		2

CORRECT INSTALLATION

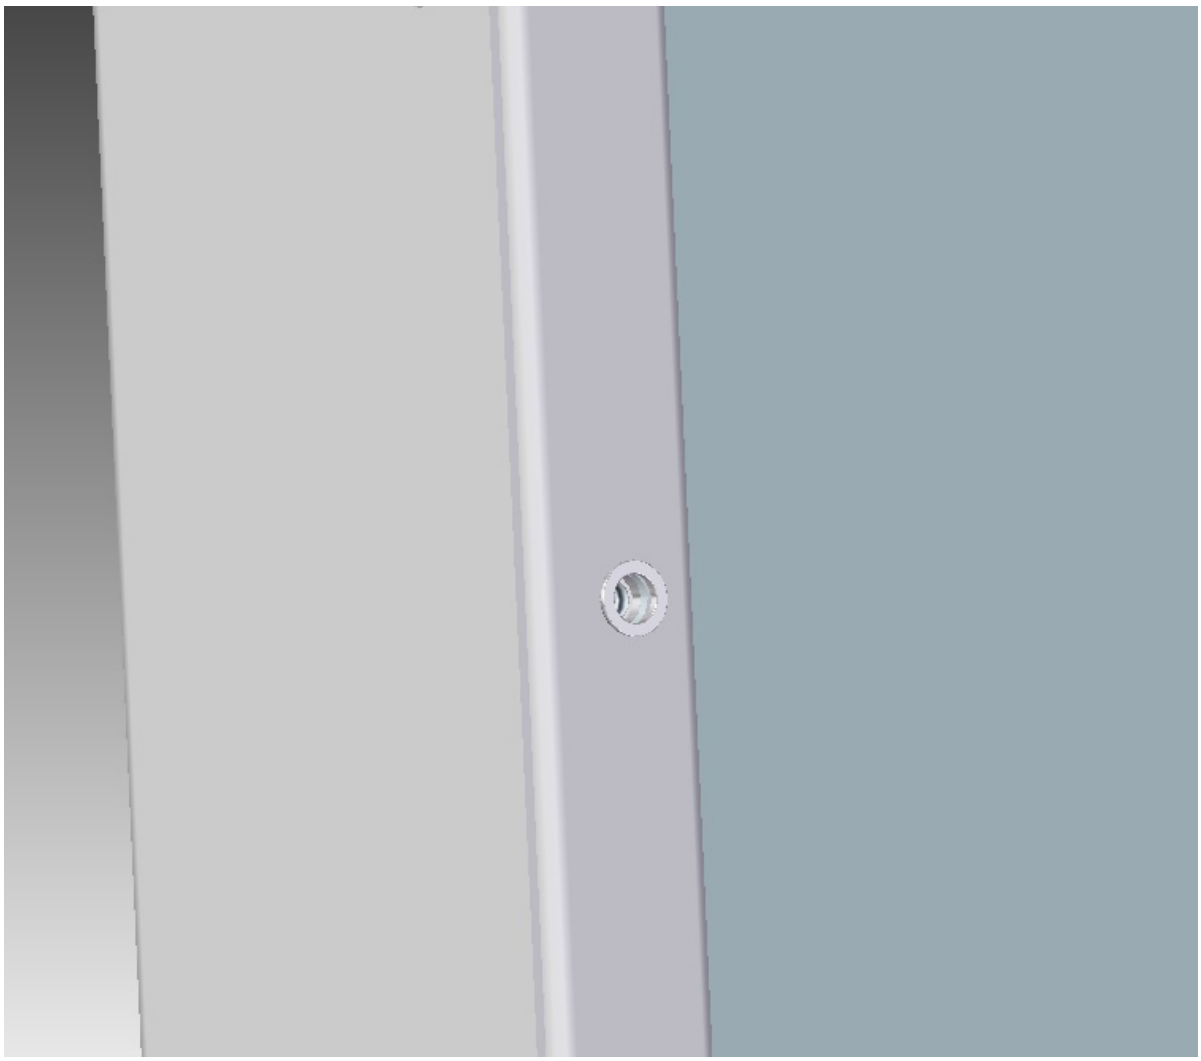

STEP 5

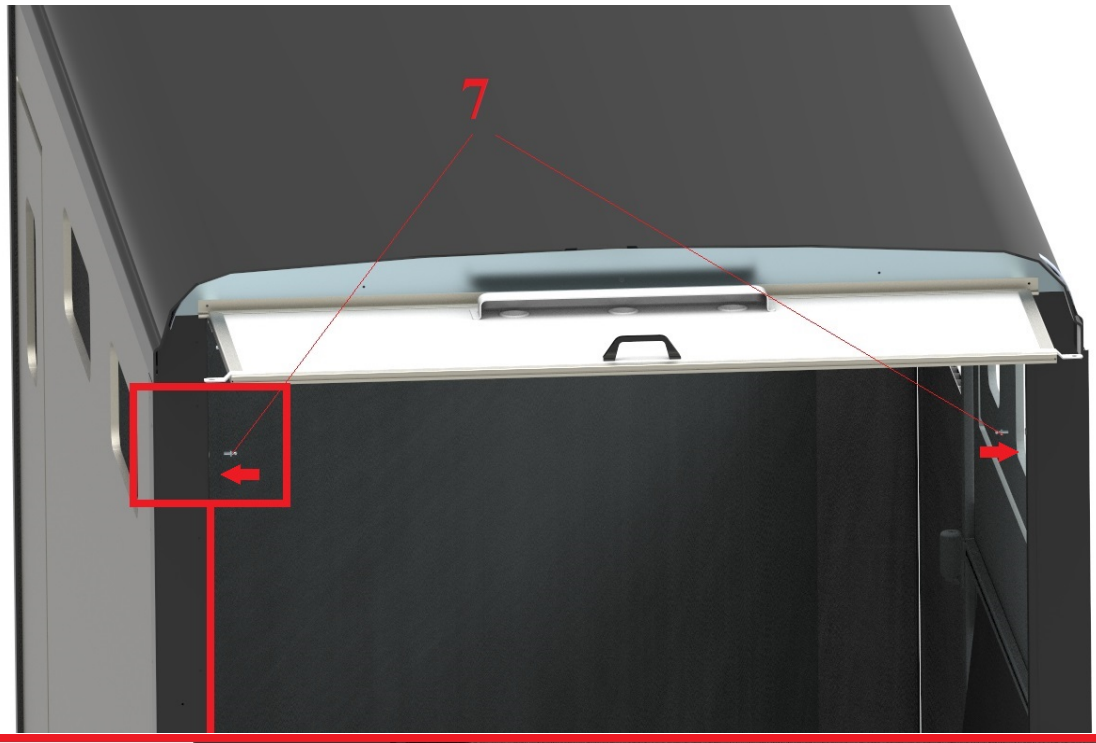

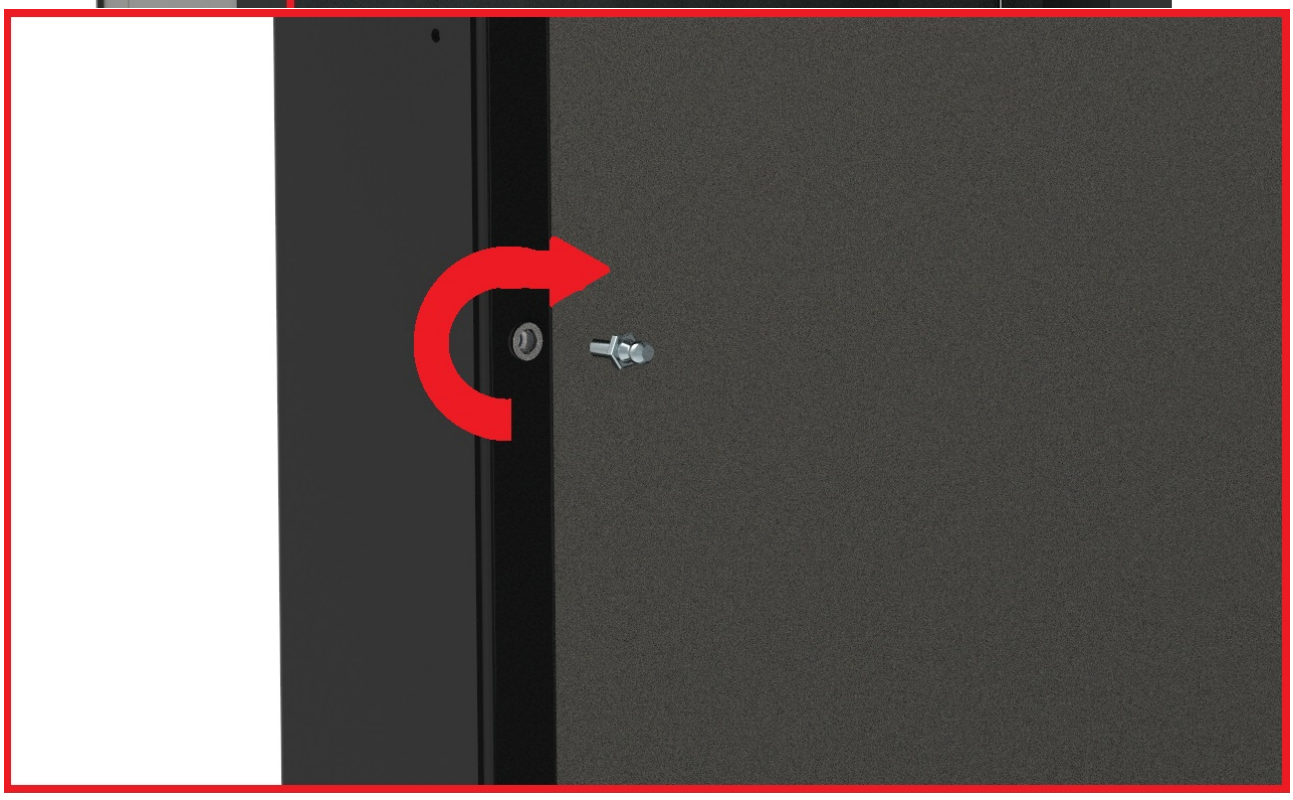


NUMBER	PICTURE	PCS
7		2

CORRECT INSTALLATION




STEP 6

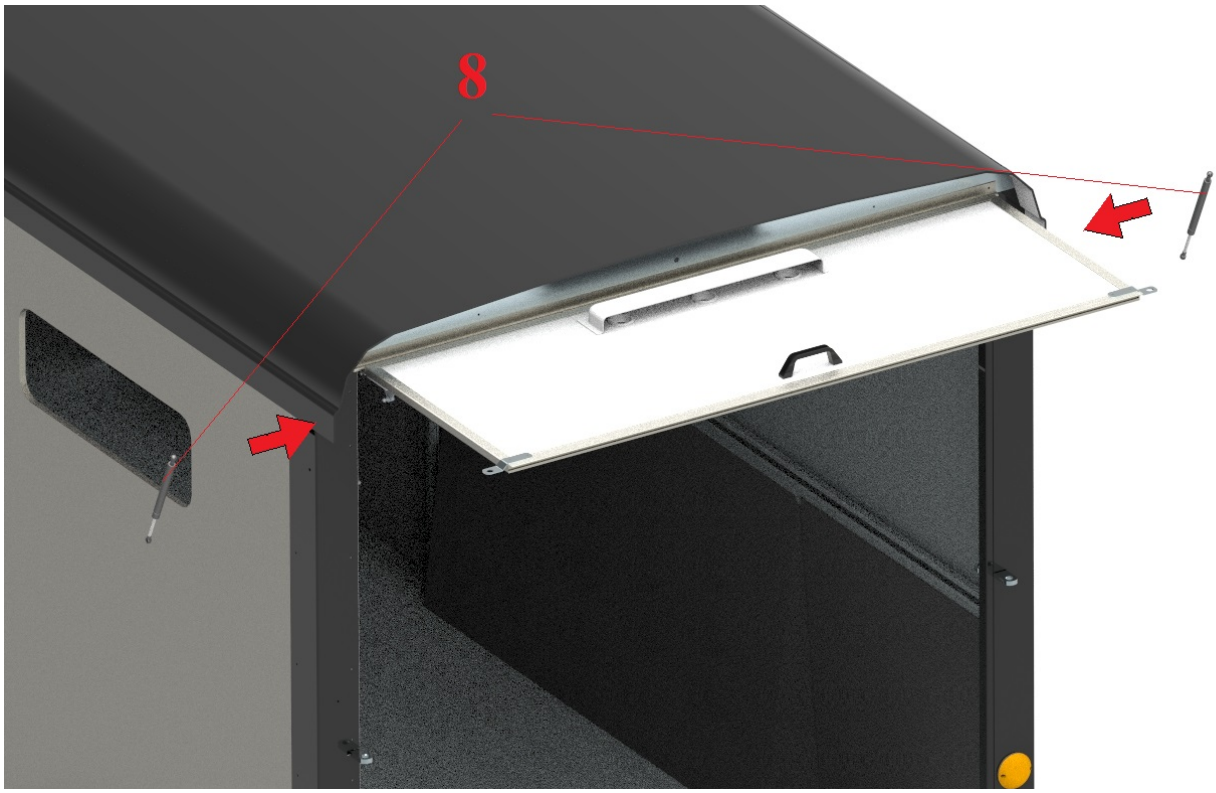


NUMBER	PICTURE	PCS
8		2

CORRECT INSTALLATION

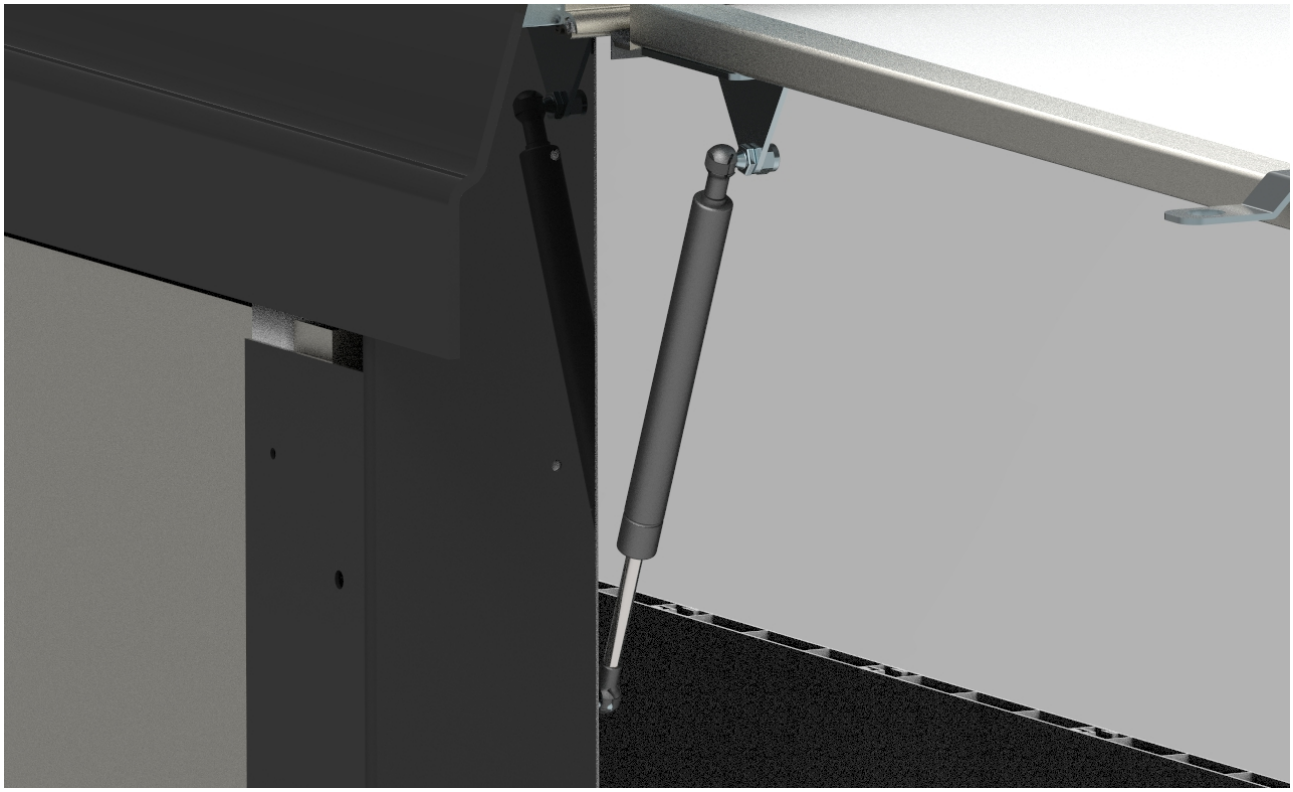


STEP 7

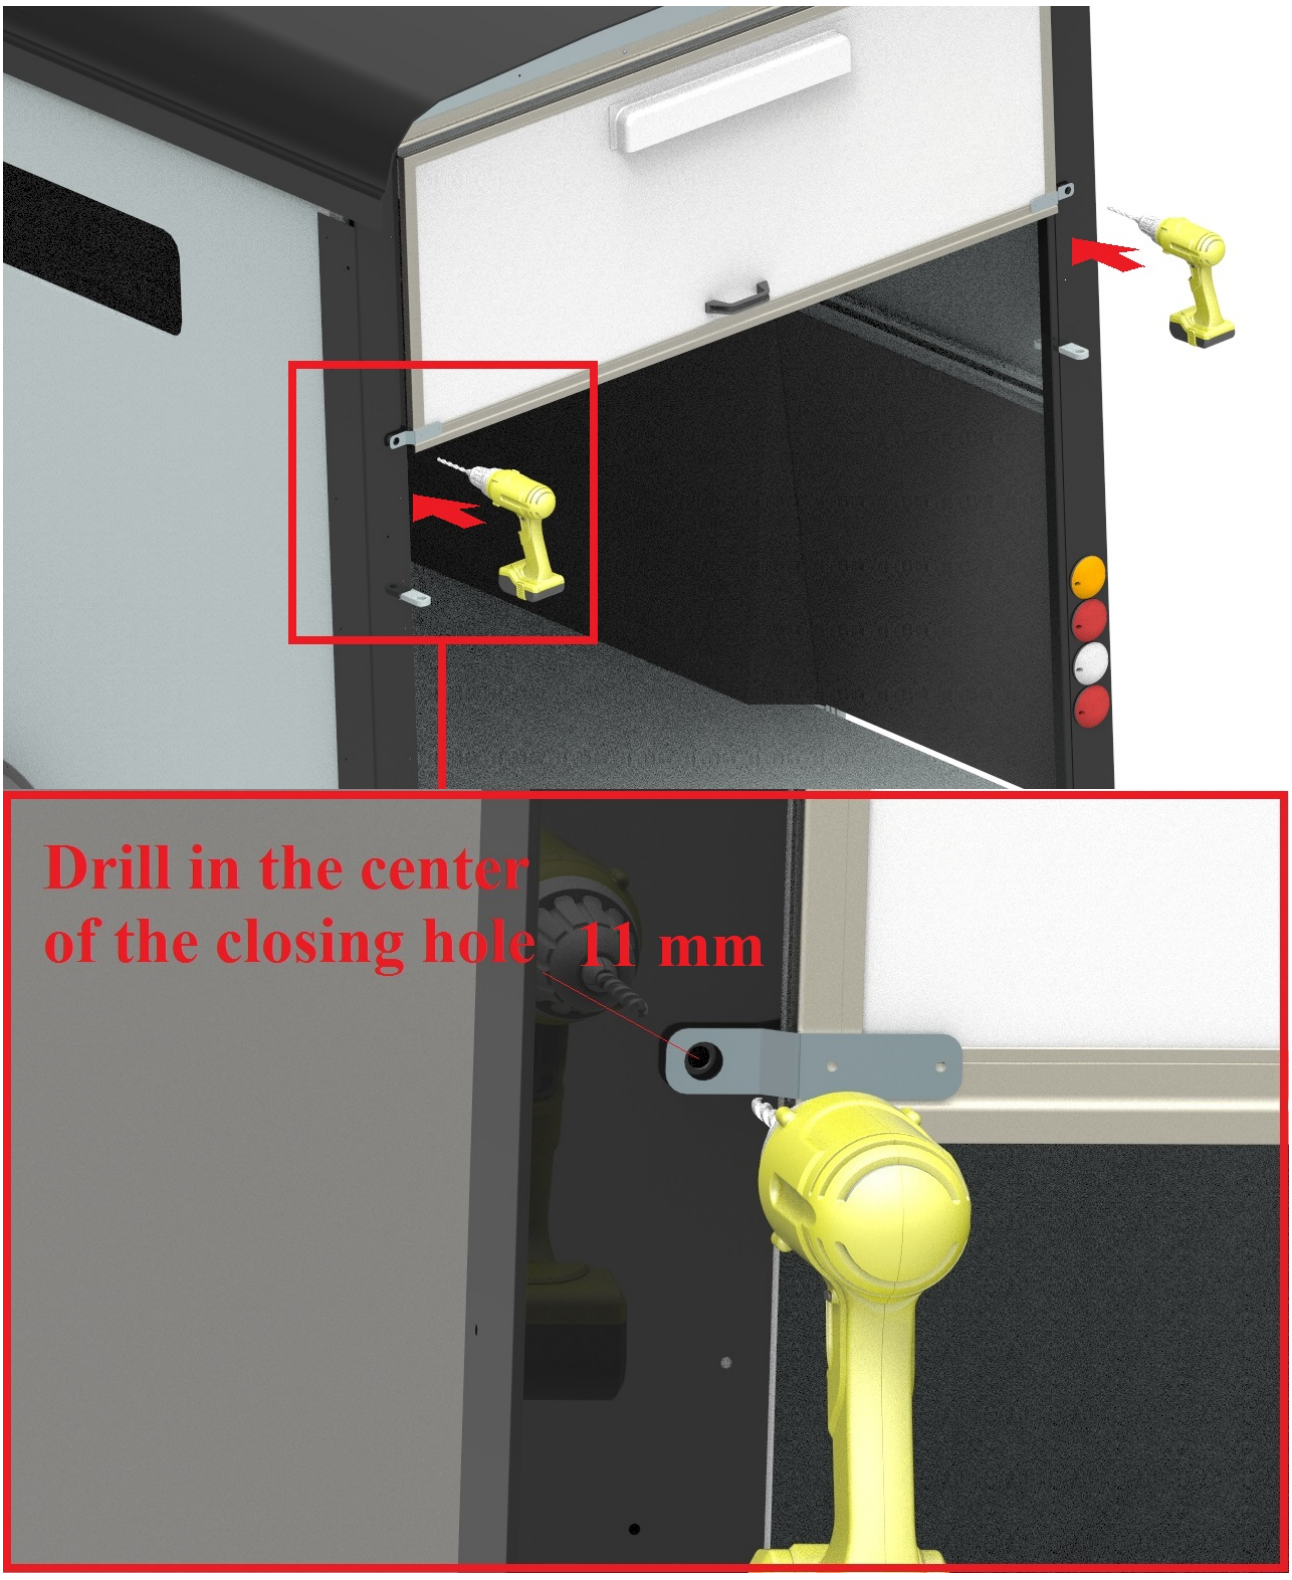



Drill in the center
of the closing hole 11 mm

STEP 8

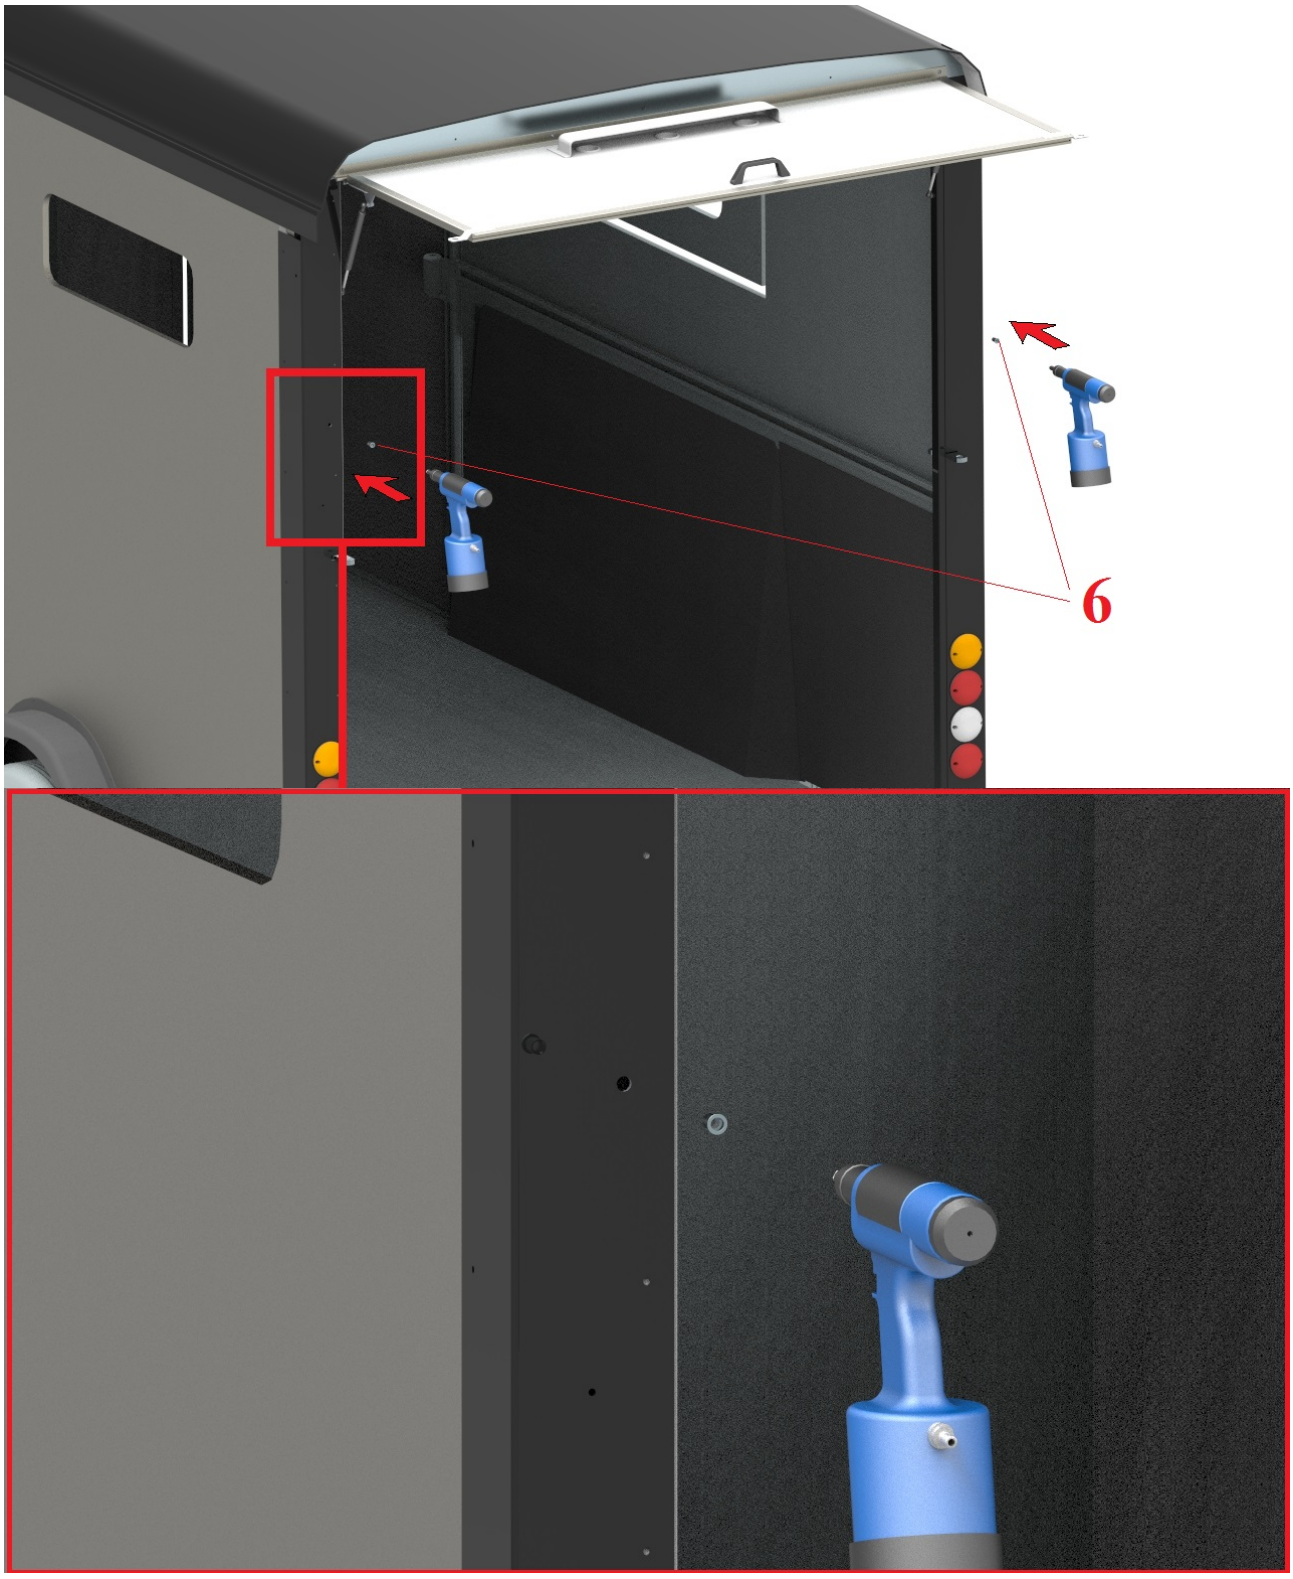


NUMBER	PICTURE	PCS
6		2

CORRECT INSTALLATION

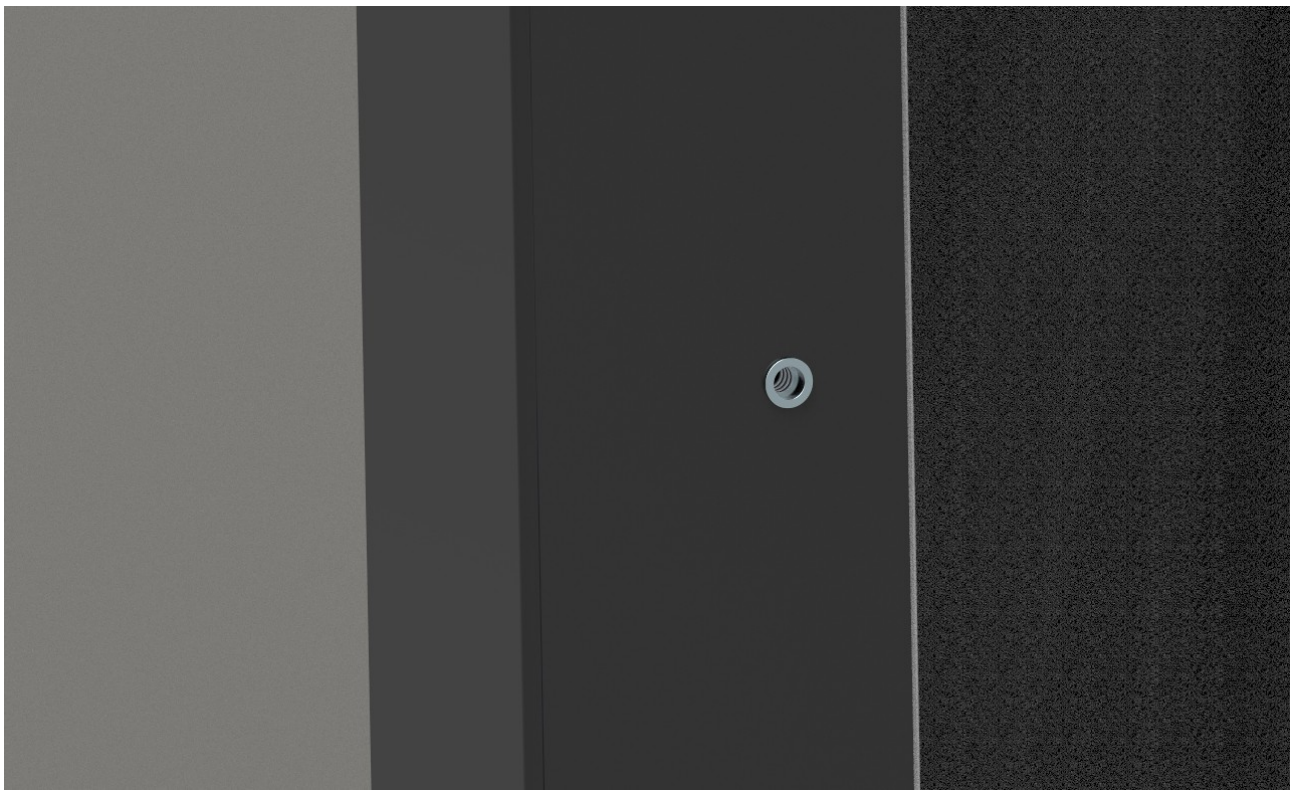

STEP 9

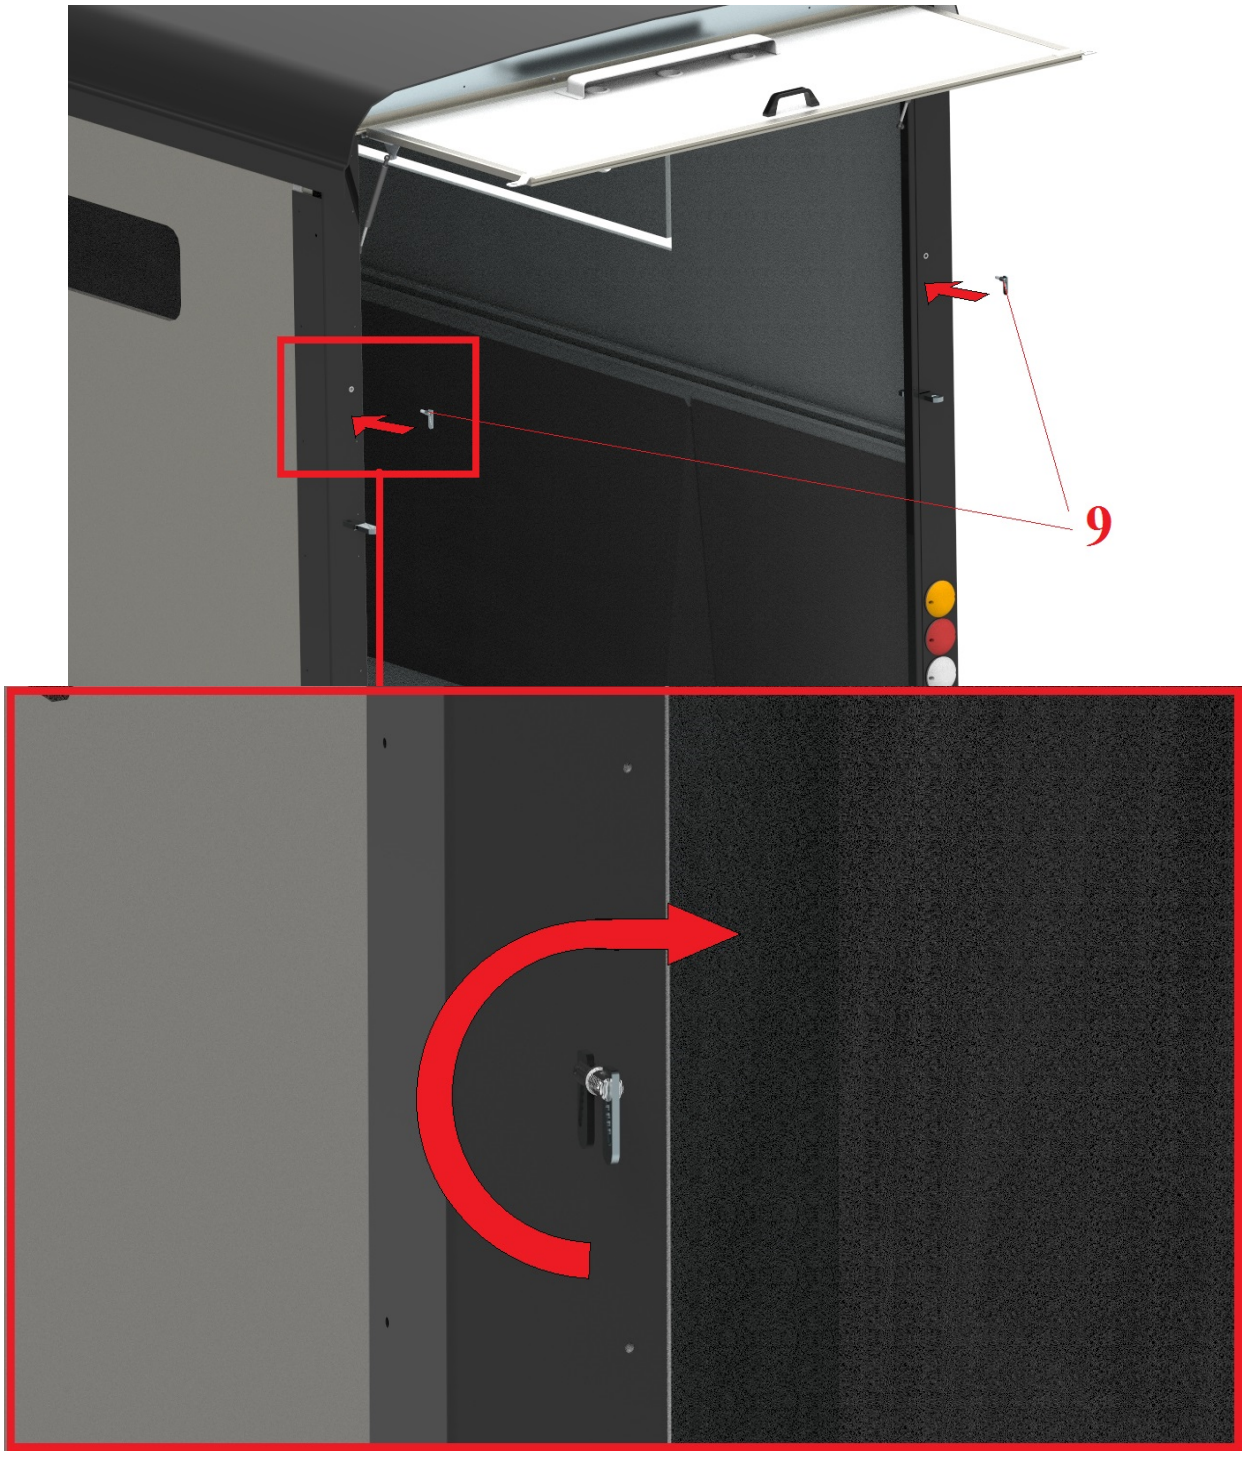

NUMBER	PICTURE	PCS
9		2

CORRECT INSTALLATION



To installation you need:

- Wrench 4mm



- Wrench 10mm, 13mm



- Driller



- Drill 6mm, 11mm



- Riveter to river nuts

