

FRONT RAMP ASSEMBLY INSTRUCTION – OPTIMAX / MINIMAX






FRONT RAMP ASSEMBLY

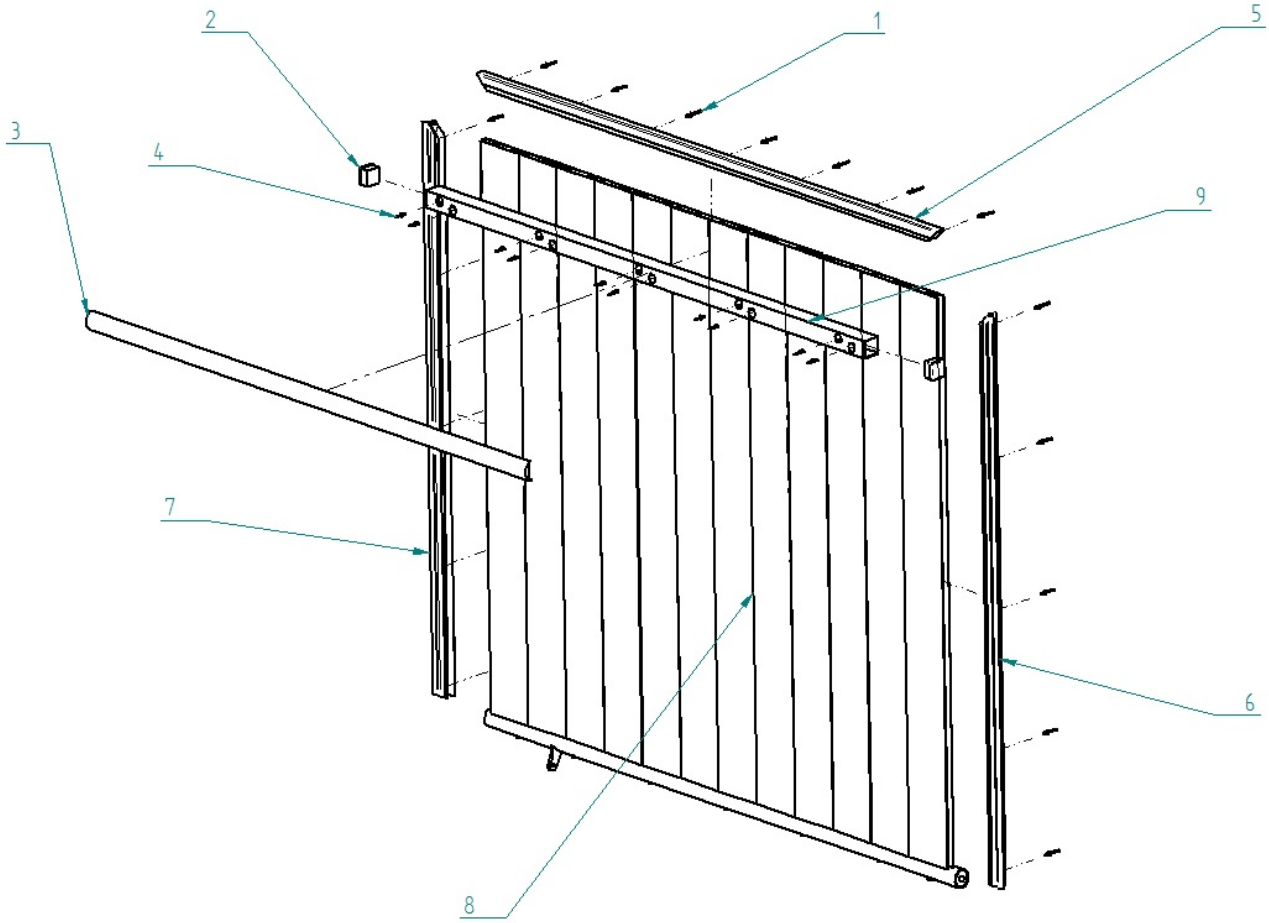

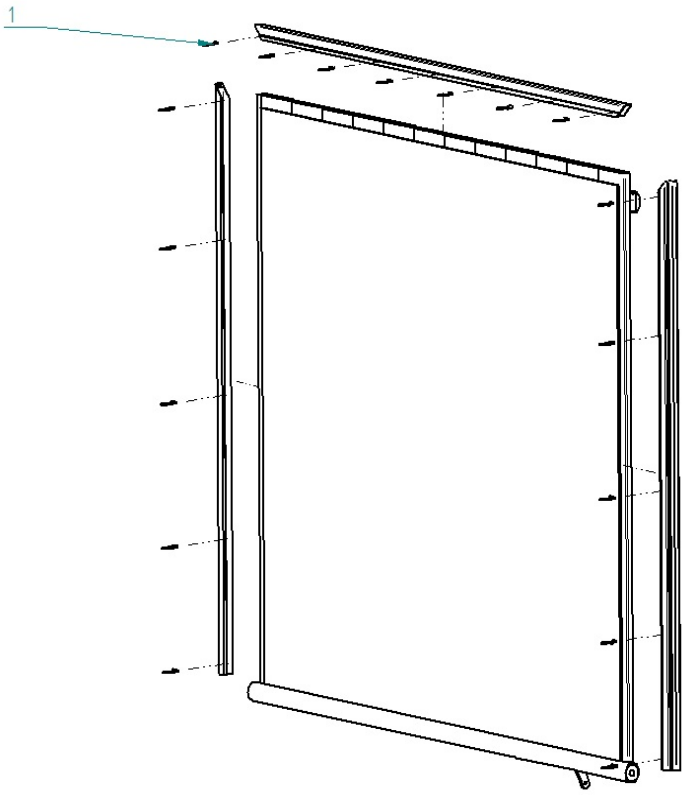


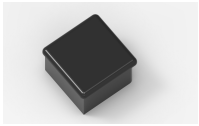NUMBER	PICTURE	PCS
1	 Ø4,8 x 16mm	19
2		2
3	 RUBBER PROFILE	1
4	 Ø4,8 x 16mm	10
5		1
6		1
7		1
8		1
9		1


- Between elements 3 and 9 schould be use attached to the set glue.
- The element 1 schould be riveted on 7 rivets.
- The elements 6 and 7 schould be riveted on 6 rivets.
- After placing the all elements, apply the glue to the inner edges of the elements 6 and 7.
- The all holes do their own way.


CORRECT INSTALLATION




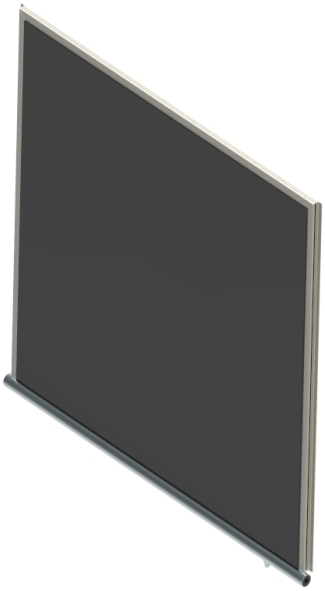


INSTALLATION FRONT RAMP IN TRAILER

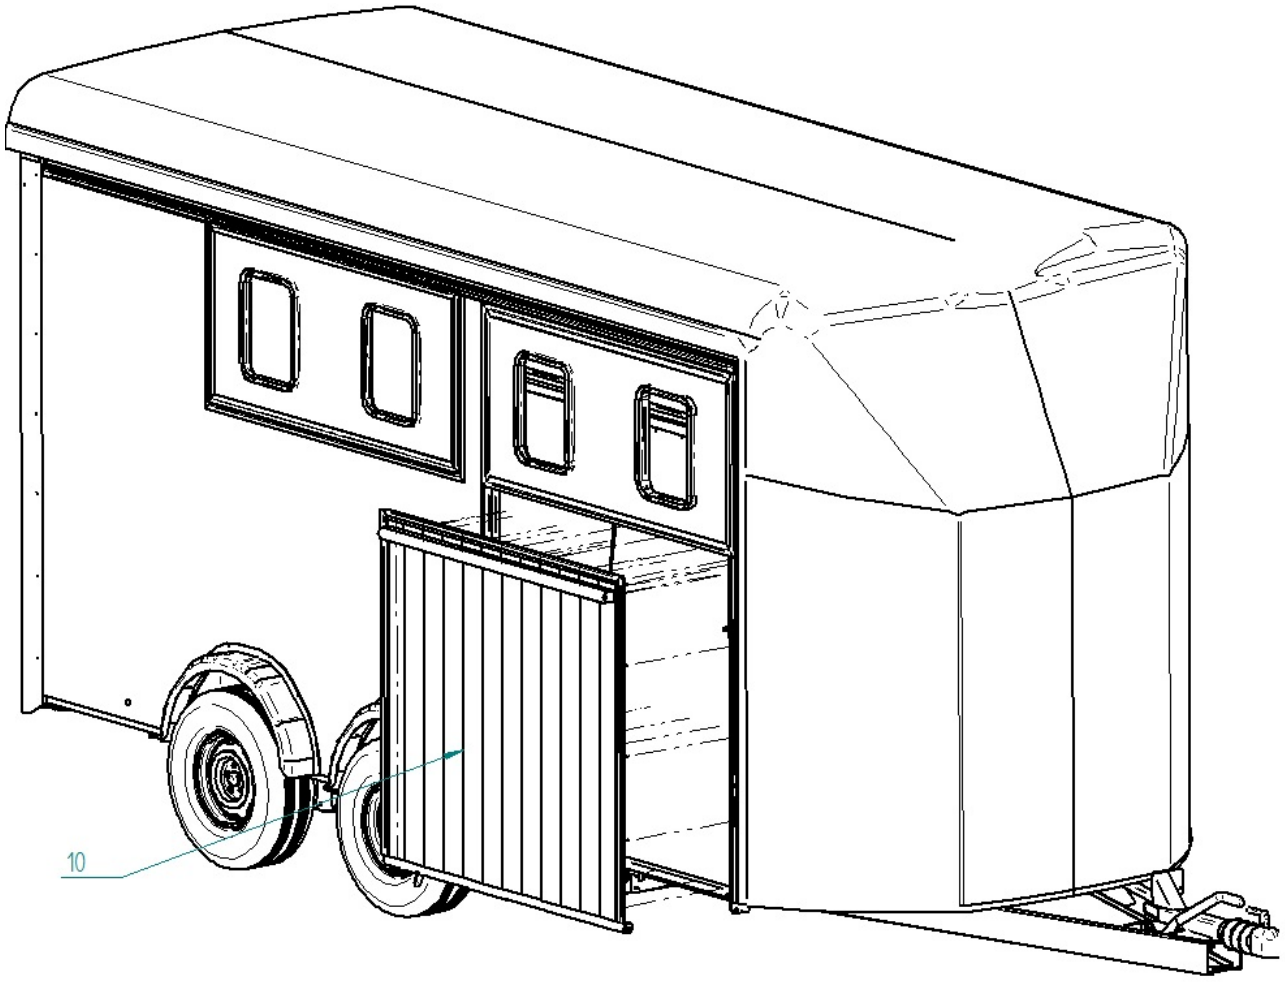

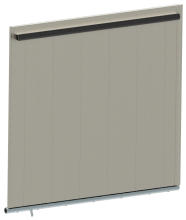
NUMBER	PICTURE	PCS
10		1

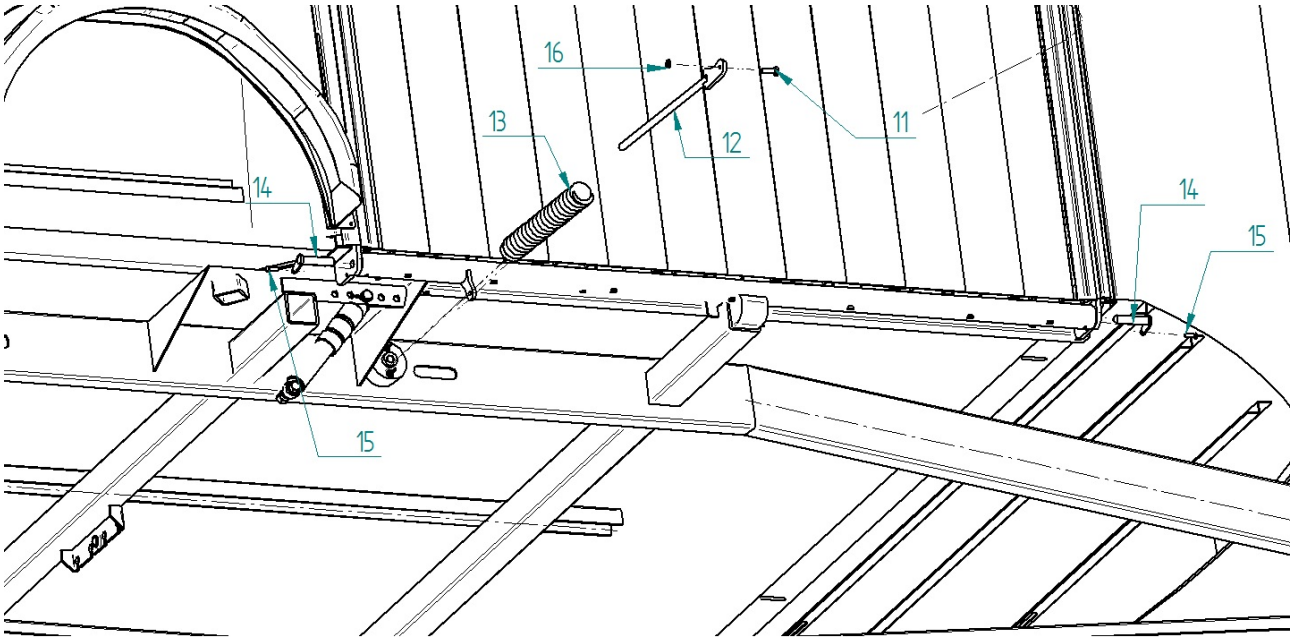

16
13
12
11
14
14
15
15

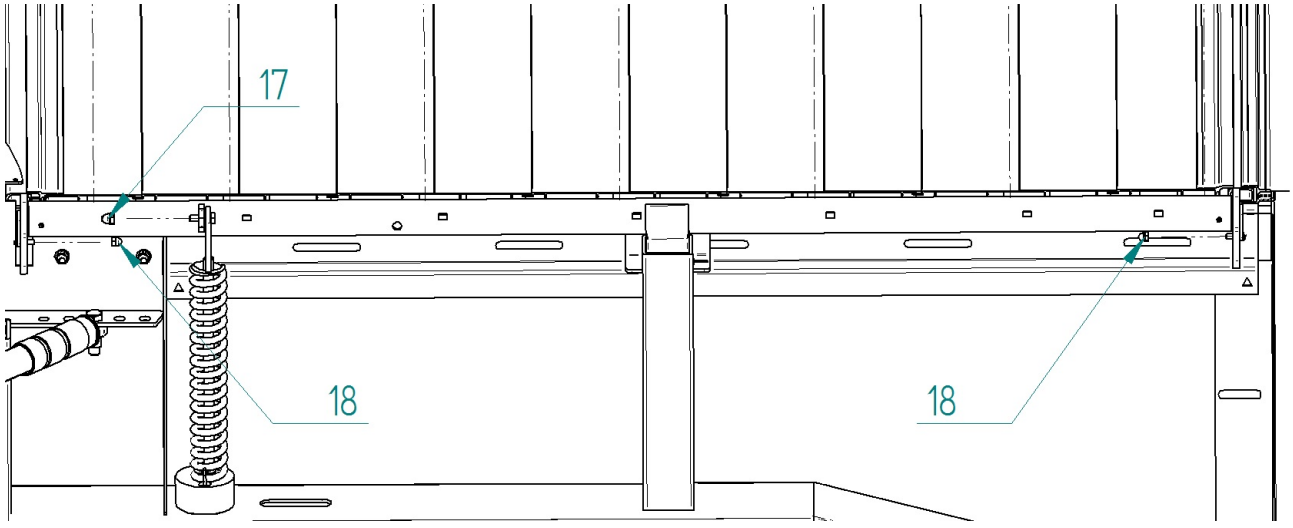

17
18
18

NUMBER	PICTURE	PCS
11	 M8 x 20mm	1
12		1
13		1
14		2
15	 M6 x 20 mm	2
16	 Ø 8 mm	1
17	 M8	1
18	 M6	2

CORRECT INSTALLATION

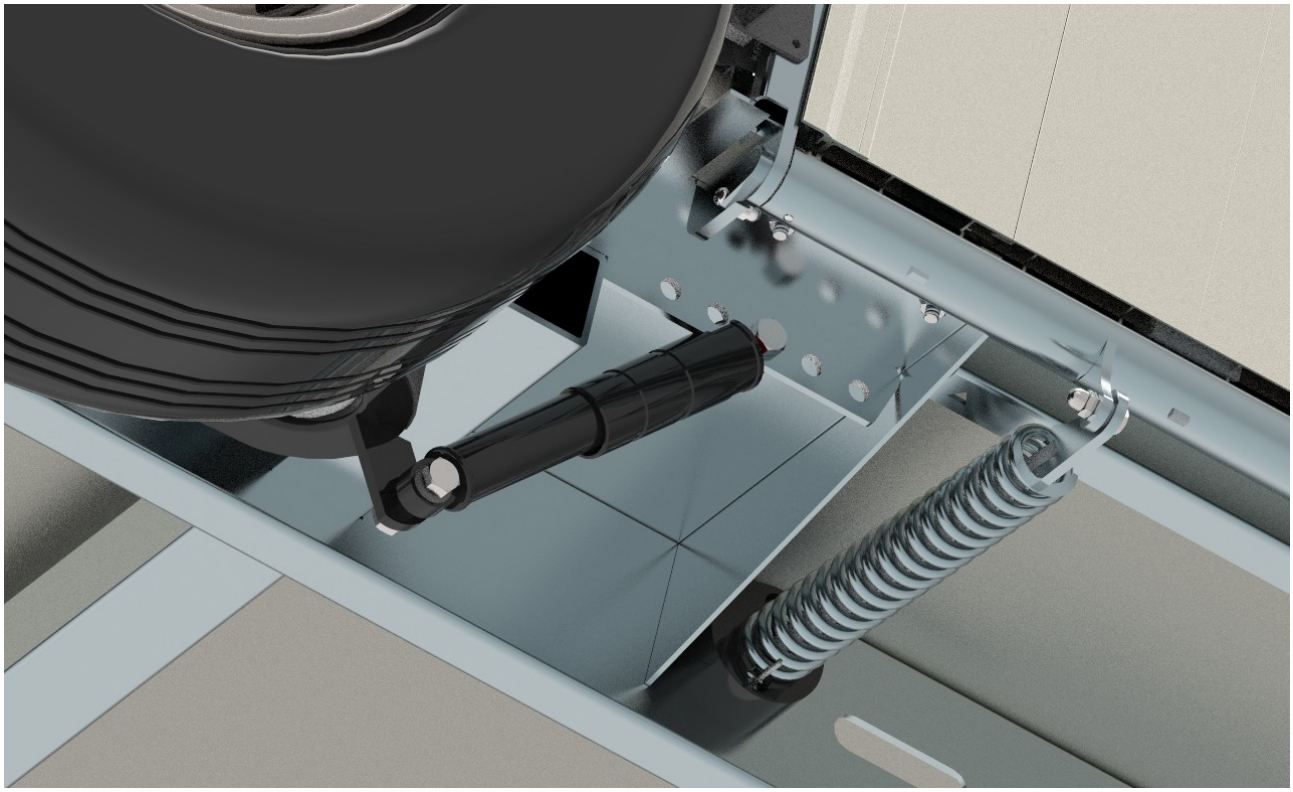

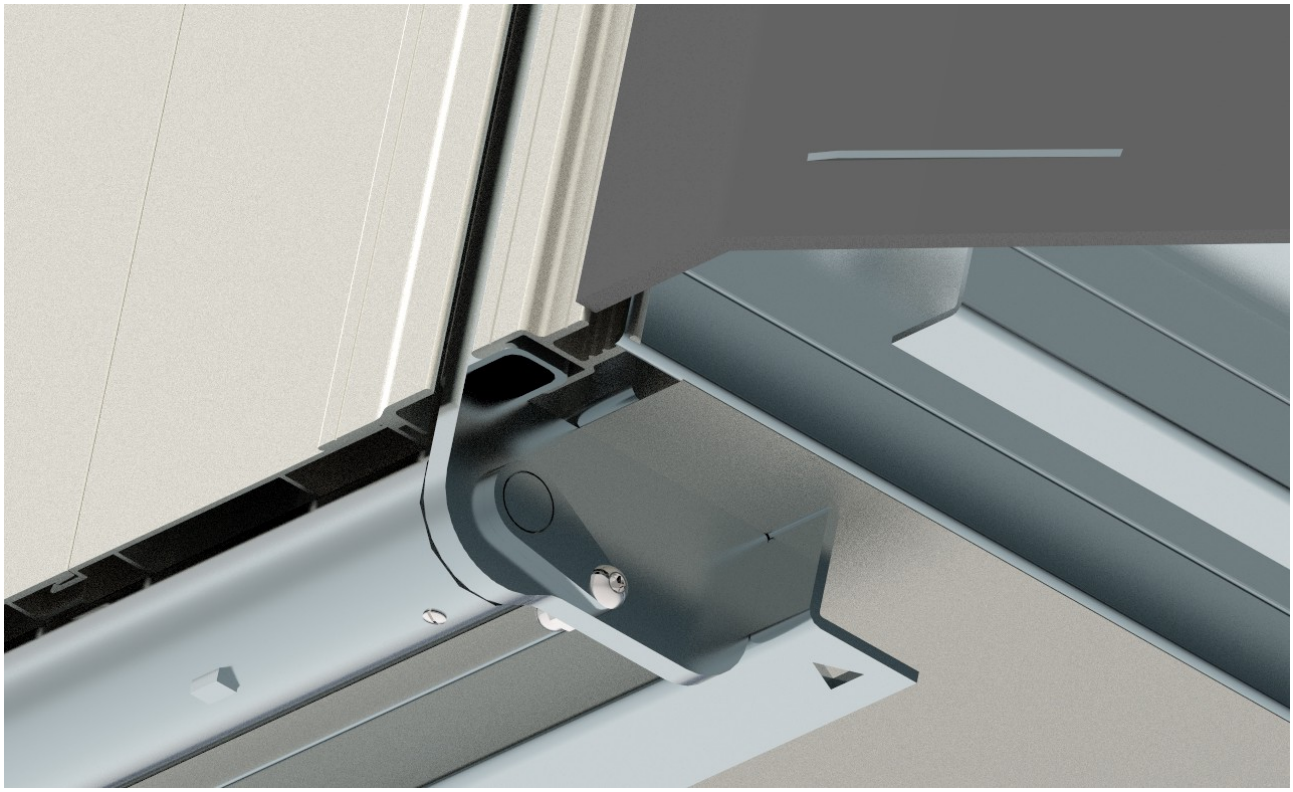

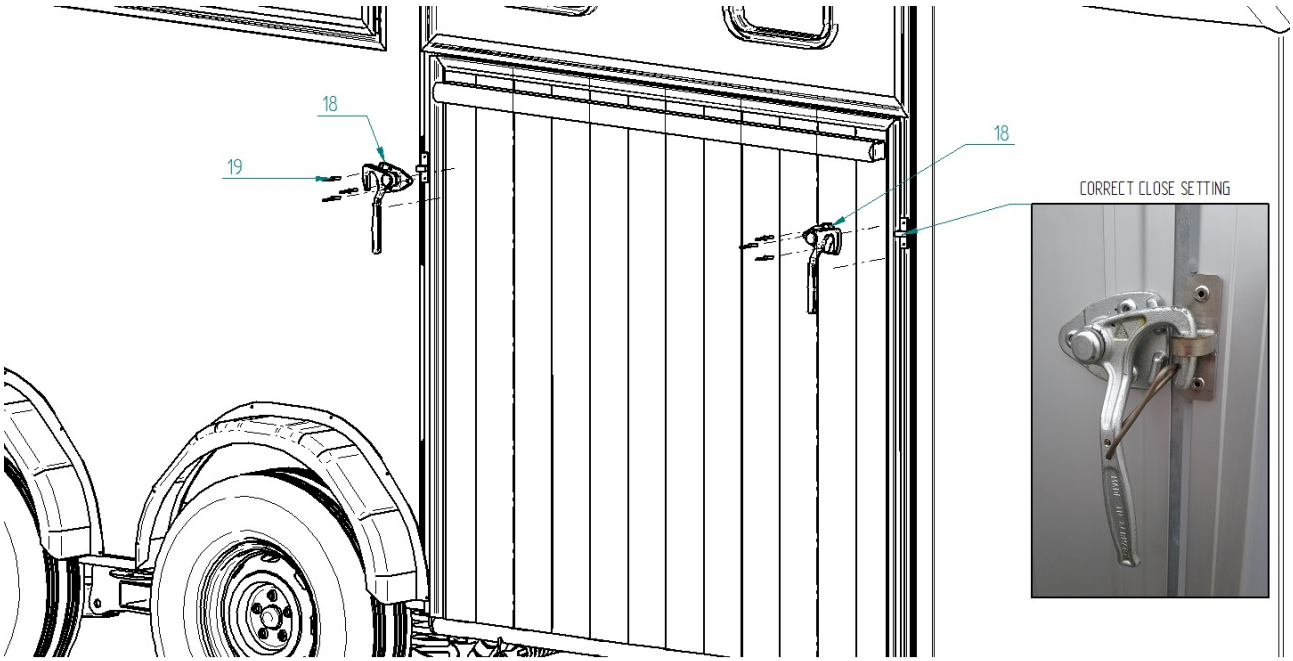

- The all holes do their own way.
- The picture shows correct close setting.

NUMBER	PICTURE	PCS
18		2
19	 Ø6 x 20mm	6

CORRECT INSTALLATION



LIST OF TOOLS NECESSARY FOR ASSEMBLY:

- WRENCH 13 mm and 10 mm



- WRENCH 5mm



- RIVETER



- DRILLER



- DRILL 5mm



- DRILL 6mm

