
Assembly instructions for the aluminum rail for securing the load in trailers with composite walls

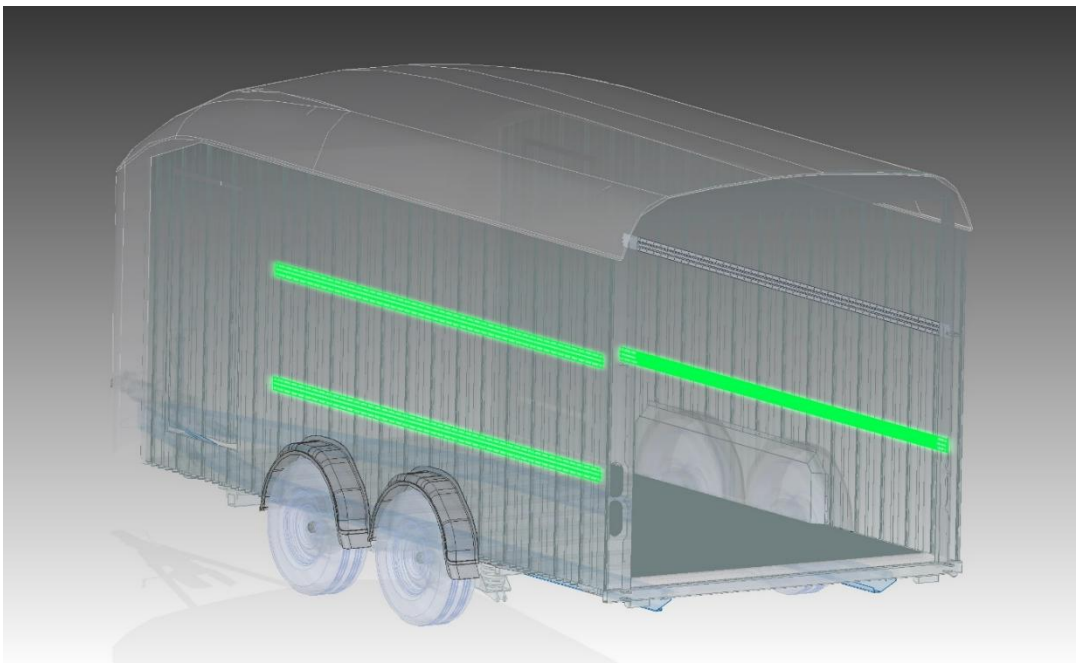

To the installation you need:

① aluminum rail with or without holes



② microfiber cloth



③ Isopropyl Alcohol or ethyl acetate



④ universal glue e.g. Mamut or Auto Weld CX-80



⑤ glue gun



⑥ drill



⑦ 5mm drill bit



⑧ expansion rivet alu/steel 4,8x12



⑨ riveter



STEP 1


USE ①+②+③






STEP 2

USE ④+⑤

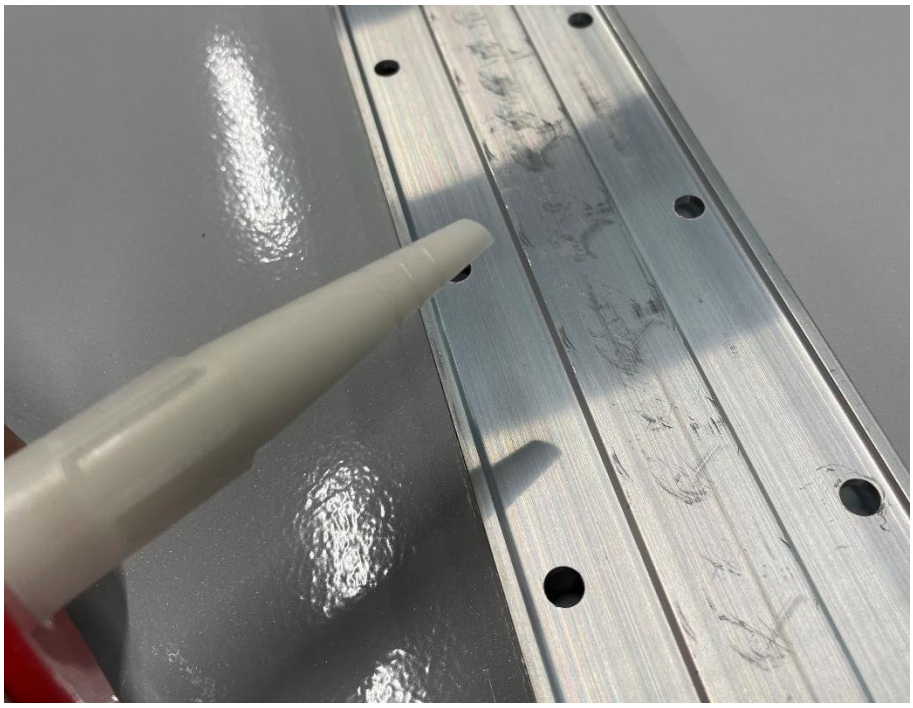


CORRECT

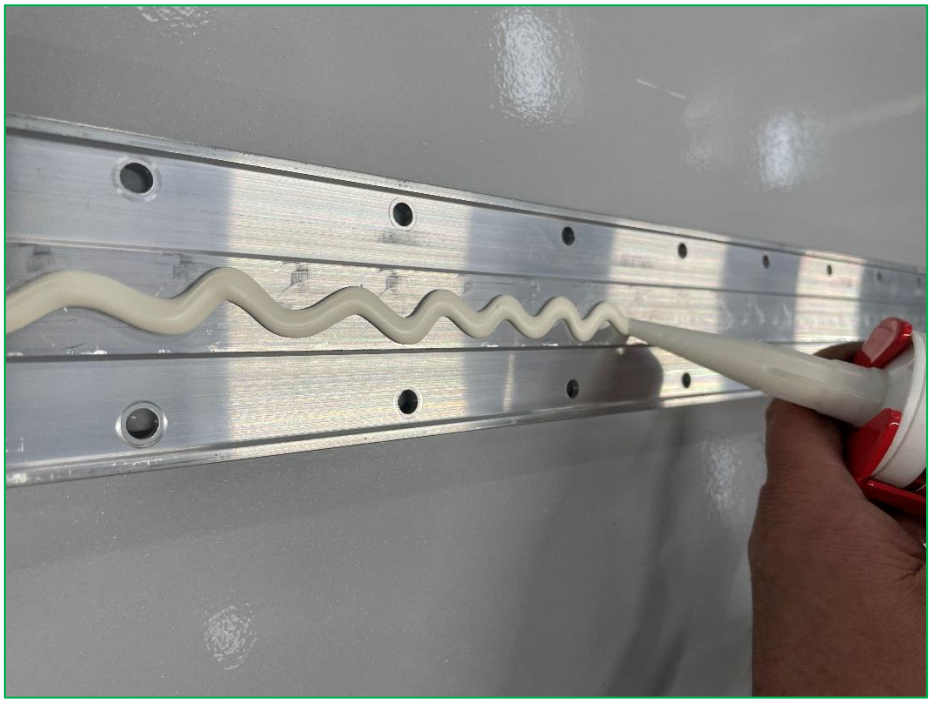




STEP 3 (RAIL WITH HOLES)


USE ⑥+⑦

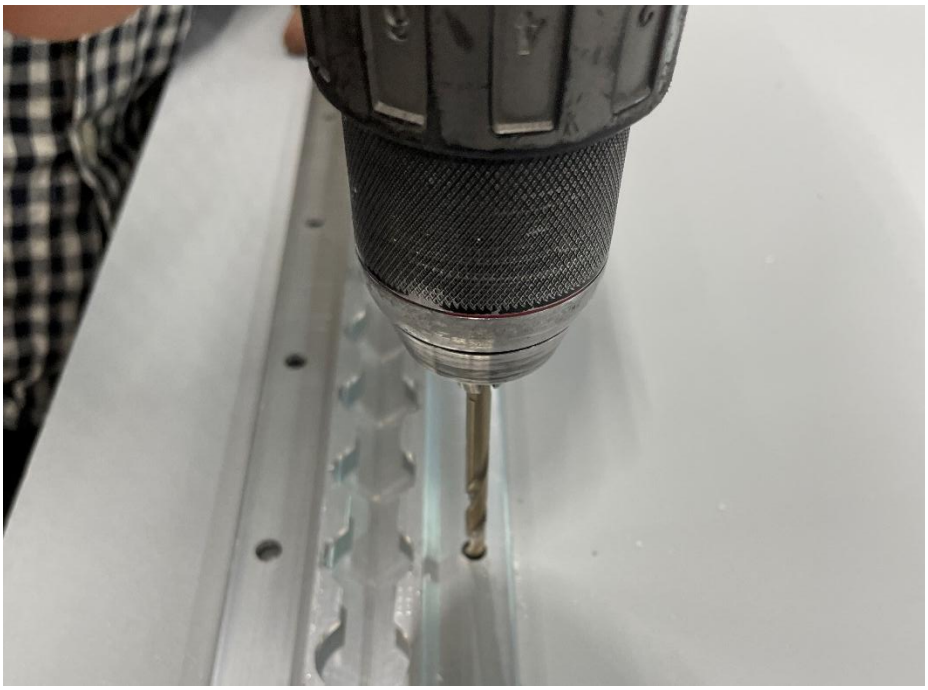

CORRECT

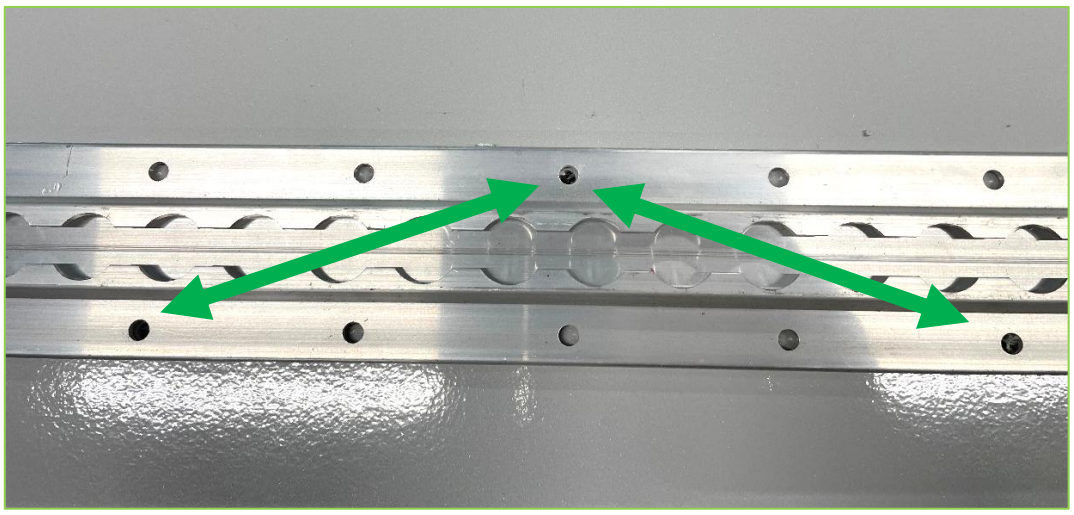


INCORRECT

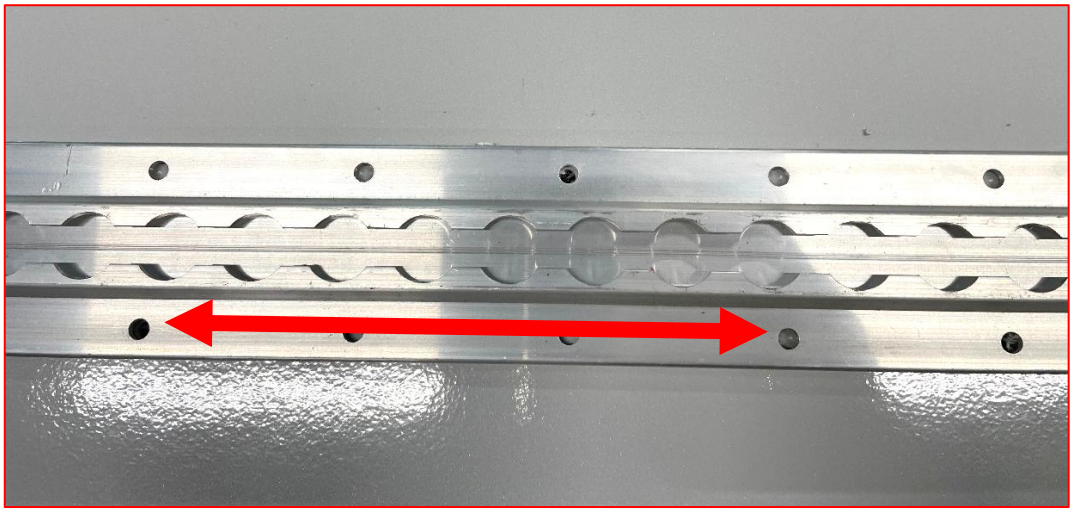


STEP 3 (RAIL WITHOUT HOLES)


USE ⑥+⑦

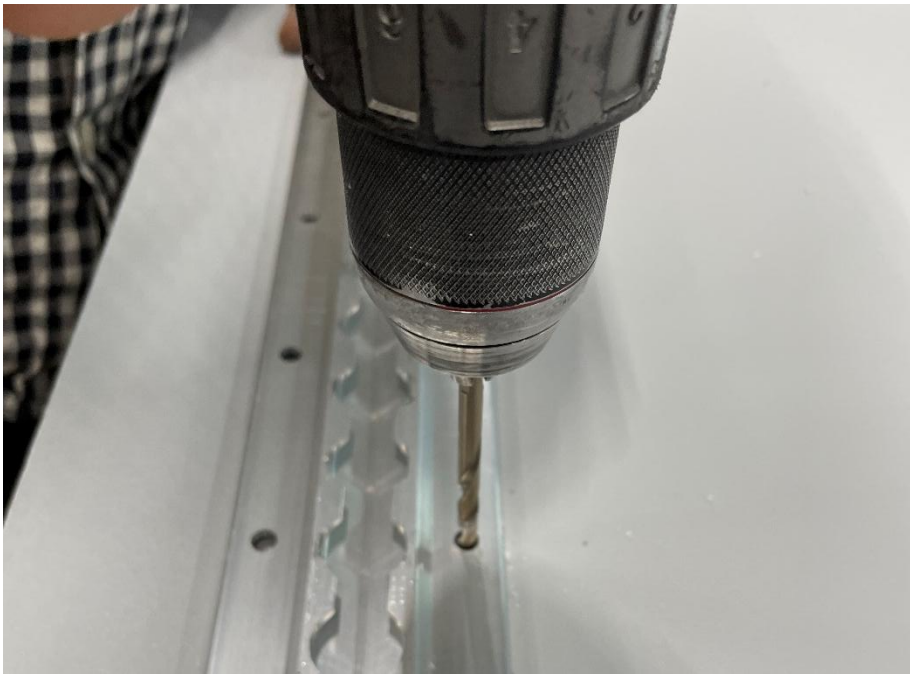

CORRECT

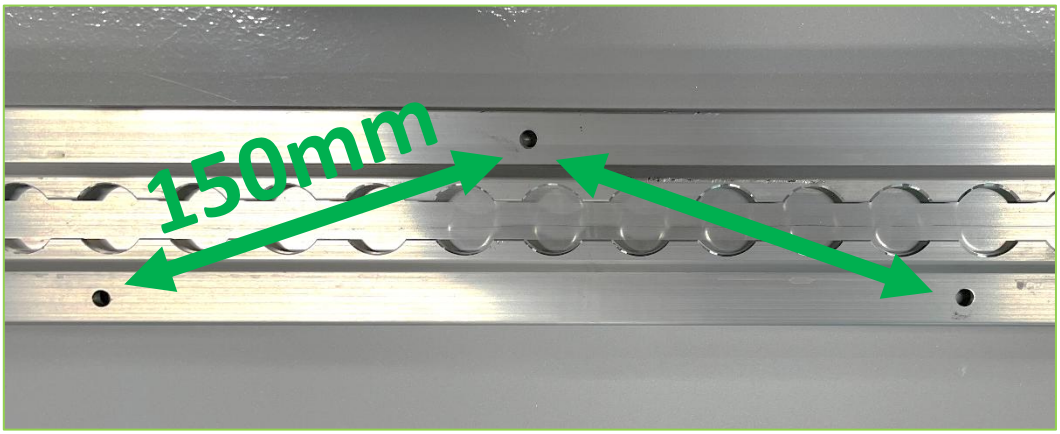



INCORRECT

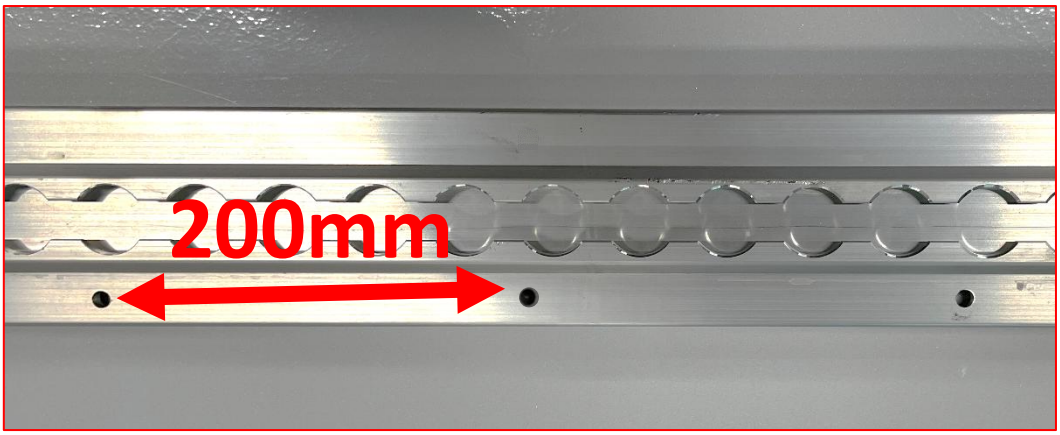

STEP 4

USE ⑧+⑨

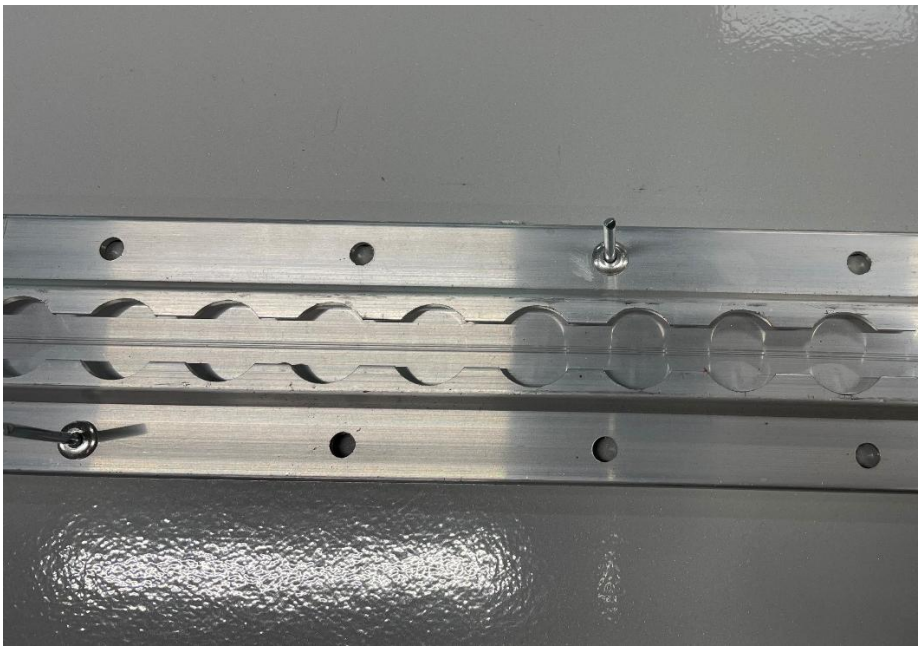

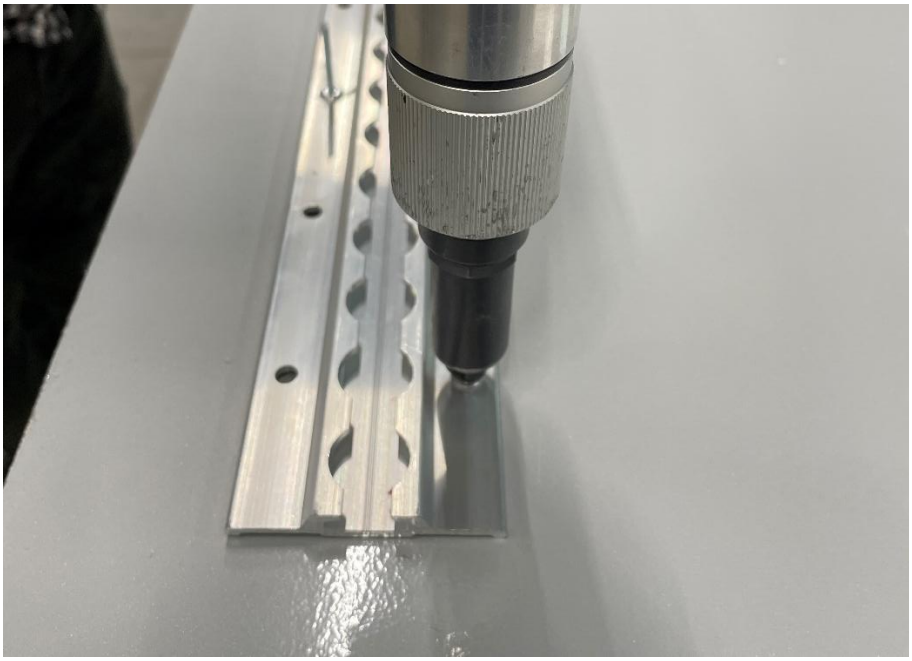



48H – 50%

1 WEEK – 100%

CORRECT

