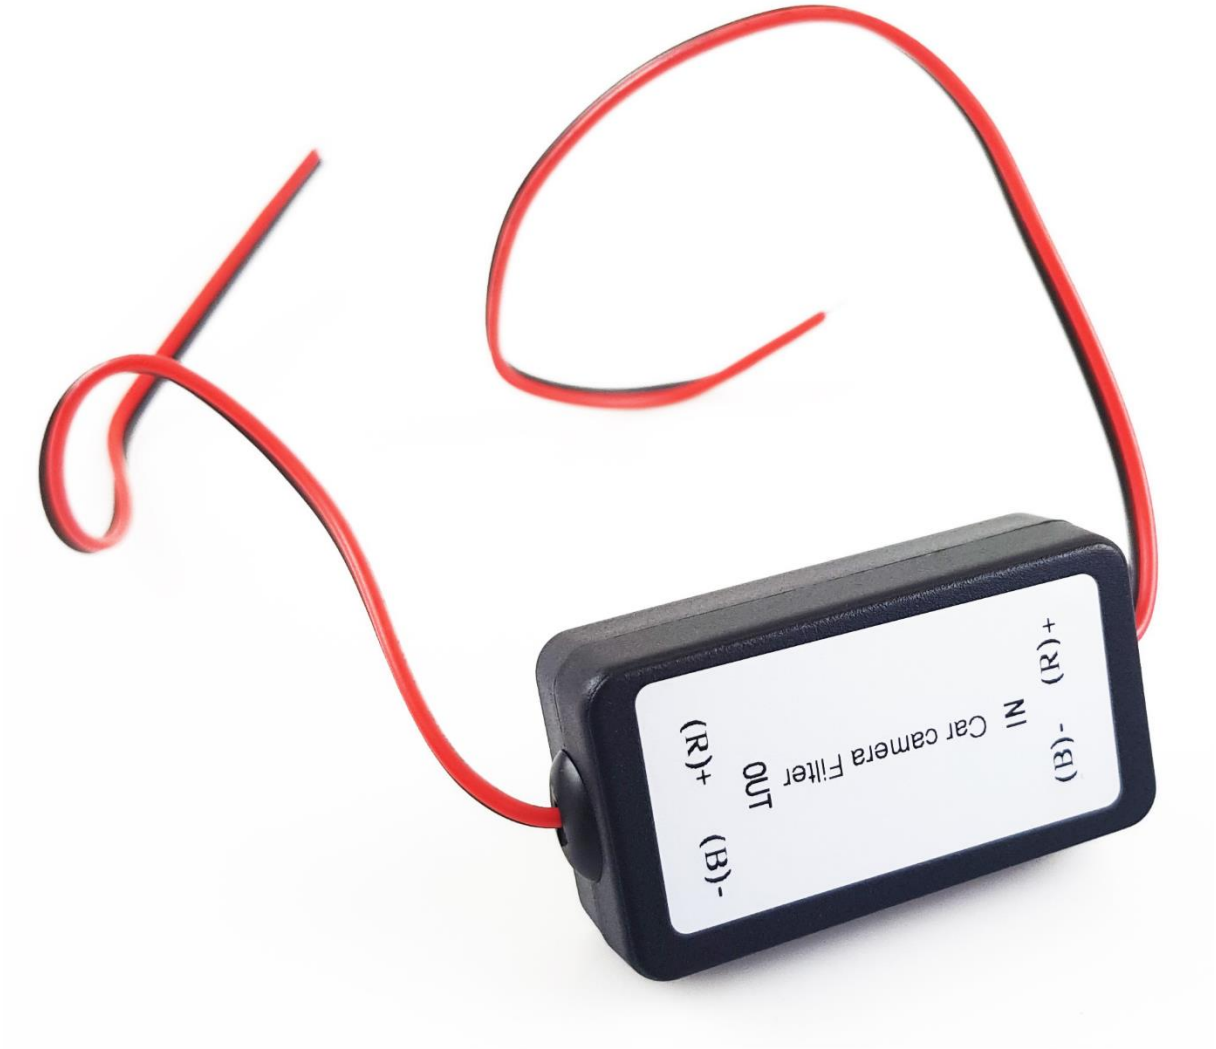
REVERSING CAMERA FILTER INSTALLATION INSTRUCTION

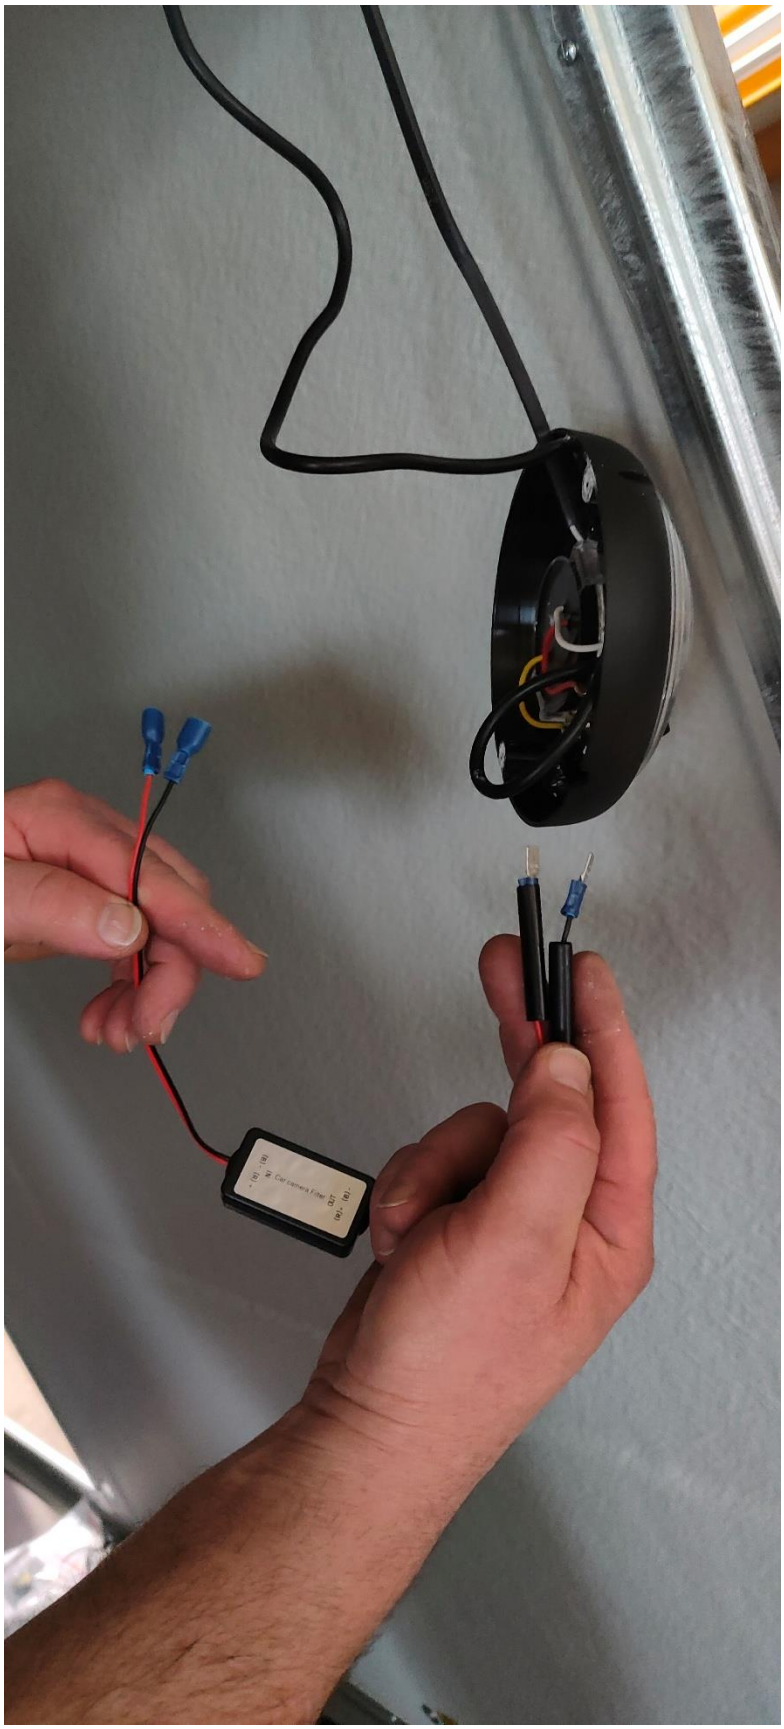


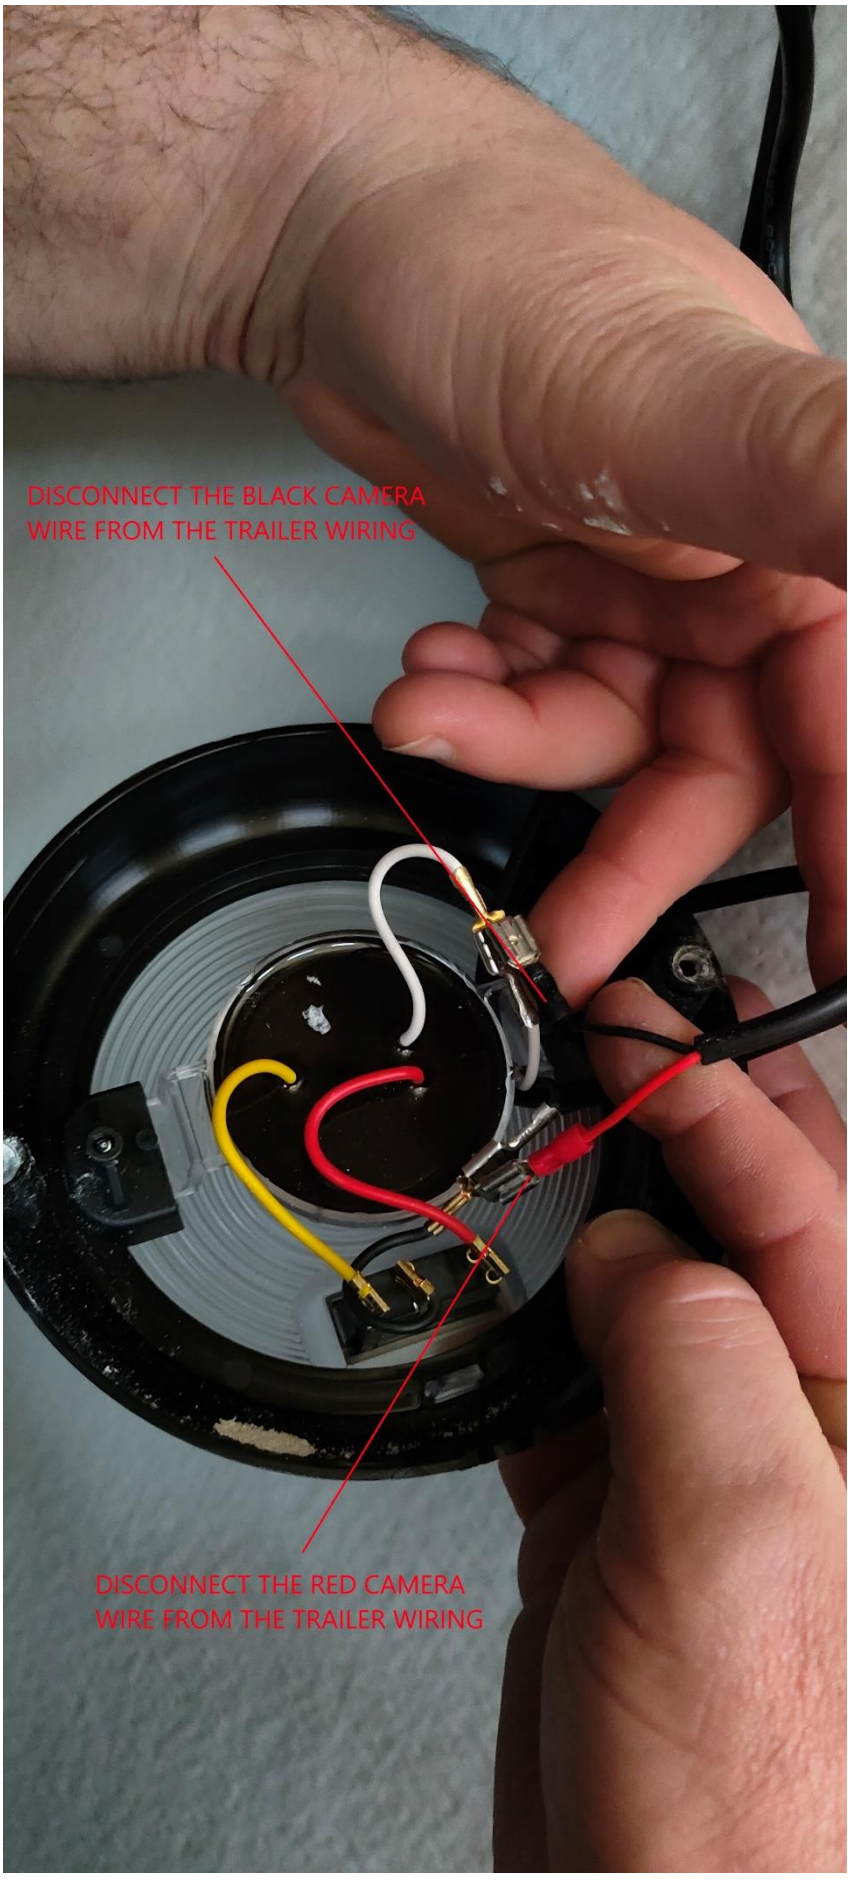
STEP 1

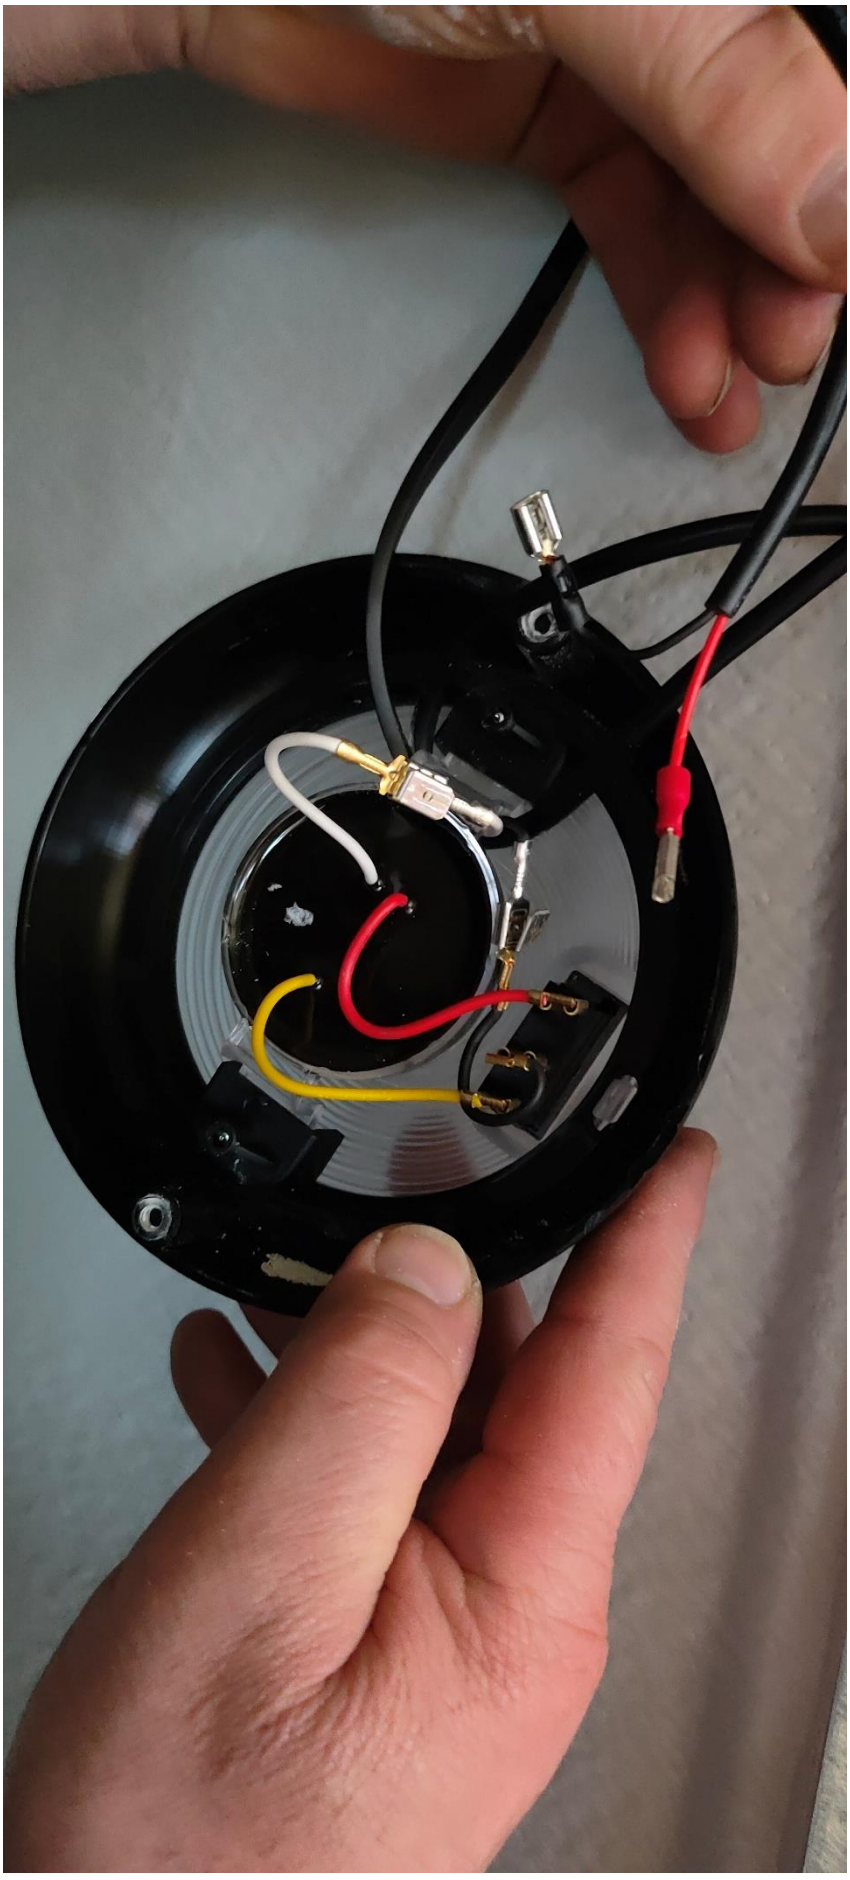




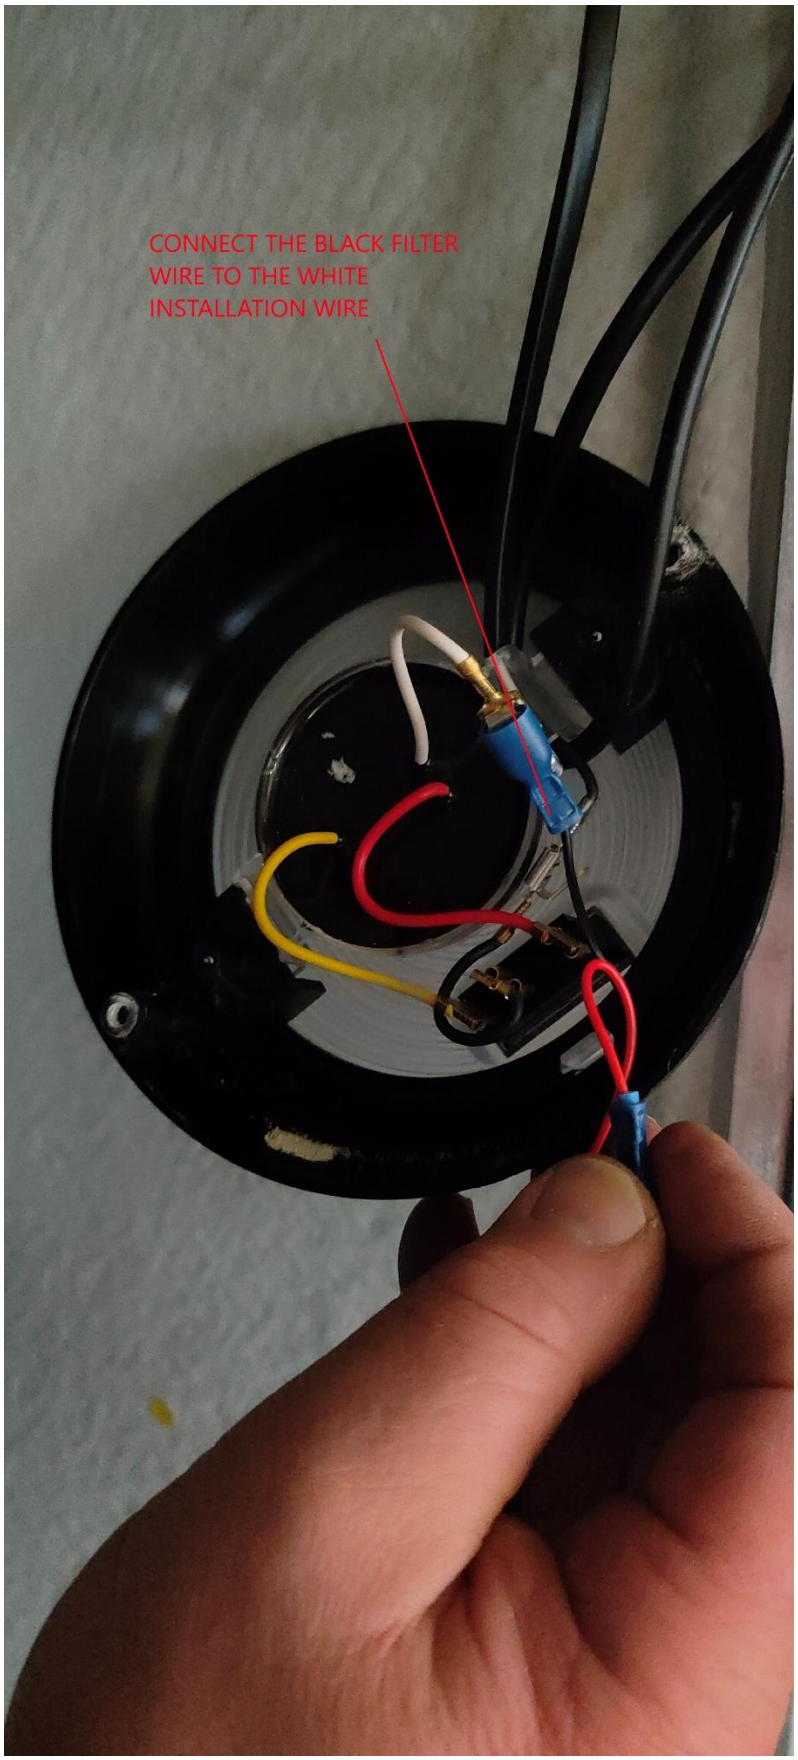
STEP 2

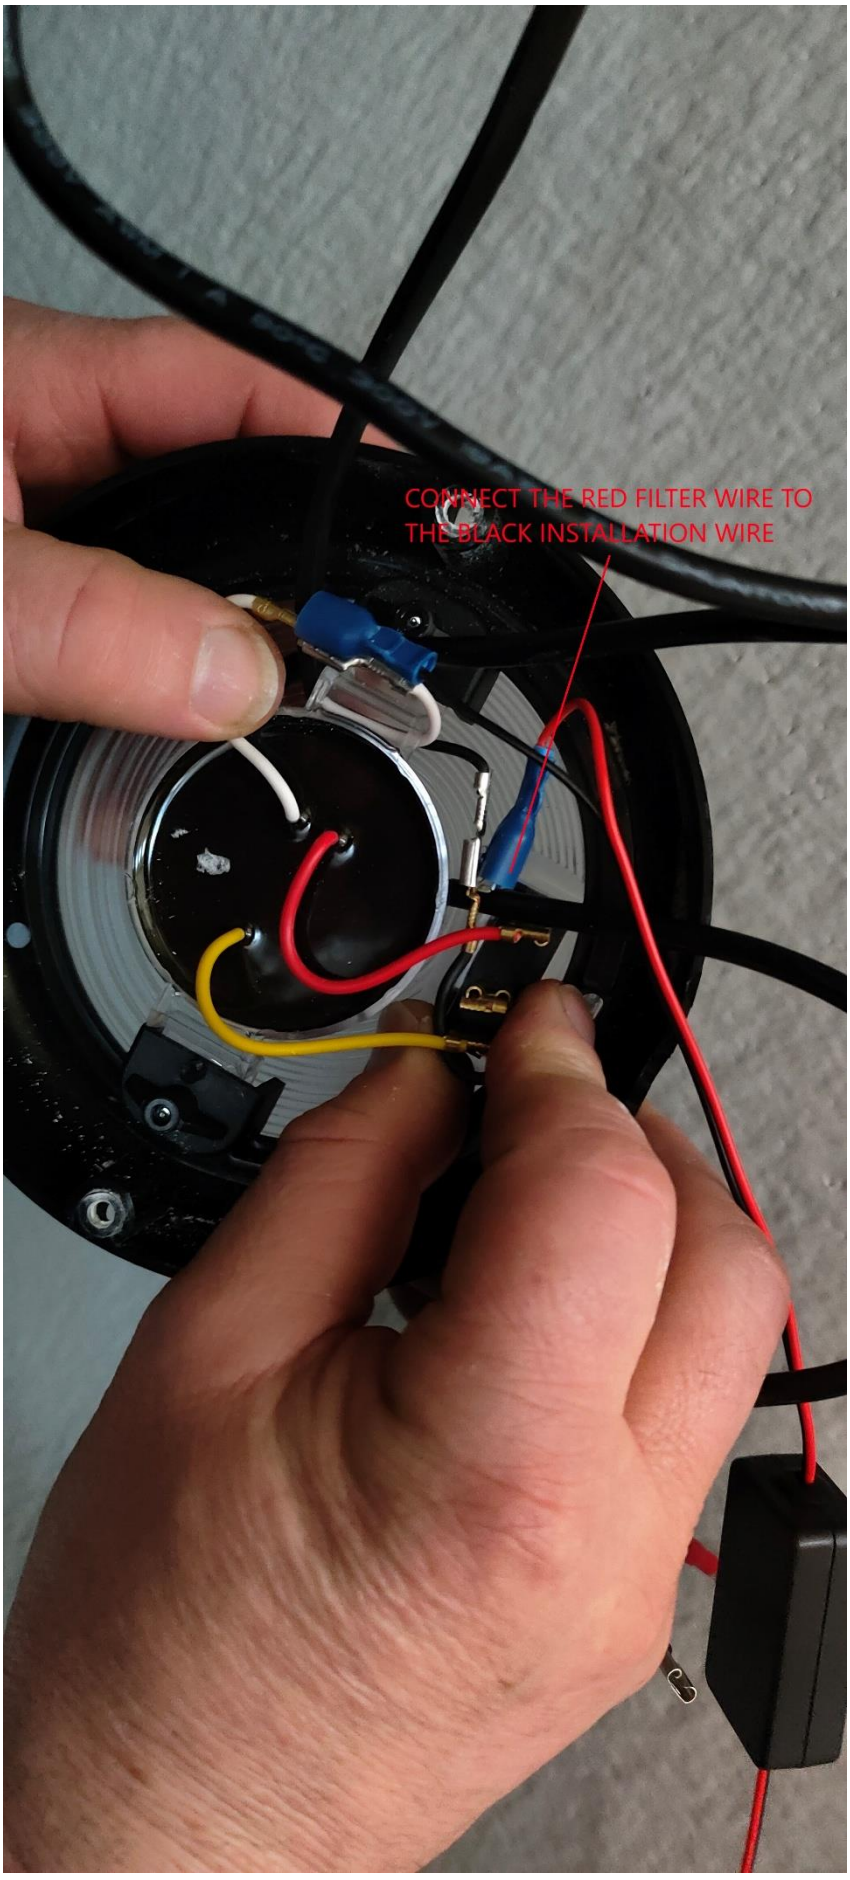



DISCONNECT THE BLACK CAMERA
WIRE FROM THE TRAILER WIRING
DISCONNECT THE RED CAMERA
WIRE FROM THE TRAILER WIRING

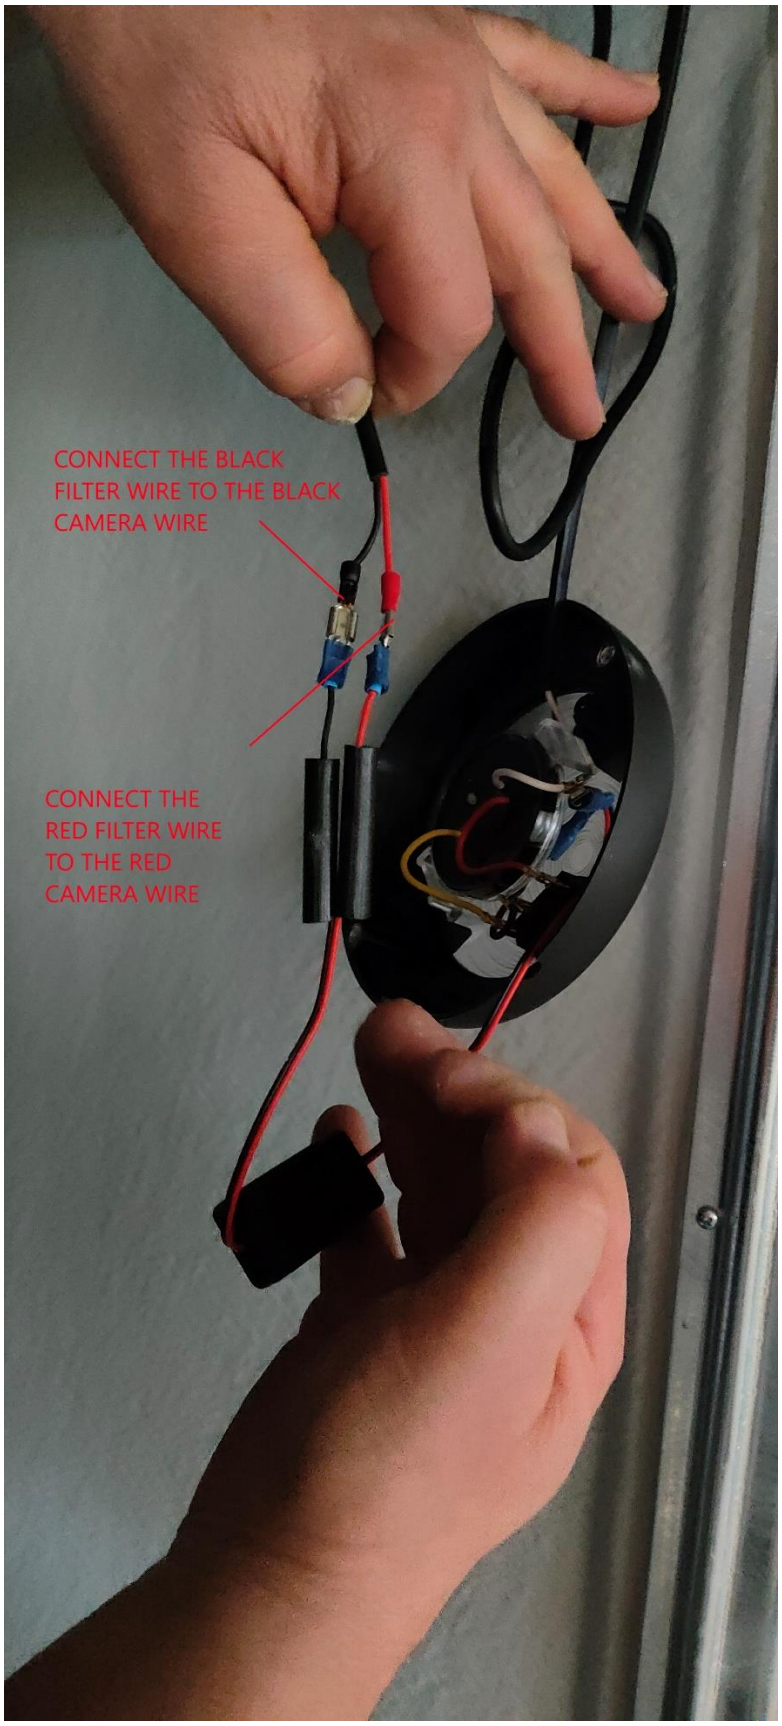


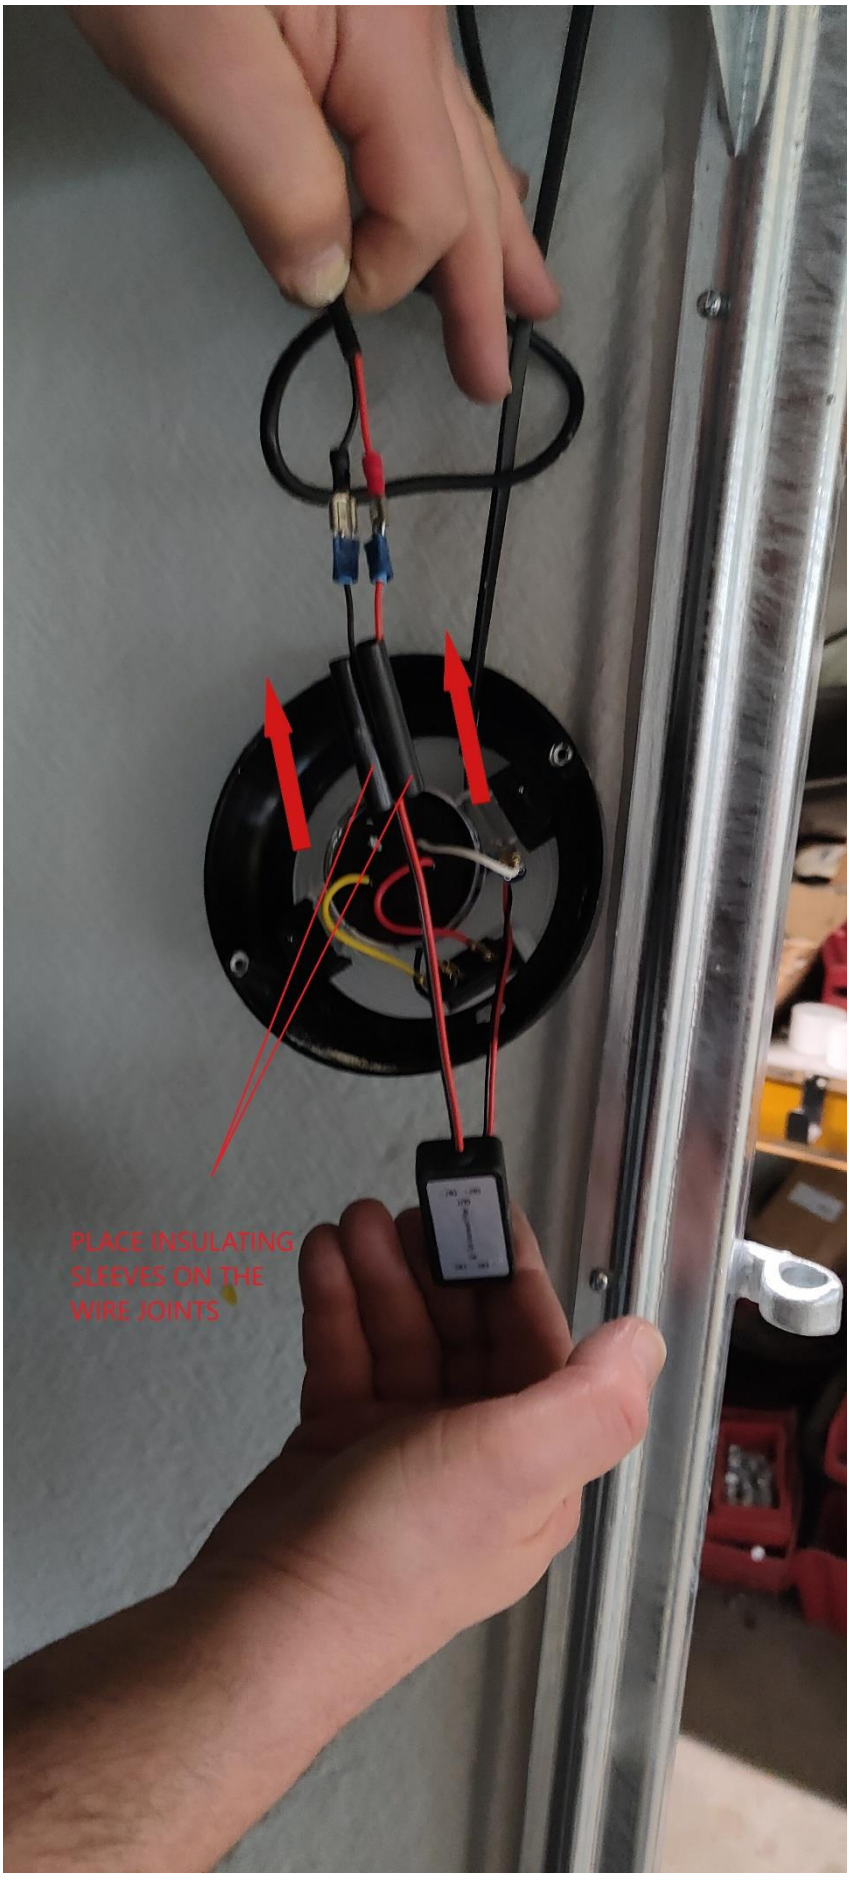
STEP 3


CONNECT THE BLACK FILTER
WIRE TO THE WHITE
INSTALLATION WIRE

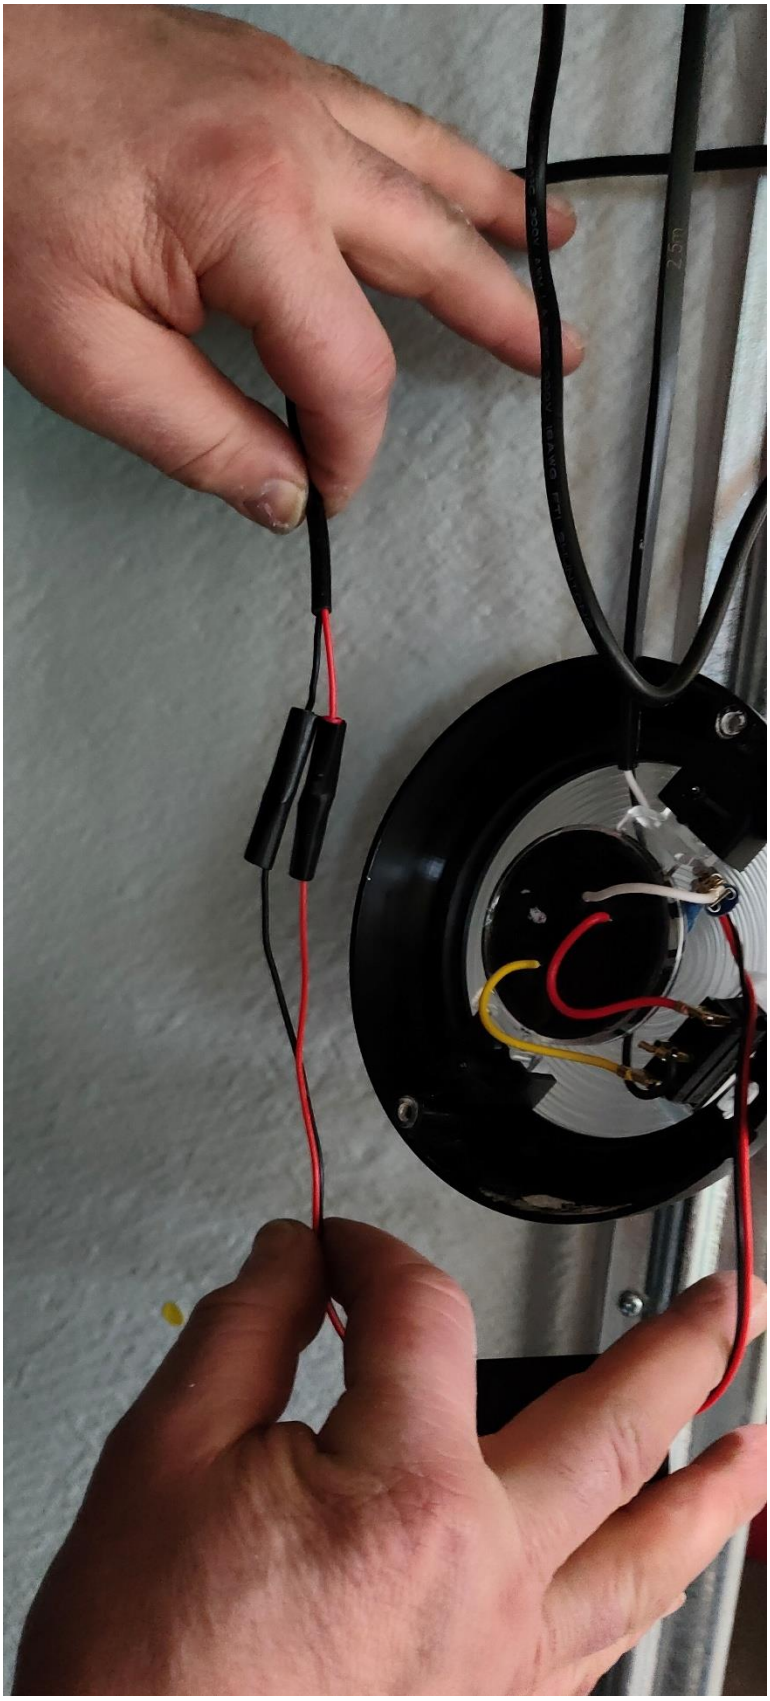

CONNECT THE RED FILTER WIRE TO
THE BLACK INSTALLATION WIRE

STEP 4

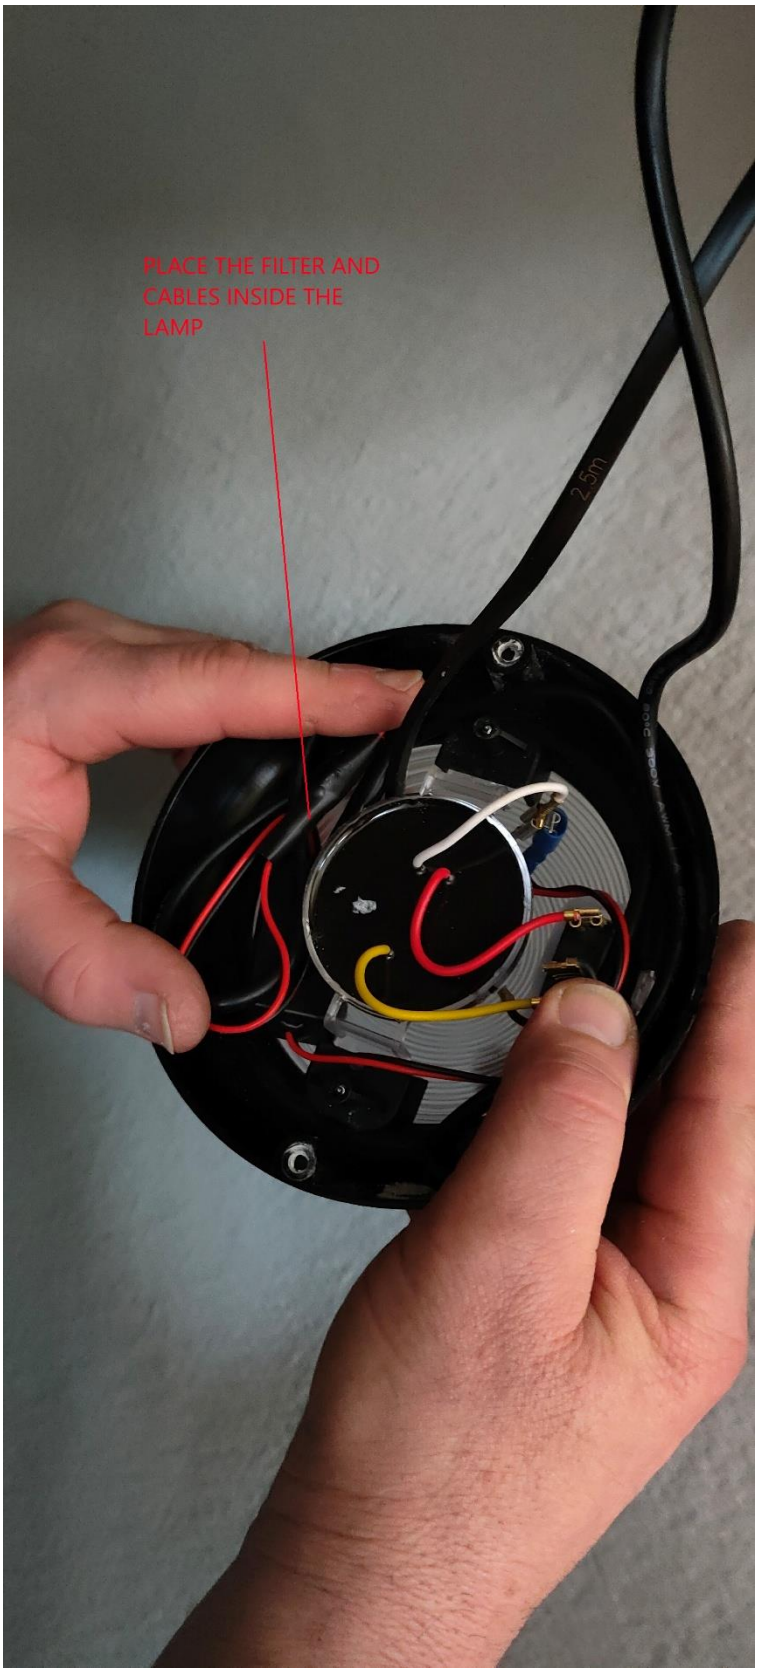

CONNECT THE BLACK
FILTER WIRE TO THE BLACK
CAMERA WIRE
CONNECT THE
RED FILTER WIRE
TO THE RED
CAMERA WIRE

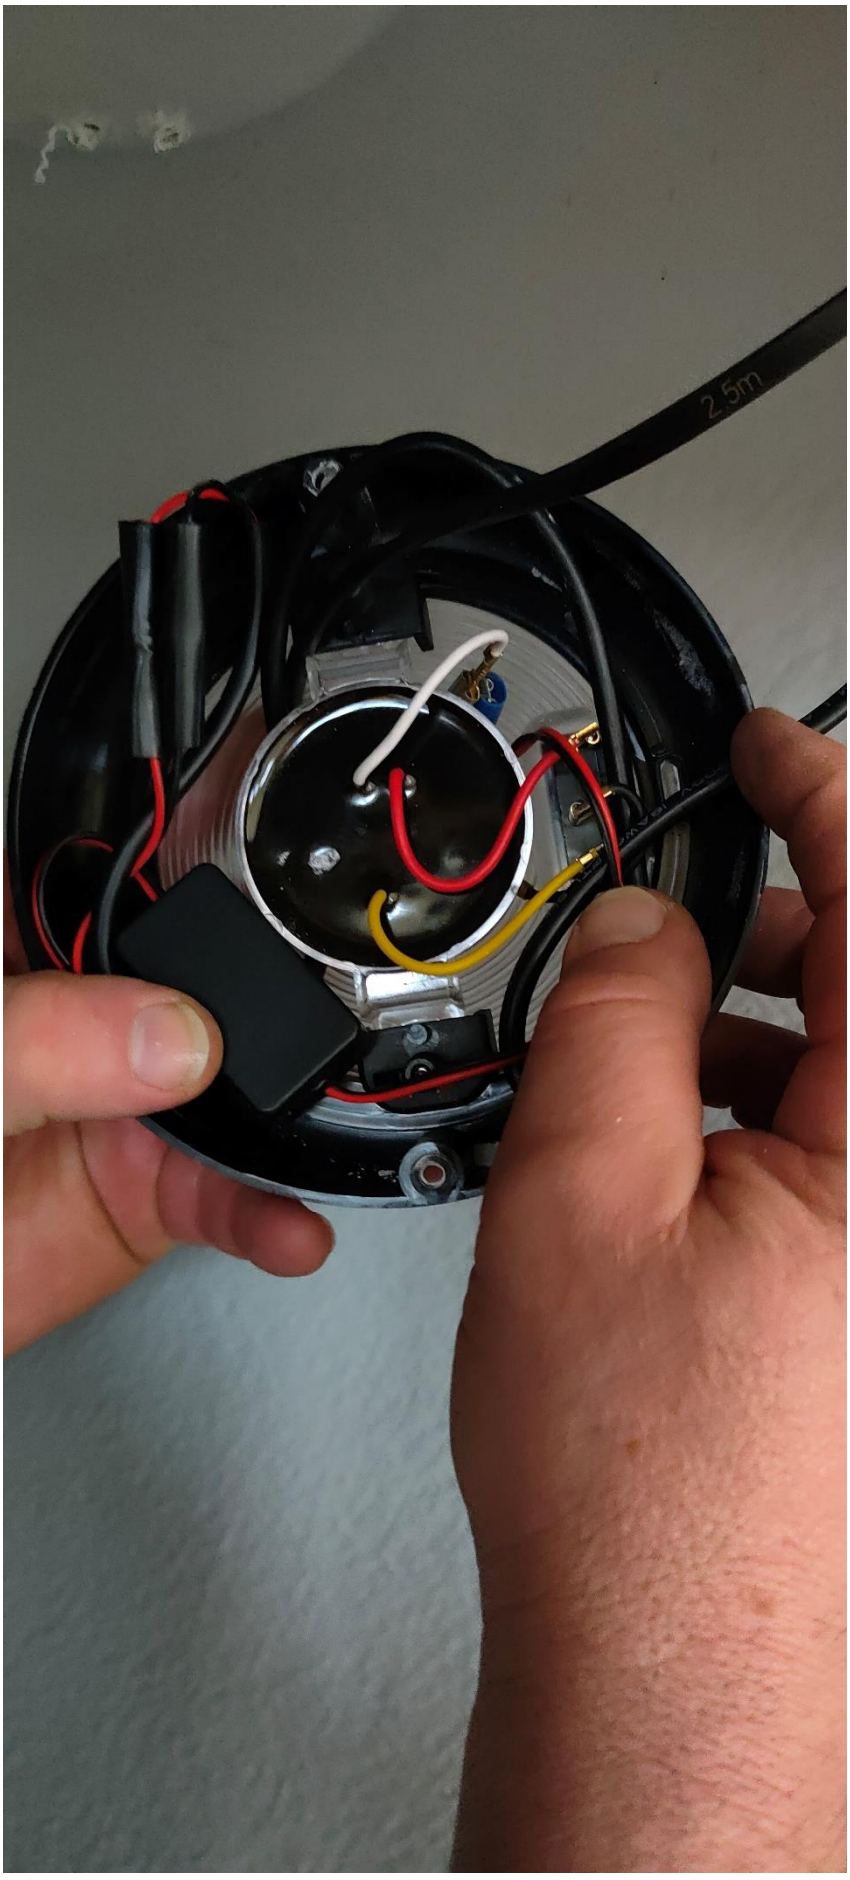

PLACE INSULATING
SLEEVES ON THE
WIRE JOINTS

CORRECT INSTALLATION

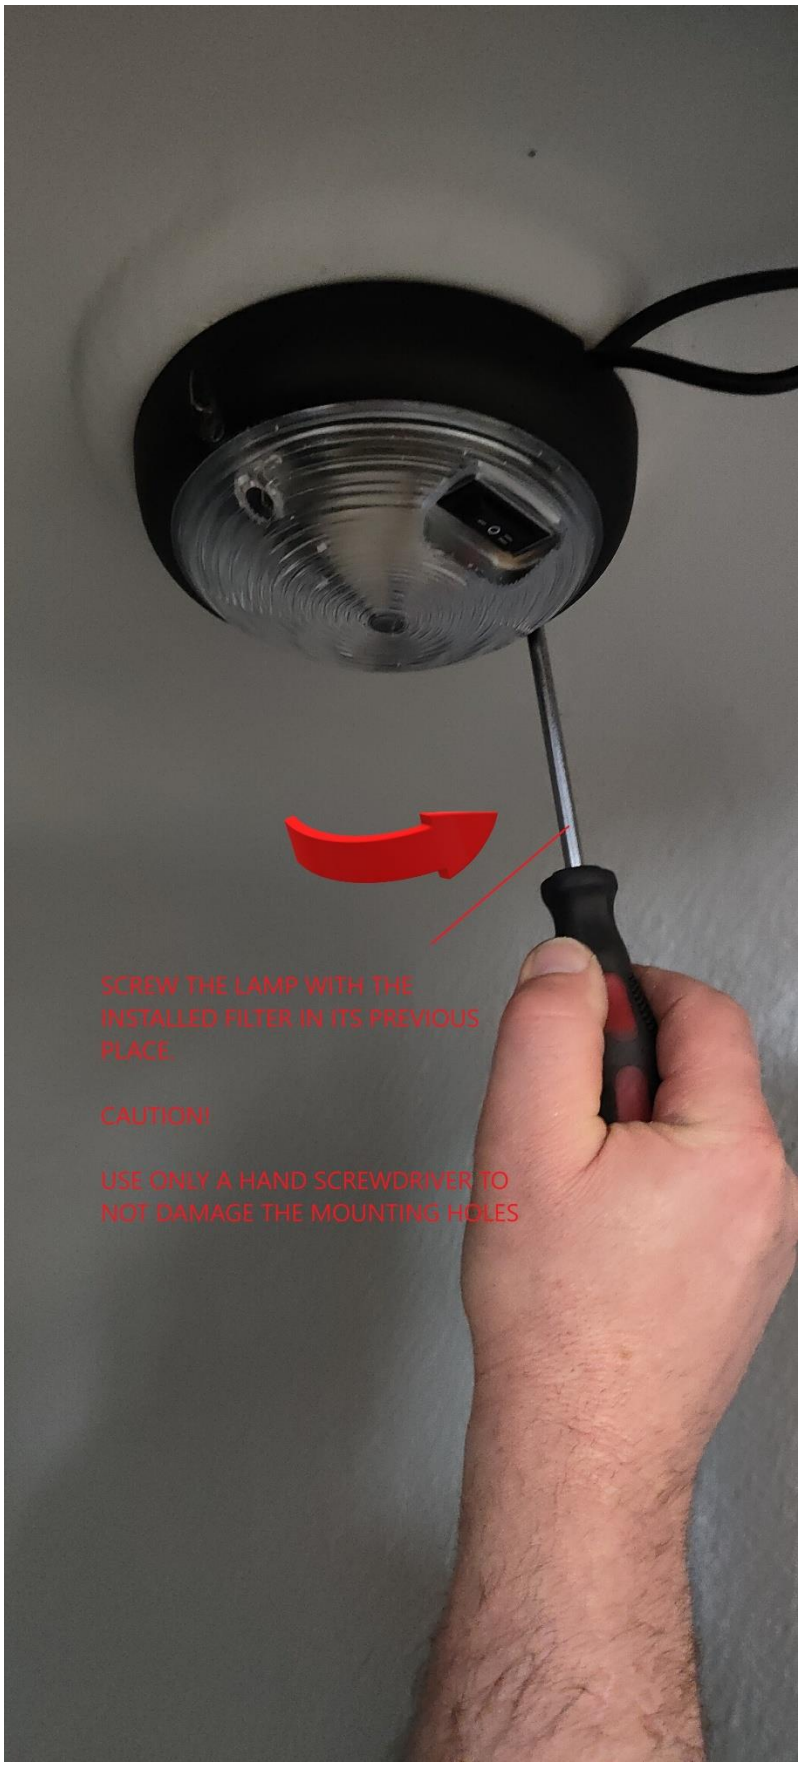


STEP 5




2.5m

STEP 6


SCREW THE LAMP WITH THE INSTALLED FILTER IN ITS PREVIOUS PLACE.
CAUTION!
USE ONLY A HAND SCREWDRIVER TO NOT DAMAGE THE MOUNTING HOLES

CORRECT INSTALLATION

