INSTALLATION INSTRUCTION OF TACK ROOM – SANDWICH



WARNING!
You will need extra to adapt the tack room (snadwitch) yourself:

- Driller
- Drill 8mm, 5mm
- Rivieter

You will need to exchange:

- Allen wrench 4mm, 5mm
- Wrench 13mm, 17mm

STEP 1





STEP 2



NUMBER	PICTURE	PCS
1		1


STEP 3

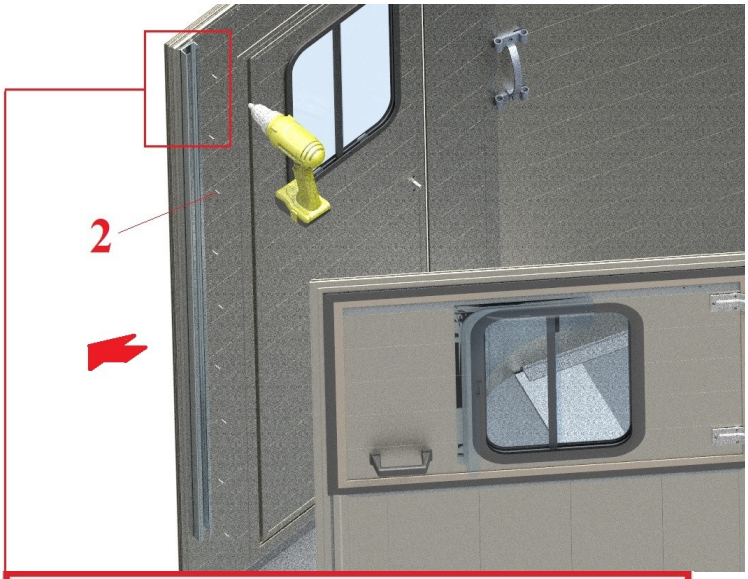


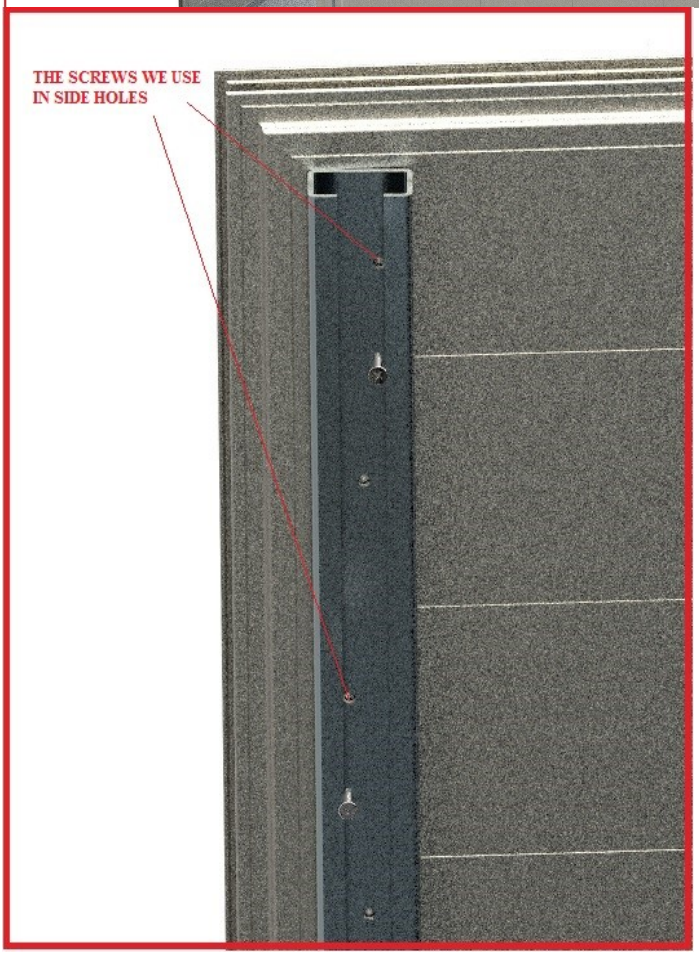

NUMBER	PICTURE	PCS
2		9

STEP 4

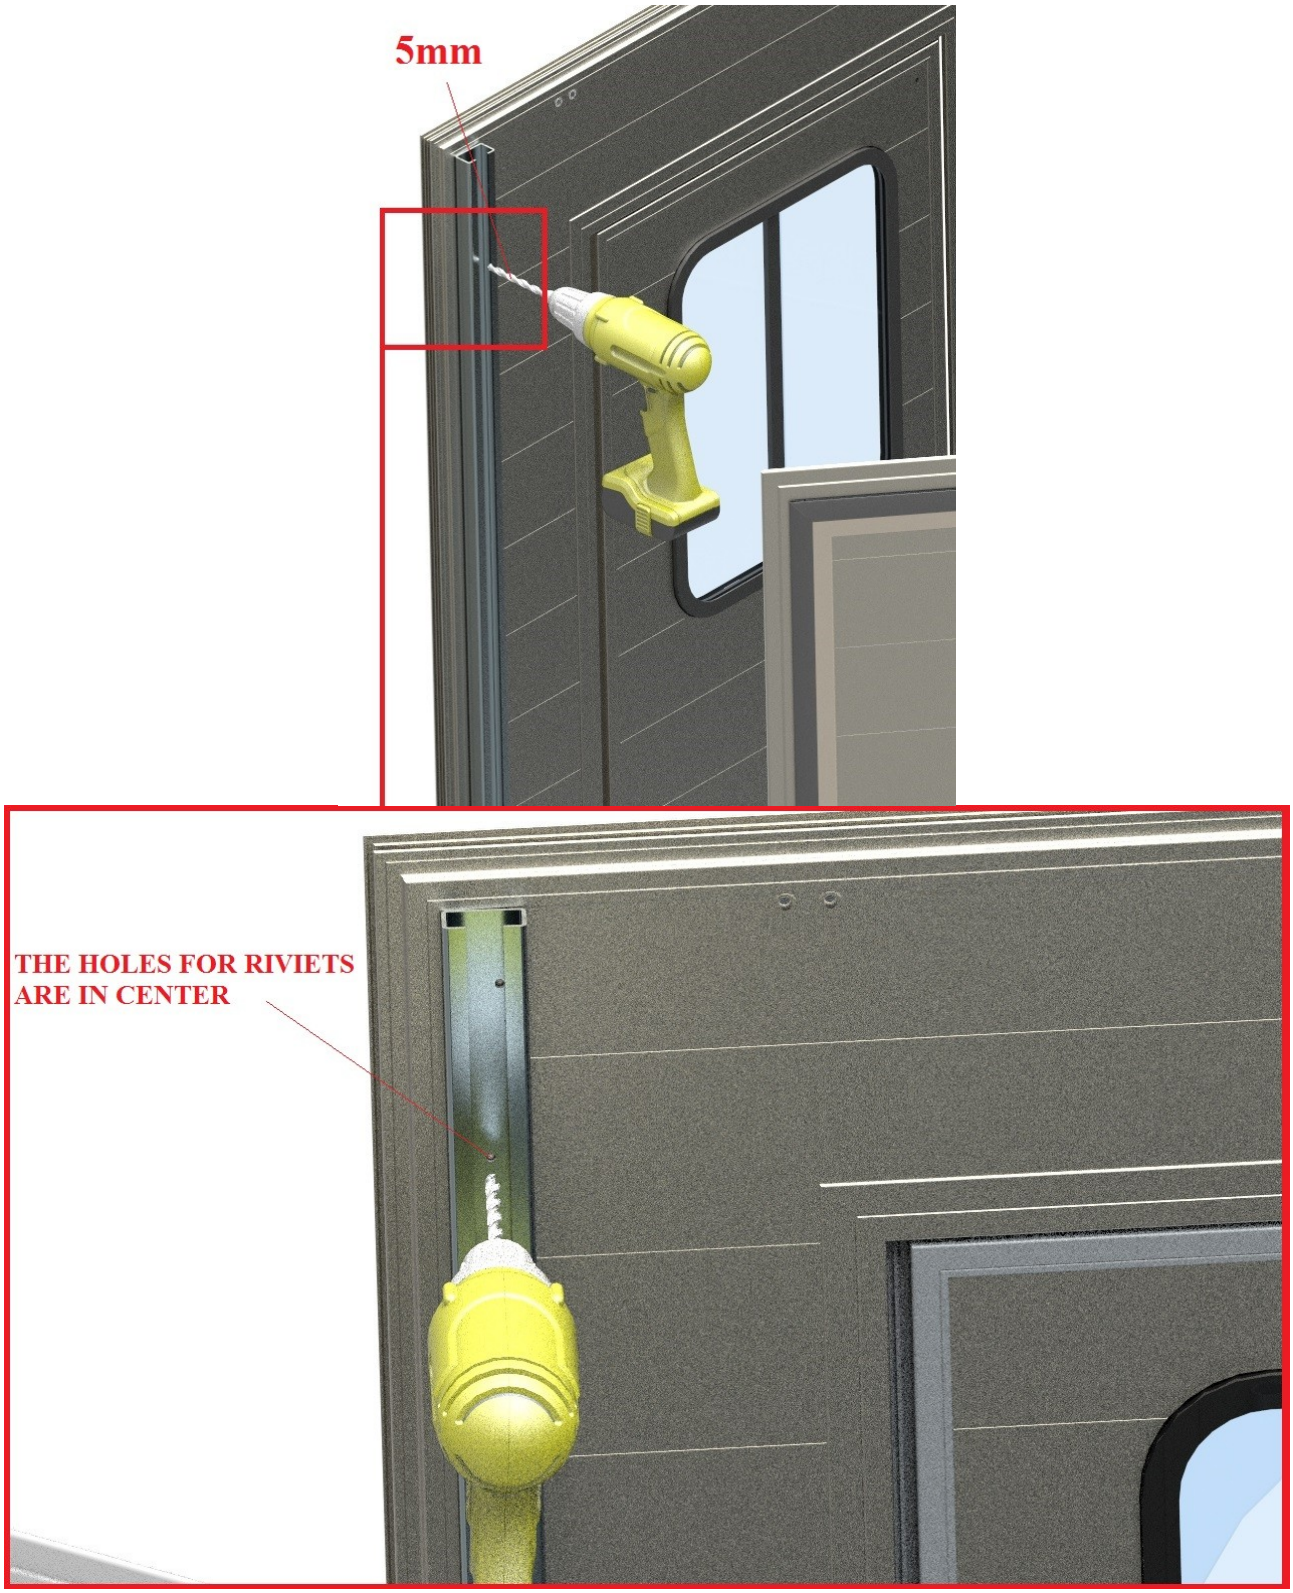

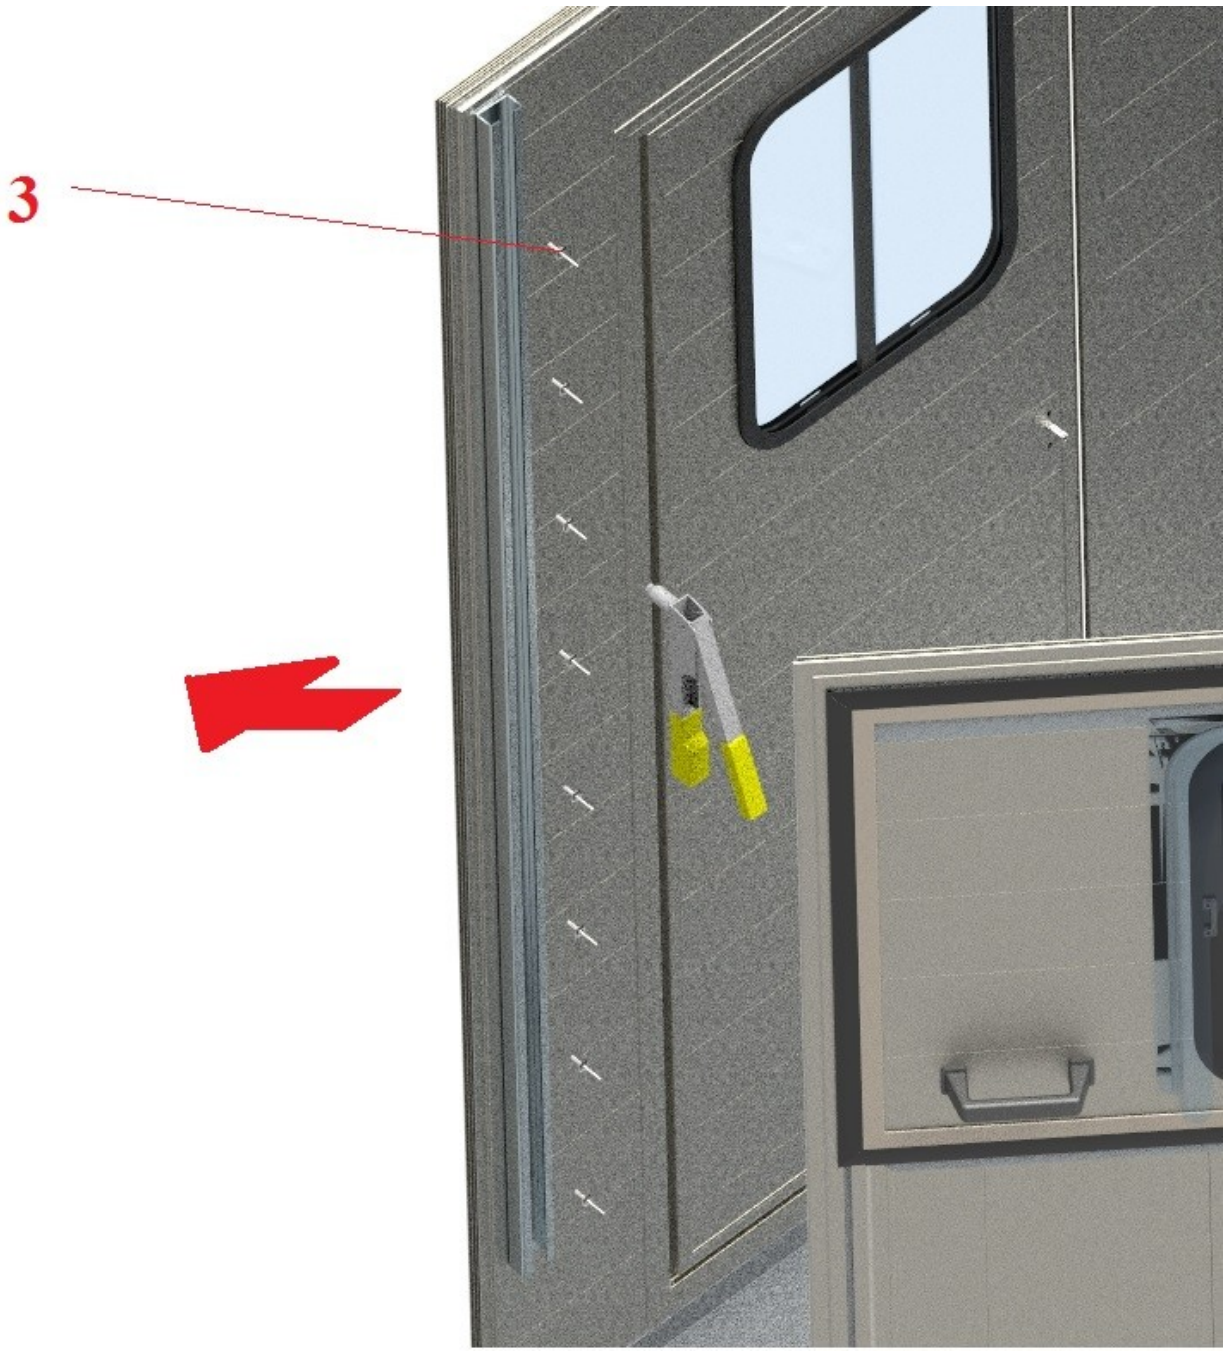


NUMBER	PICTURE	PCS
3	 4,8x16mm	8


CORRECT INSTALLATION




STEP 5

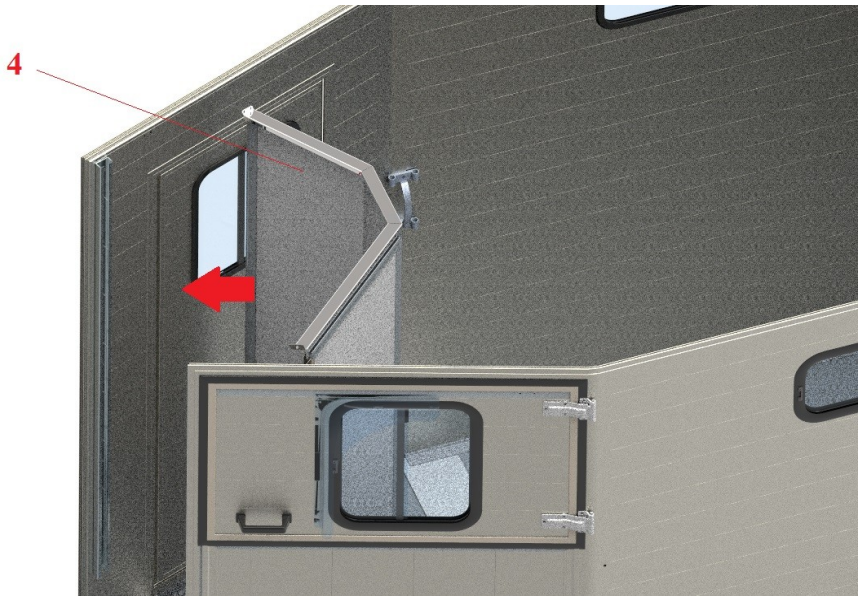

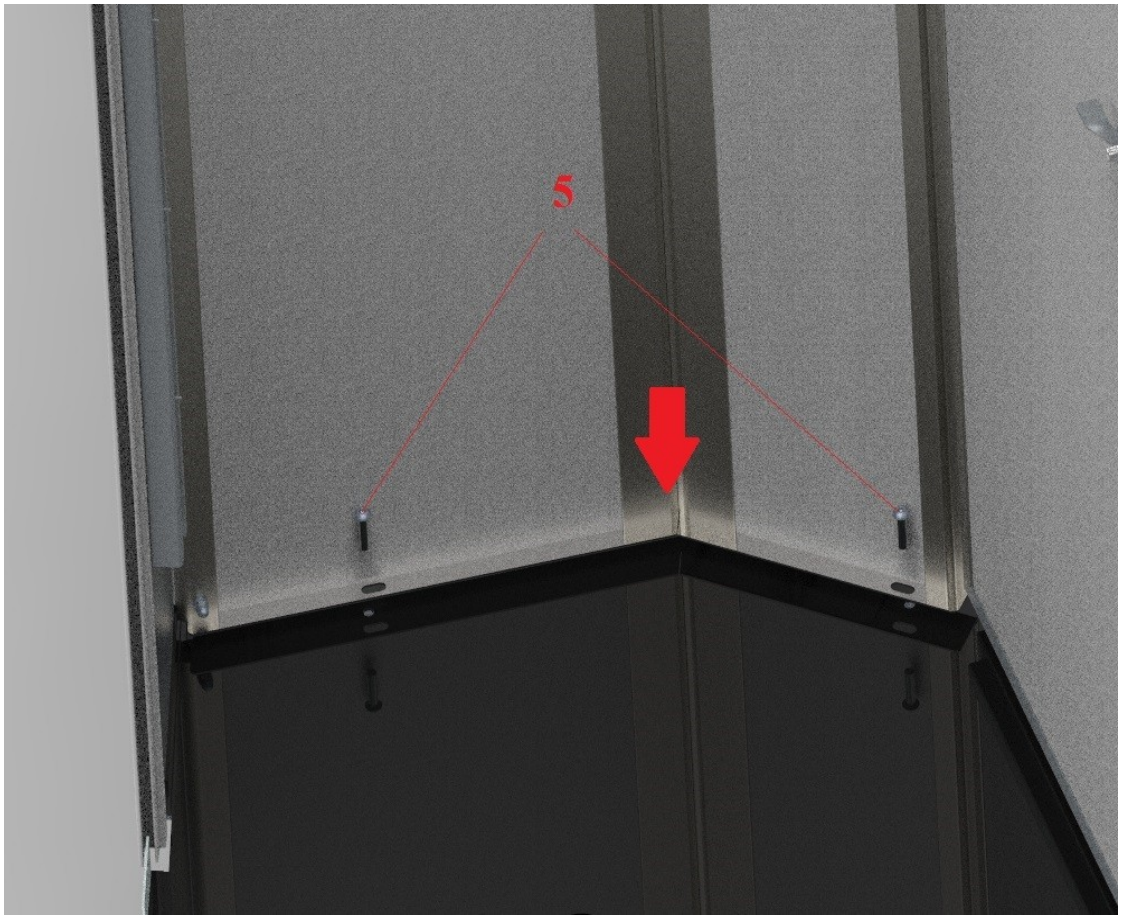




5

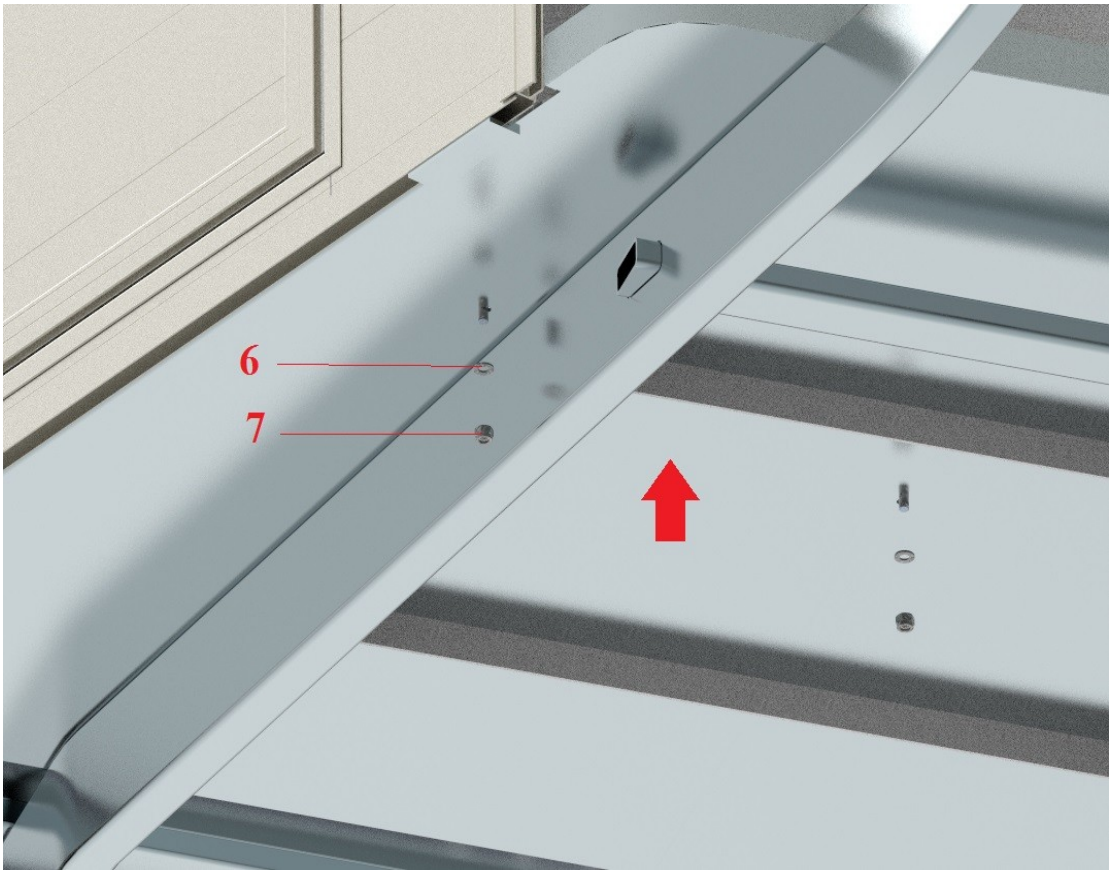
6
7

NUMBER	PICTURE	PCS
4		1
5	 M8x25	2
6		2
7		2

STEP 6

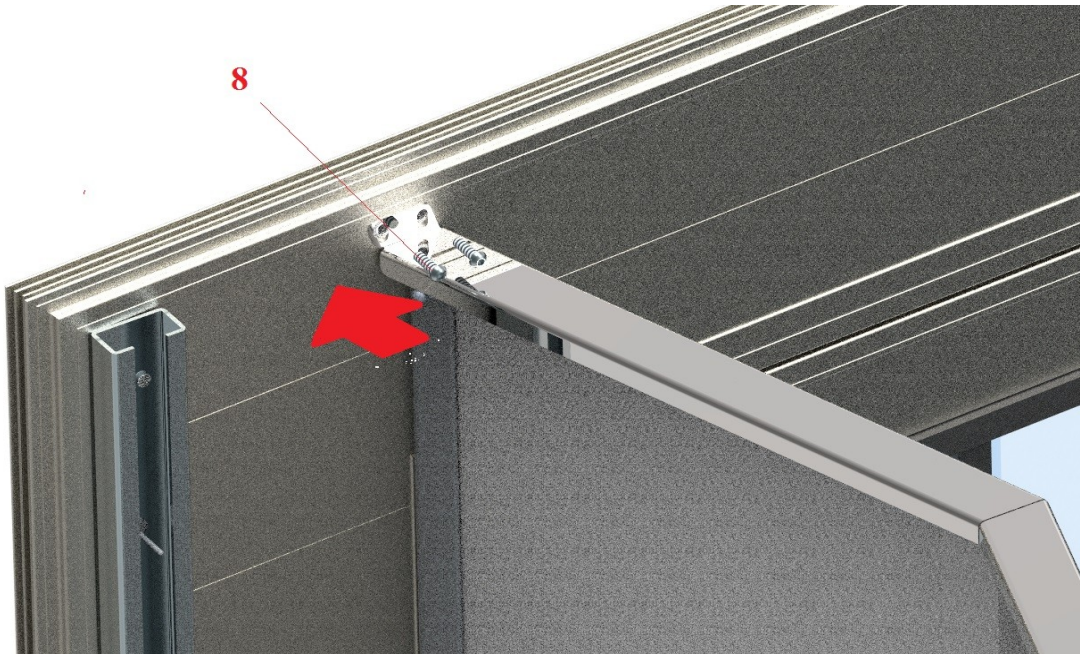

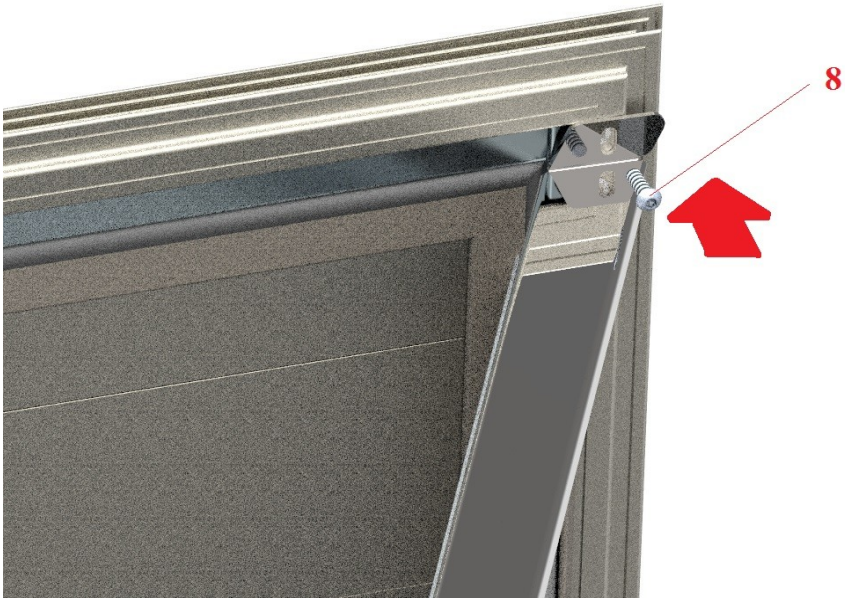



NUMBER	PICTURE	PCS
8	 M6x16	3

CORRECT INSTALLATION




STEP 7

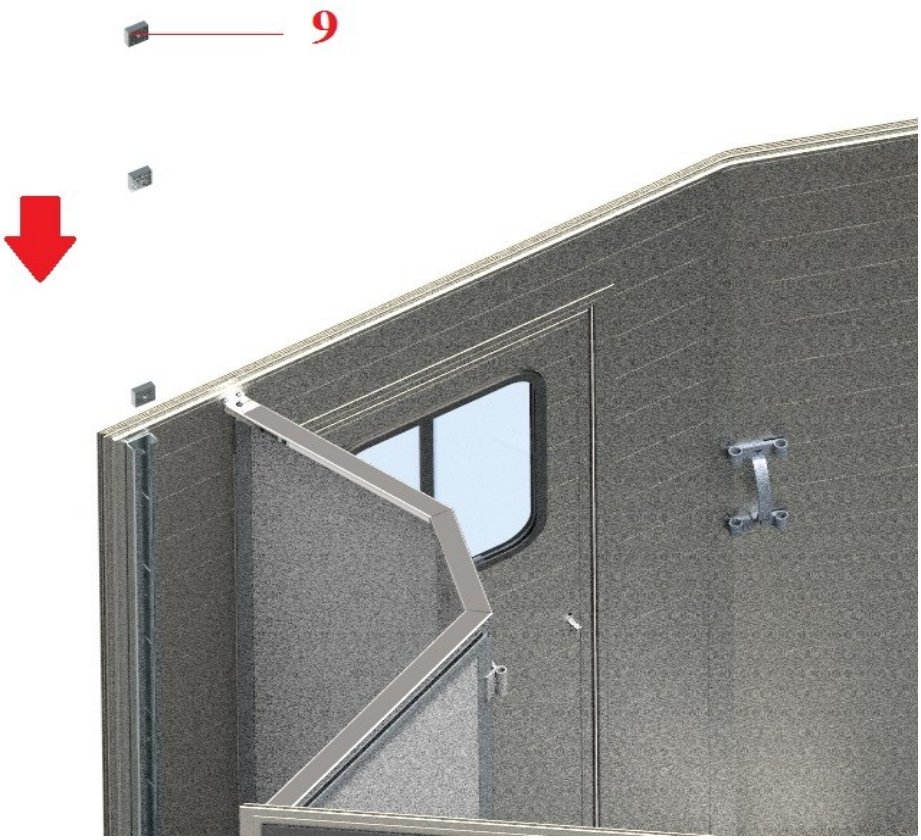

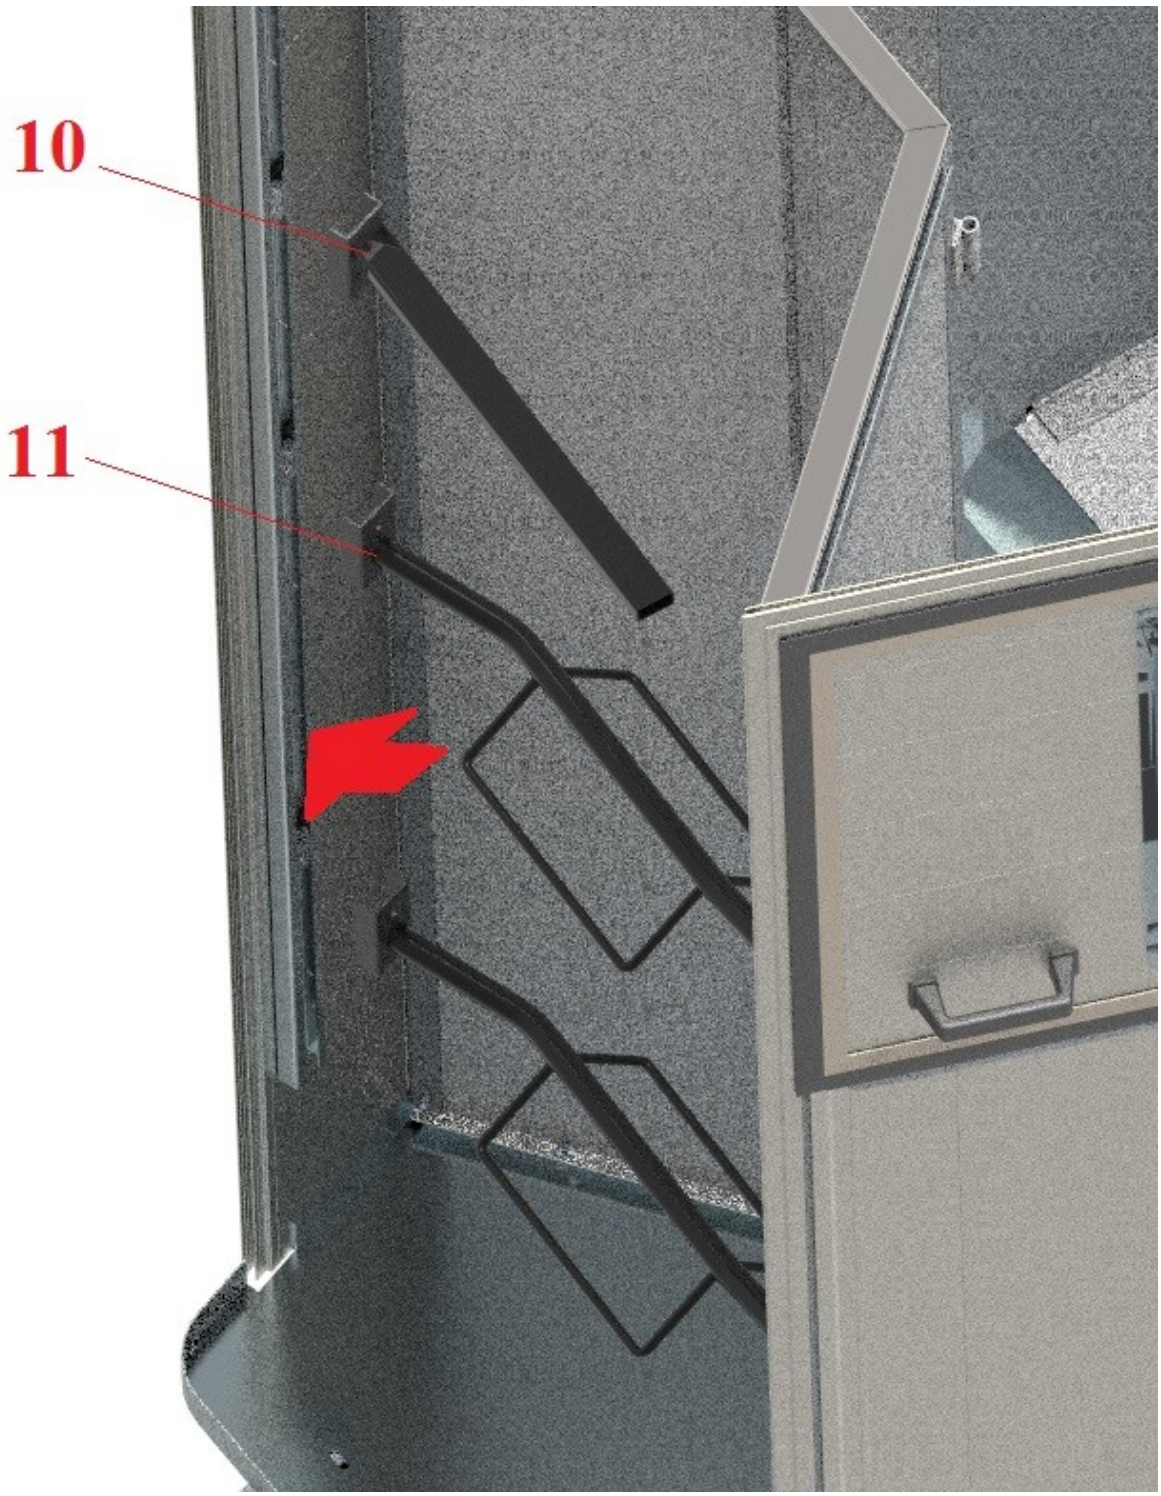
10
11


12

NUMBER	PICTURE	PCS
9		3
10		1
11		2
12	 M10x25	3


CORRECT INSTALLATION




STEP 8



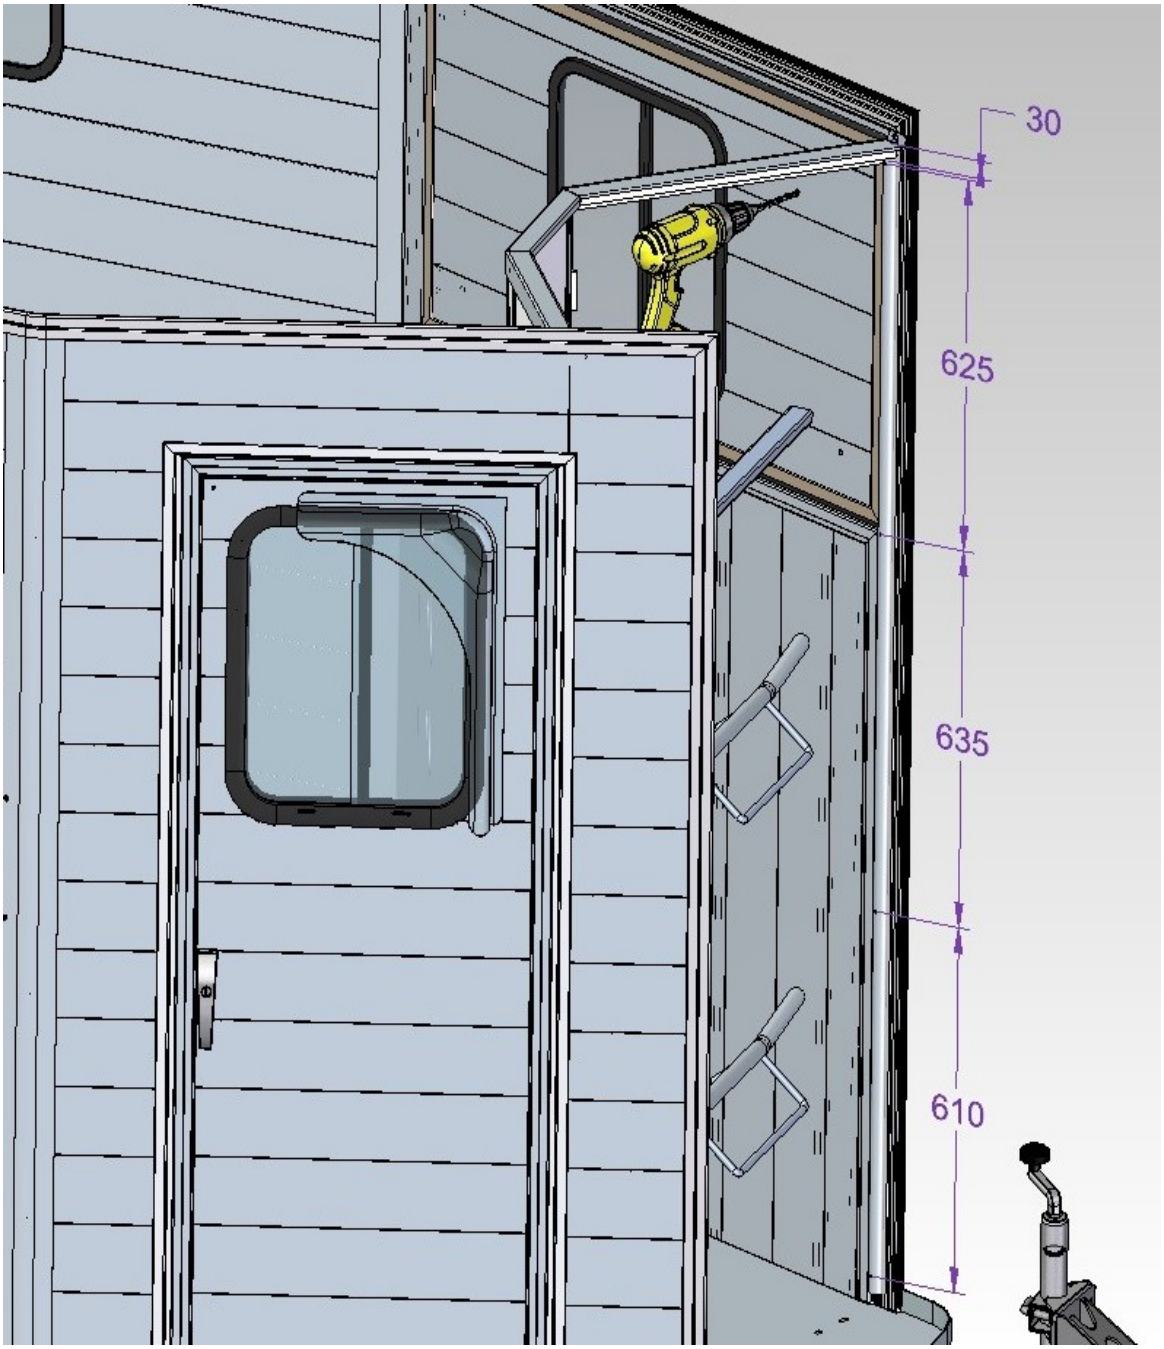


30
625
635
610

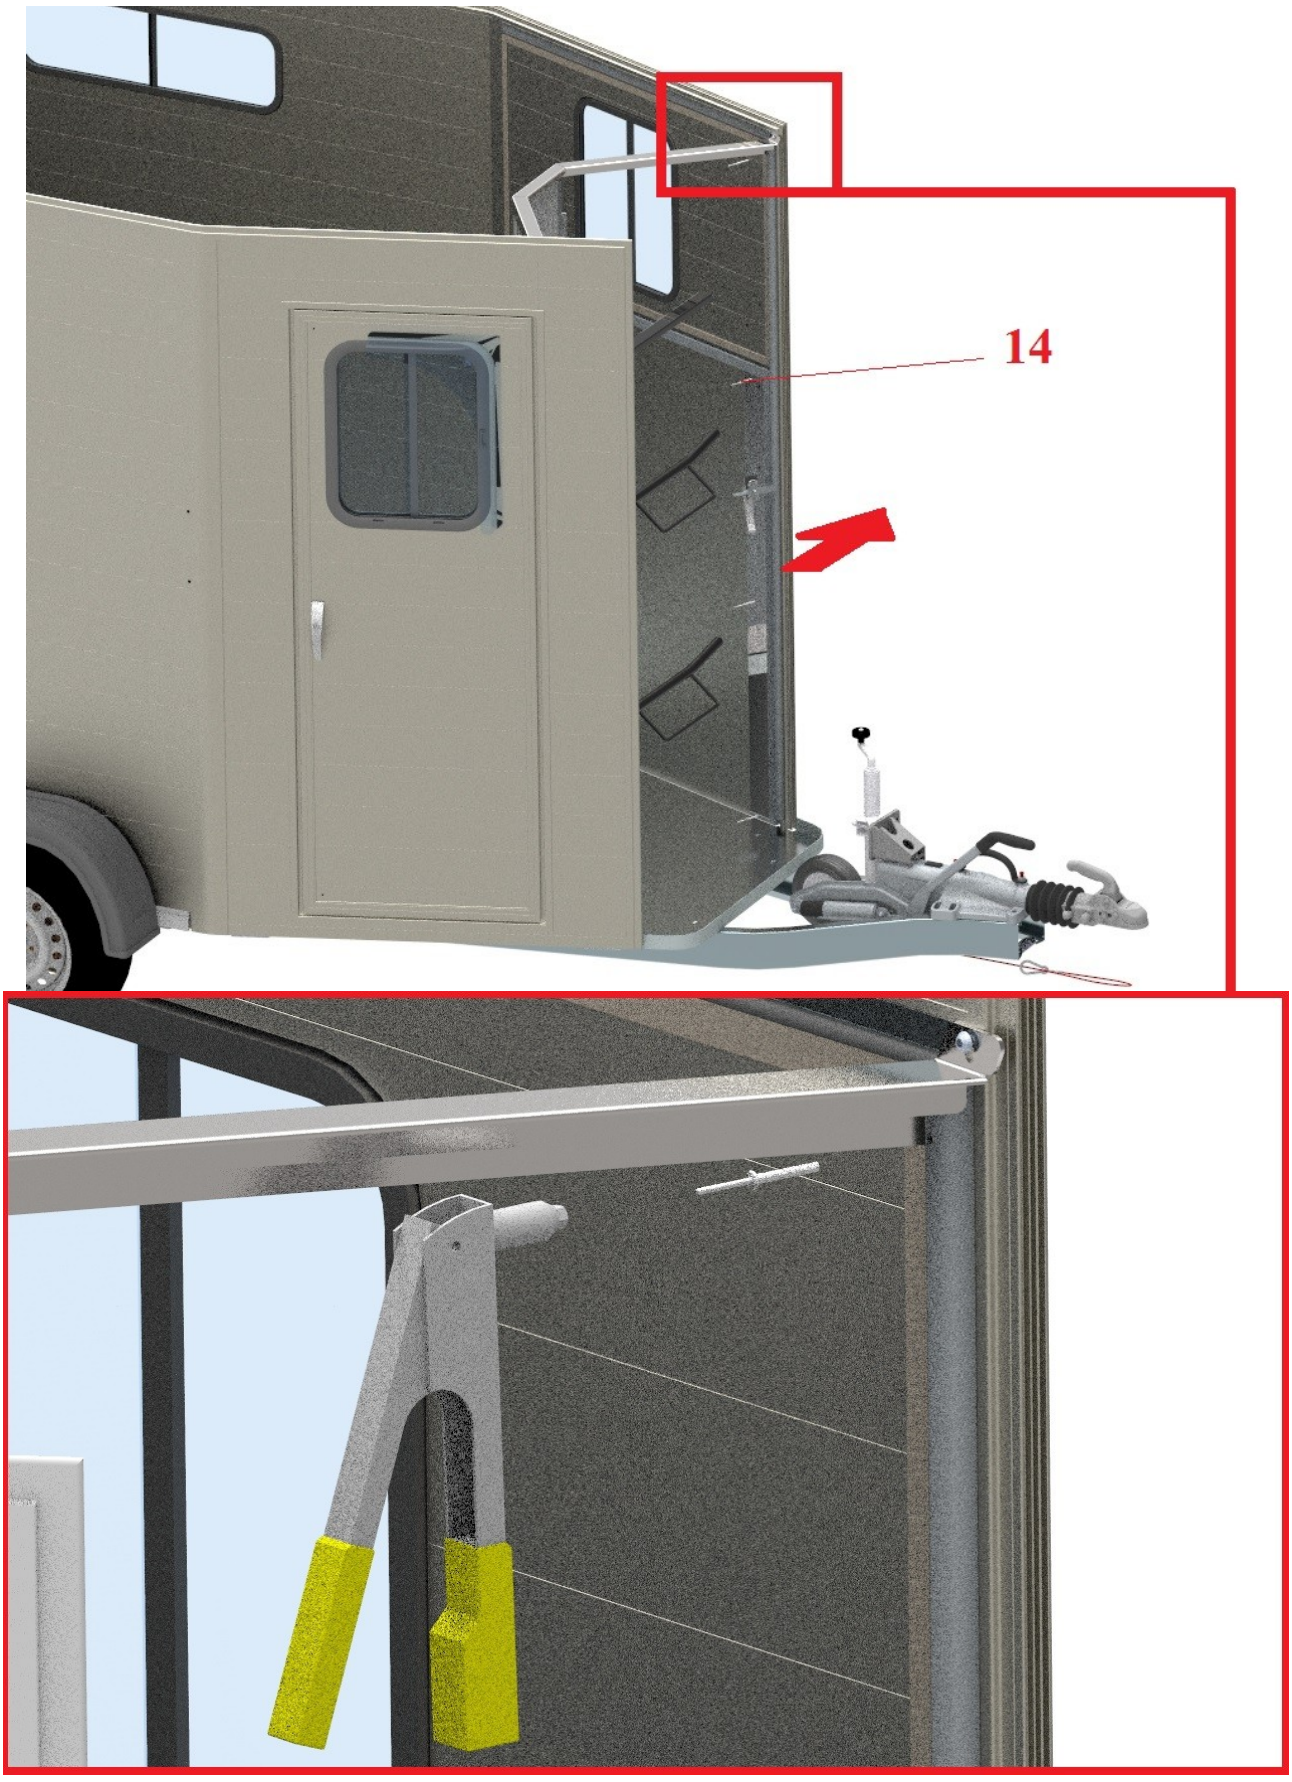
14

NUMBER	PICTURE	PCS
13		1
14	 4,8x35mm	4

CORRECT INSTALLATION



TO INSTALLATION YOU NEED:


- **WERNCH 4mm, 5mm**



- **WRENCH 13mm, 17mm**



- **DRILLER**

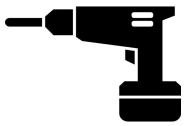

- **DRILL 5mm, 8mm**



- **RIVETER**

