
ASSEMBLY INSTRUCTIONS FOR THE SPARE WHEEL HOLDER



POSSIBLE INSTALLATION

CARGO	✓
C 255	✓
C 300	✓
C 400	✓
C 500	✓
C 500XL	✓
C 700	✓
C 800	✓
C 900	✓
C 1000	✓

TO INSTALLATION YOU NEED:

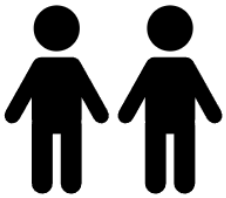


1- 

2-  x4

3-  x4

4- 

5- 


6- 

7-  8mm STEEL

8-  13mm


9-  5mm

STEP 1

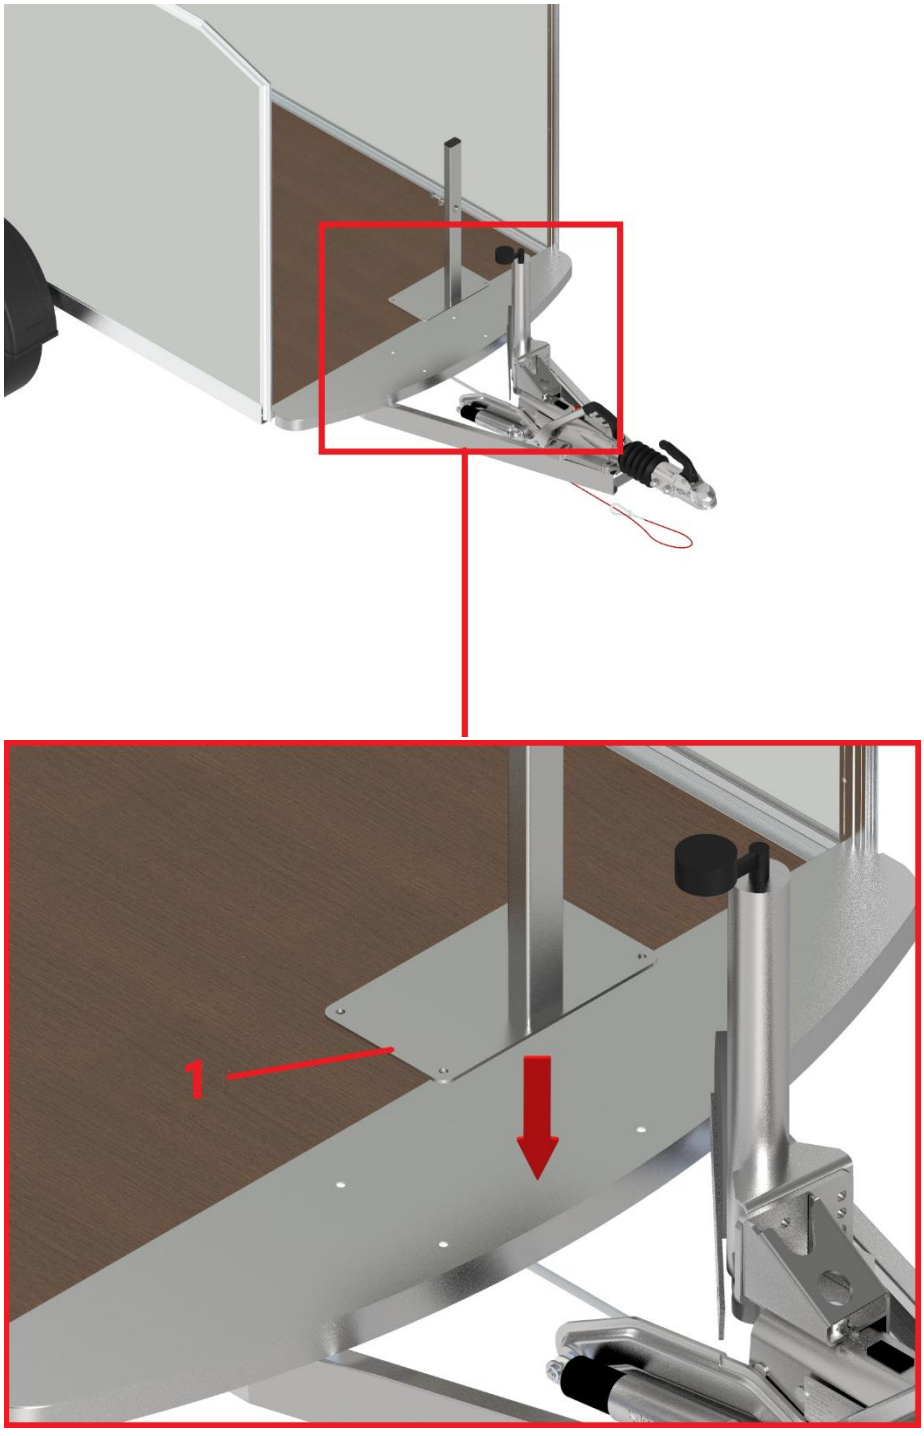


NUMBER	PICTURE	PCS
1		1


STEP 2

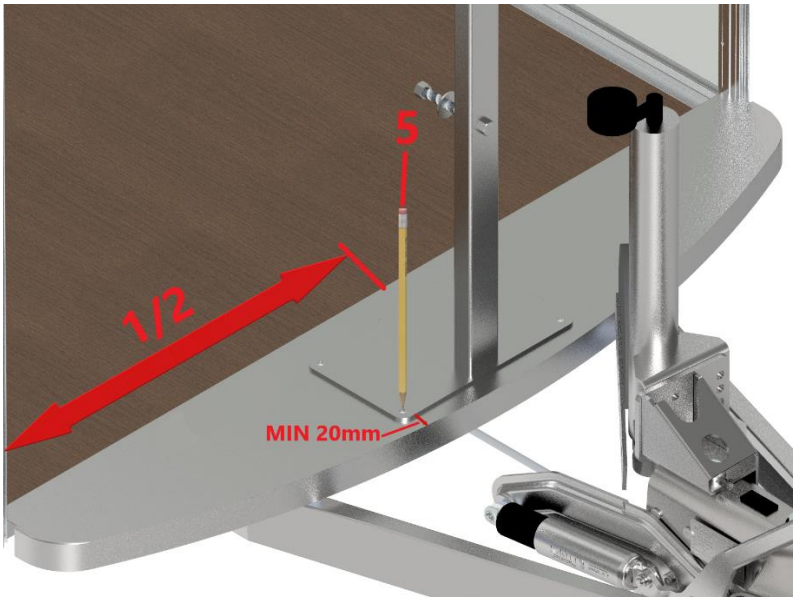


NUMBER	PICTURE
4	
5	


STEP 3

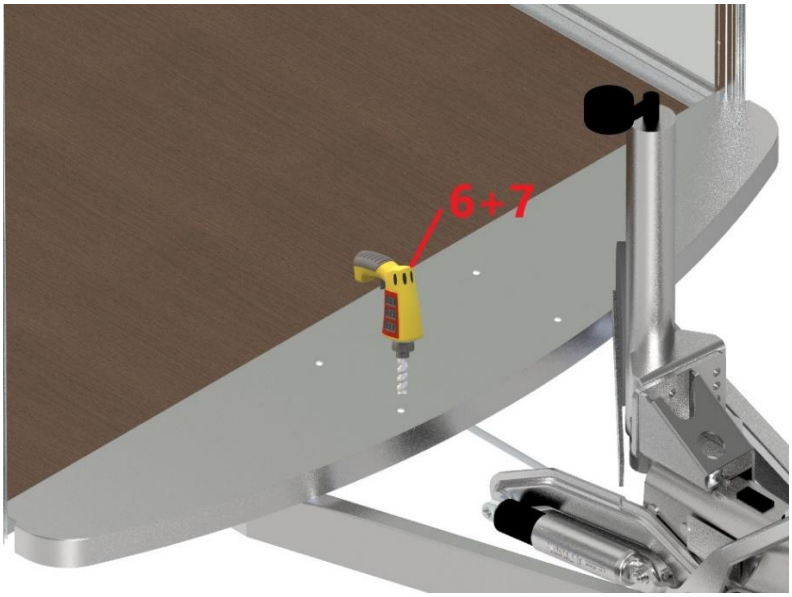


NUMBER	PICTURE
6	
7	 8mm STEEL

STEP 4

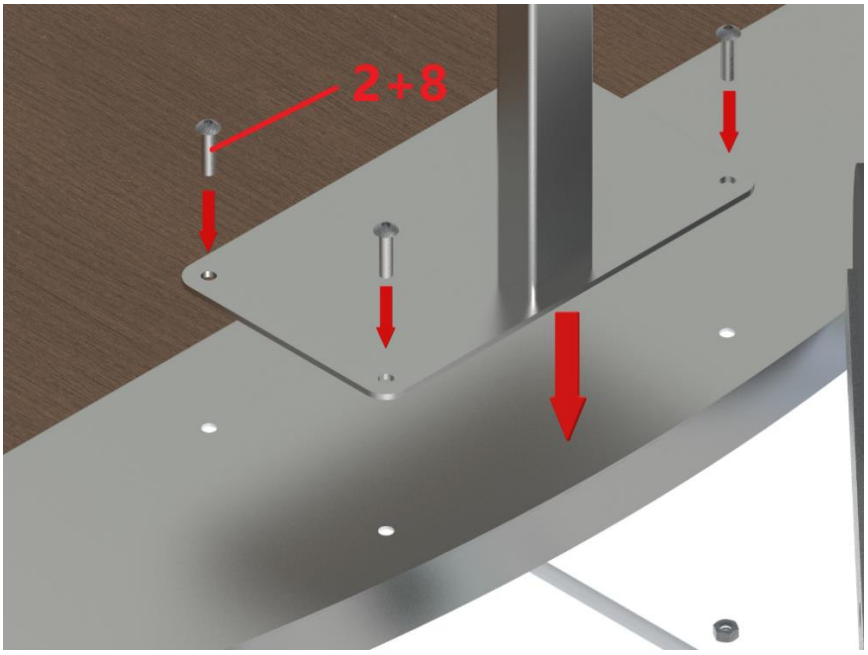

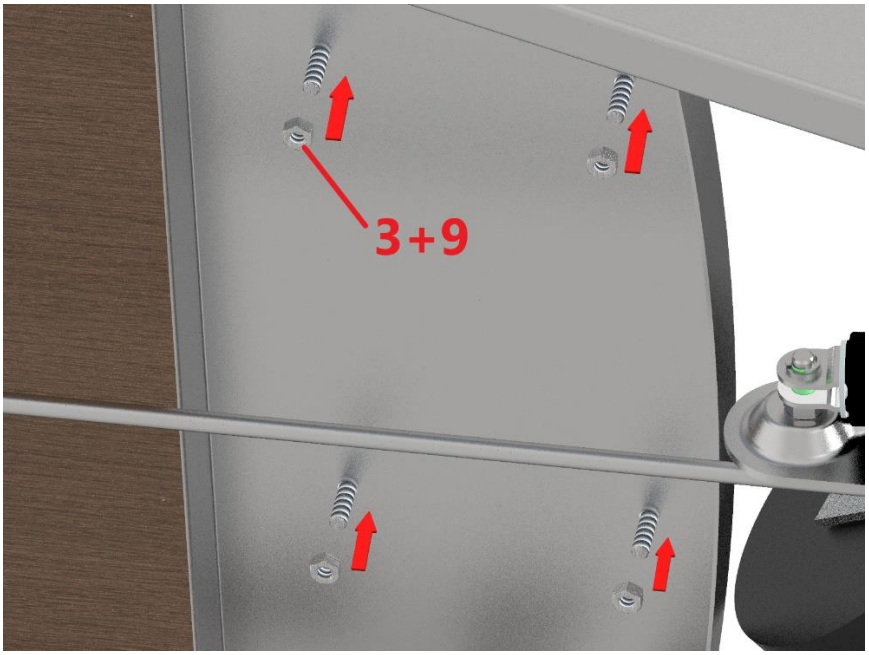

NUMBER	PICTURE	PCS
2		4
3		4
8	 13mm	
9	 5mm	

CORRECT INSTALLATION

