INSTALLATION INSTRUCTION OF THE WINCH WITH SUPPORT SET



TO INSTALLATION YOU NEED:

- WRENCH 17mm, 14mm, 13mm, 10mm, 8mm



- ALLEN WRENCH 4mm, 5mm, 8mm



- RIVIETER



- DRILLER




- SCREWDRIVER




- DRILLS 5mm and 10mm




STEP 1

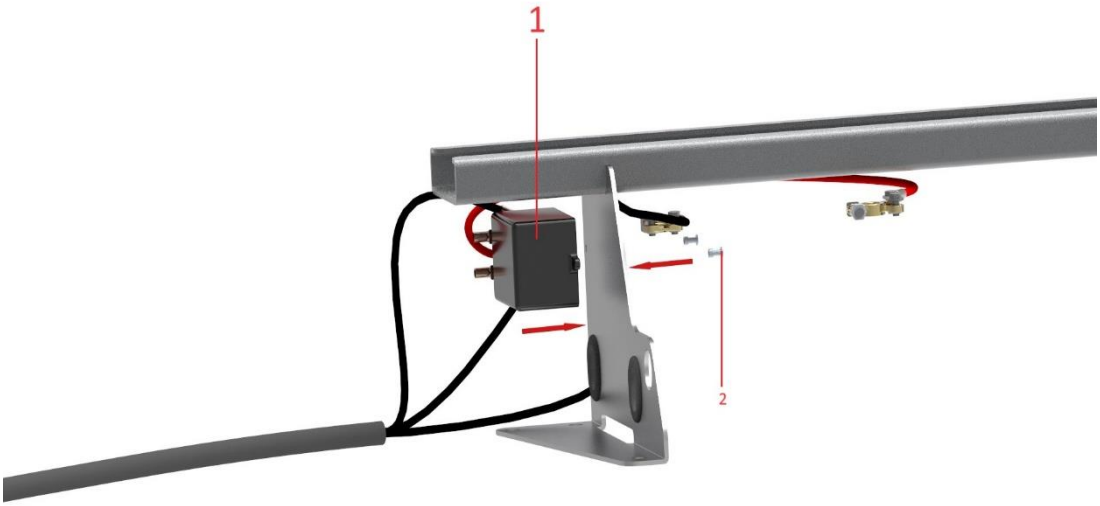


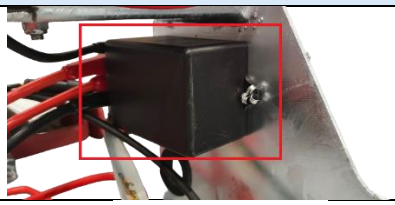NUMBER	PICTURE	PCS
1		1
2	 ALU	2

CORRECT INSTALLATION

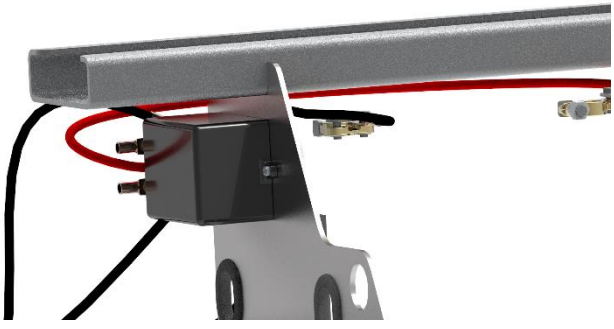


STEP 2

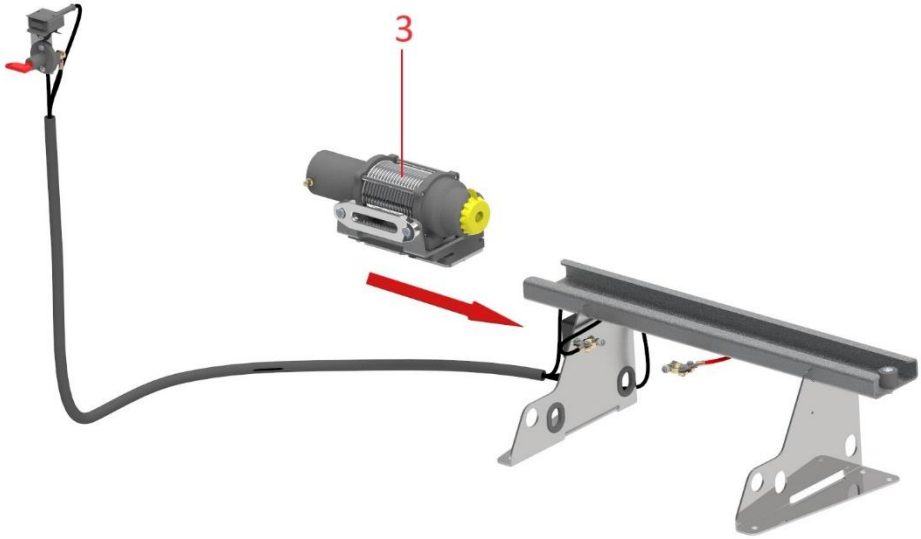


NUMBER	PICTURE	PCS
3		1

CORRECT INSTALLATION



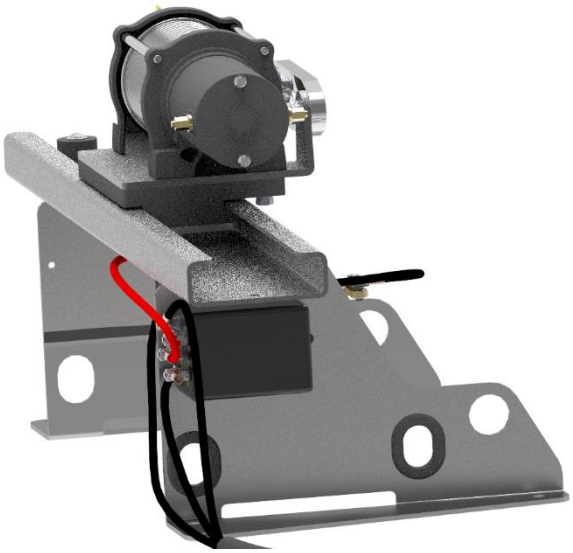


STEP 3

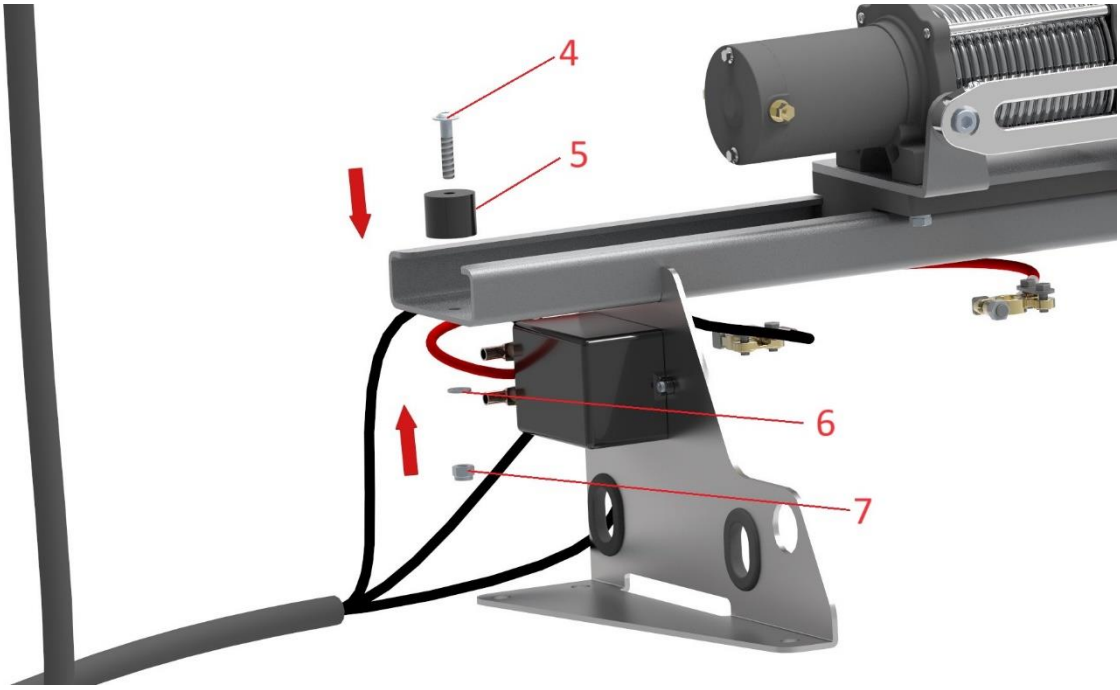


NUMBER	PICTURE	PCS
4	 M8x40	1
5		1
6	 8mm	1
7	 M8	1

CORRECT INSTALLATION

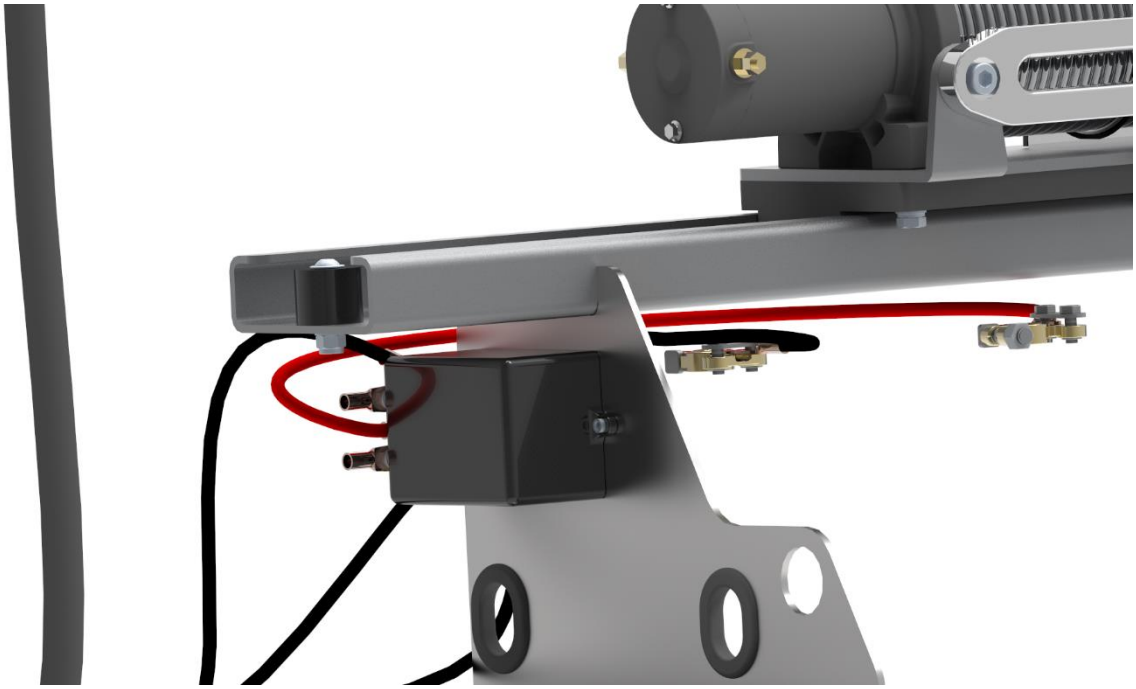


STEP 4

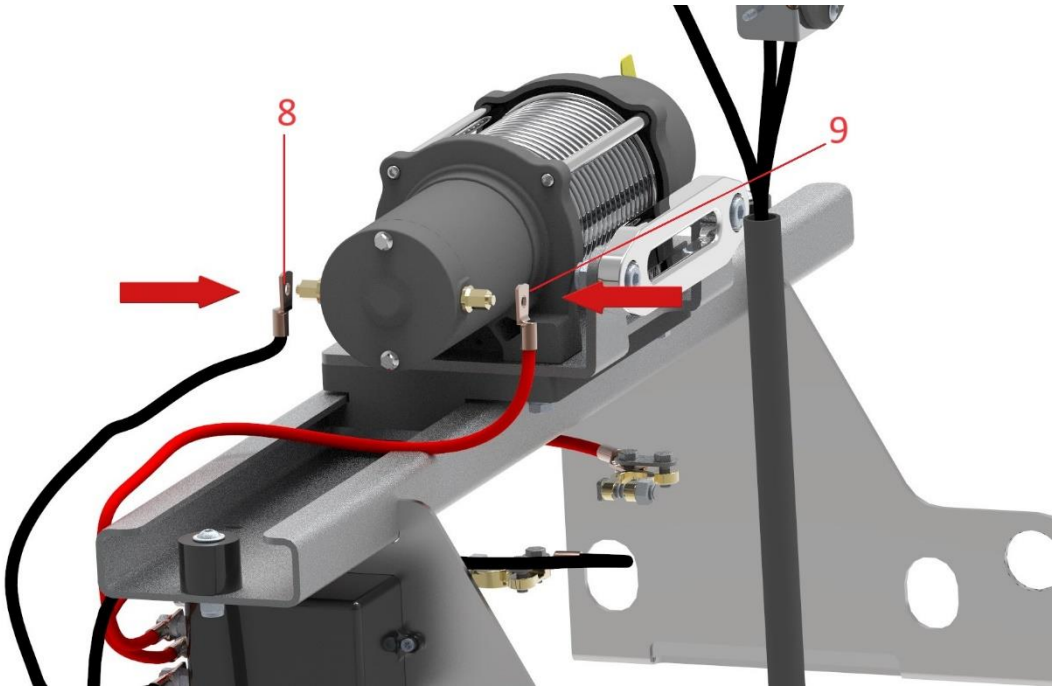



NUMBER	PICTURE	PCS
8	NEGATIVE CABLE FROM ELECTRONIC BOX	1
9	POSITIVE CABLE FROM ELECTRONIC BOX	1


CORRECT INSTALLATION

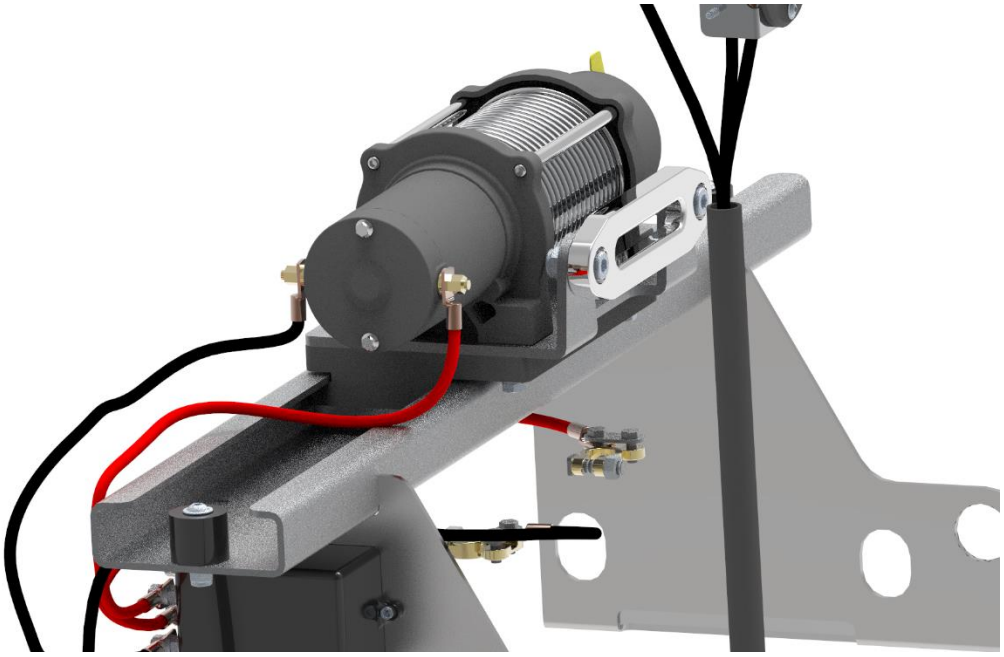


STEP 5

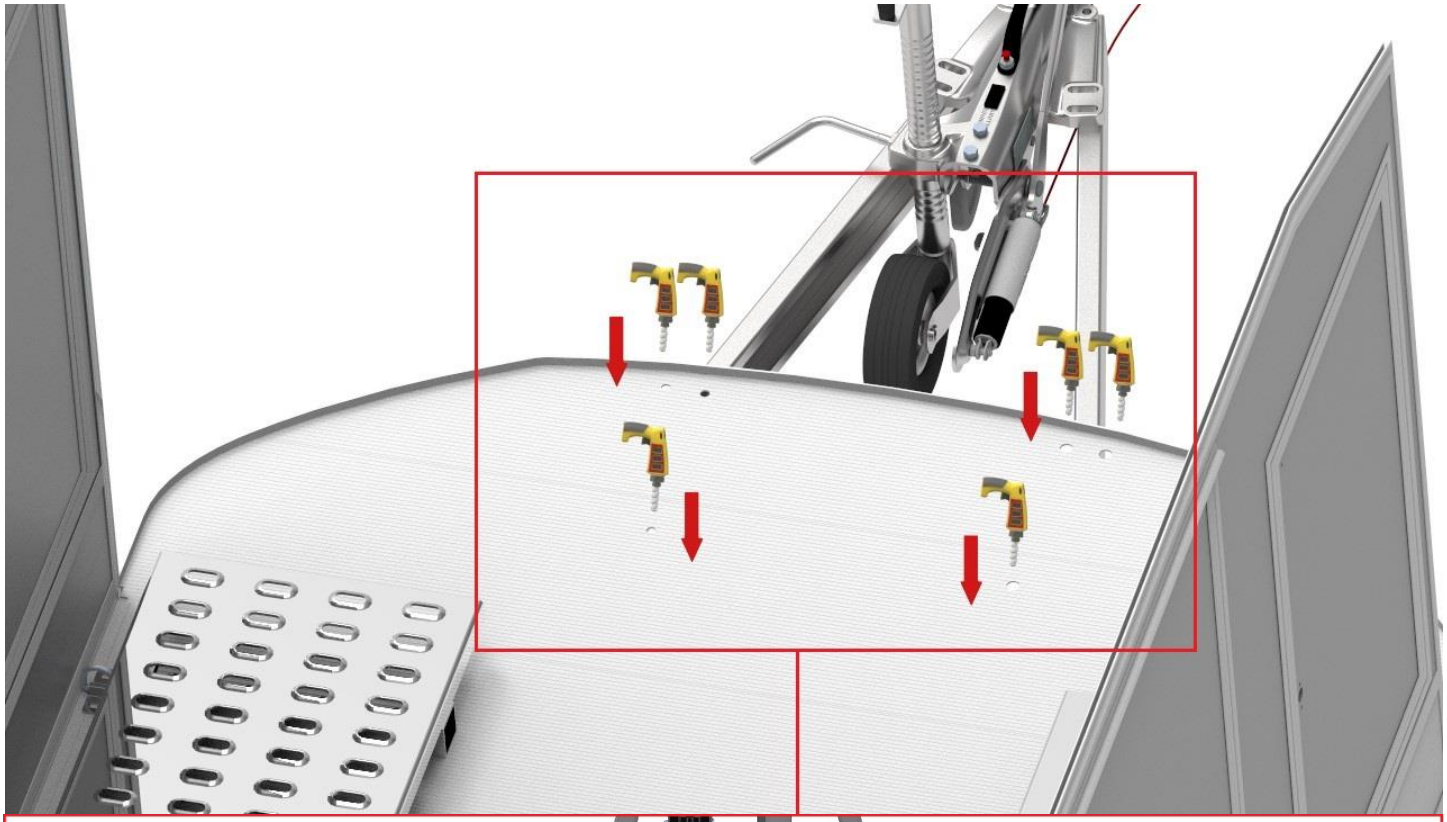

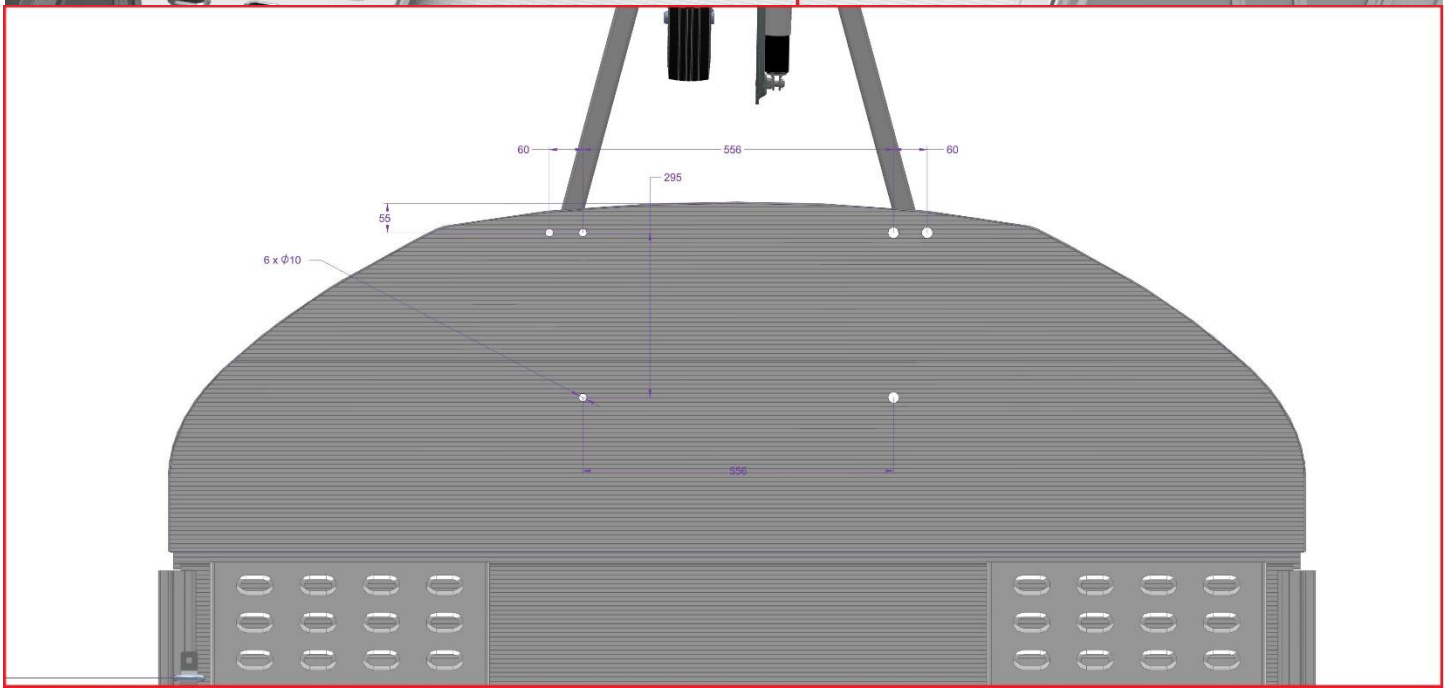


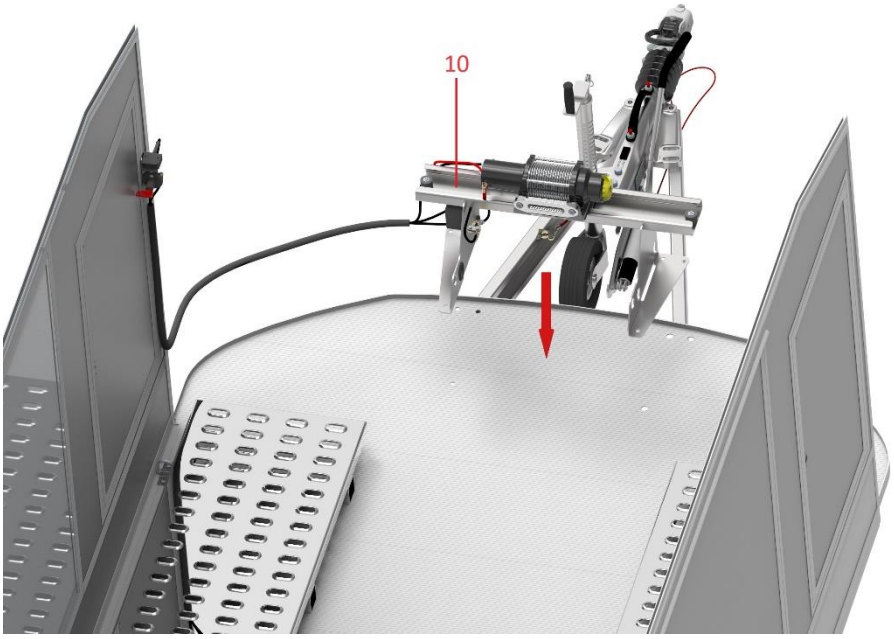


NUMBER	PICTURE	PCS
10		1

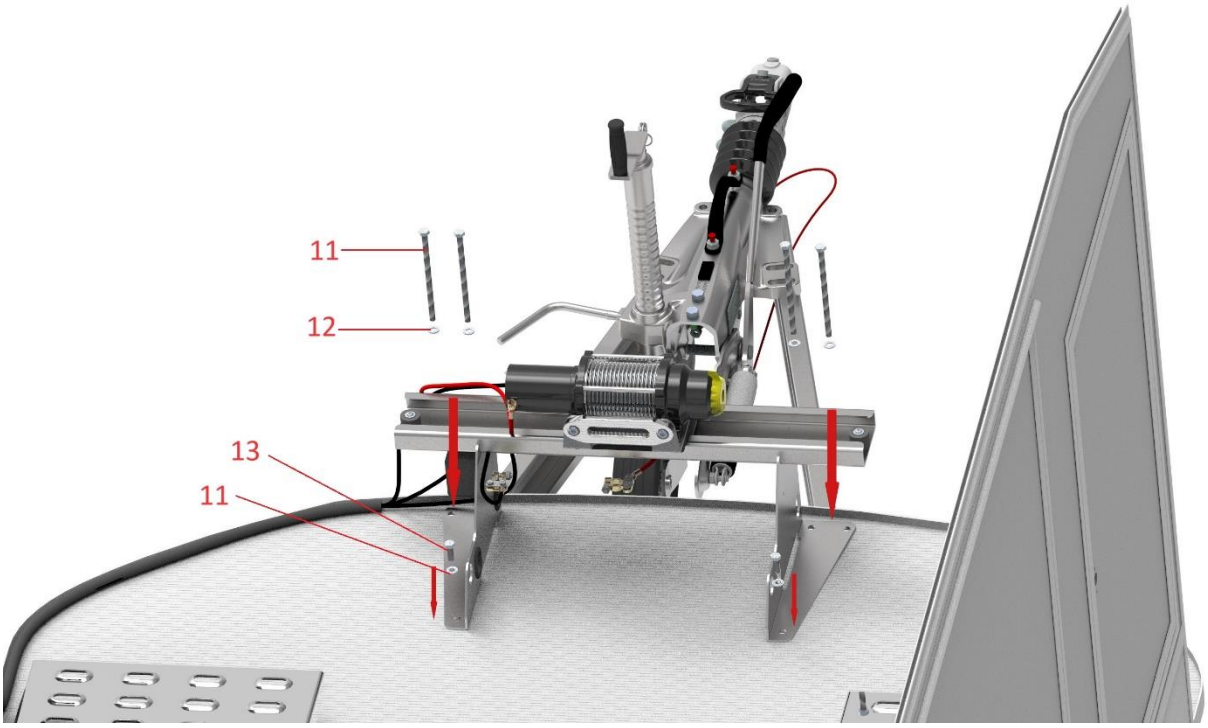


NUMBER	PICTURE	PCS
11	 M10x180	4
12	 10mm	6
13	 M10x30	2

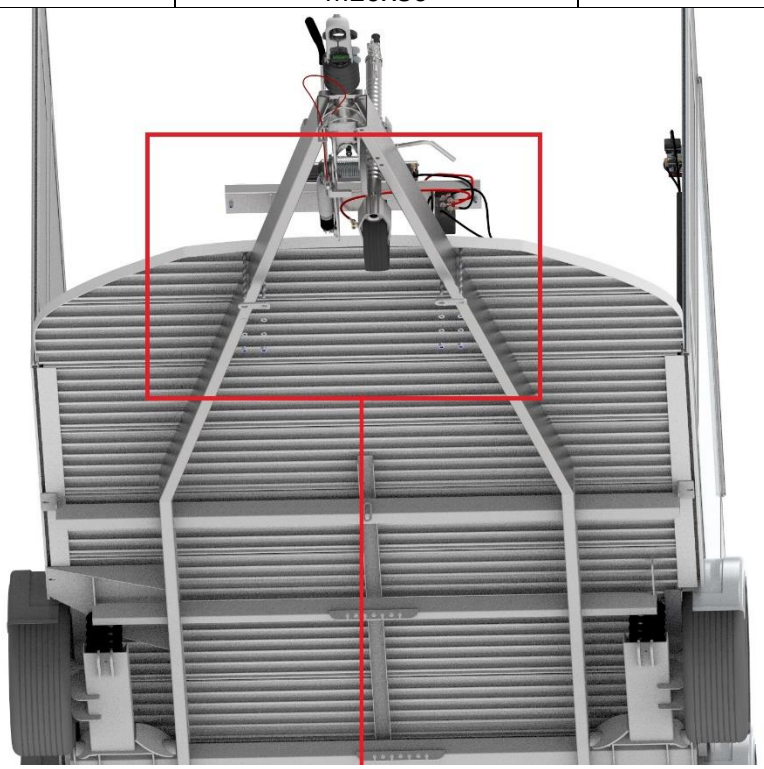

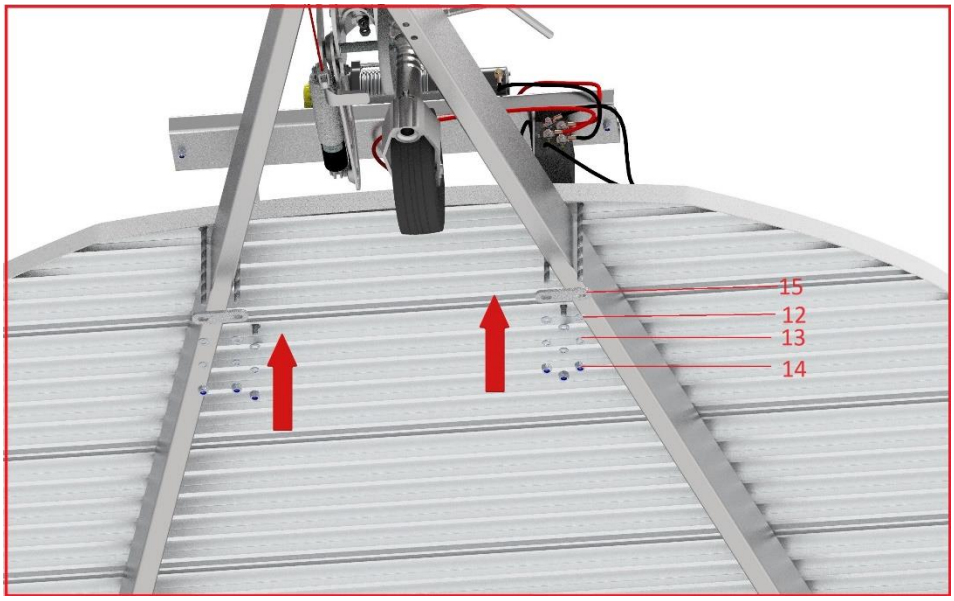


NUMBER	PICTURE	PCS
12	 10mm	6
13	 10mm	6
14	 M10	6
15		2

CORRECT INSTALLATION

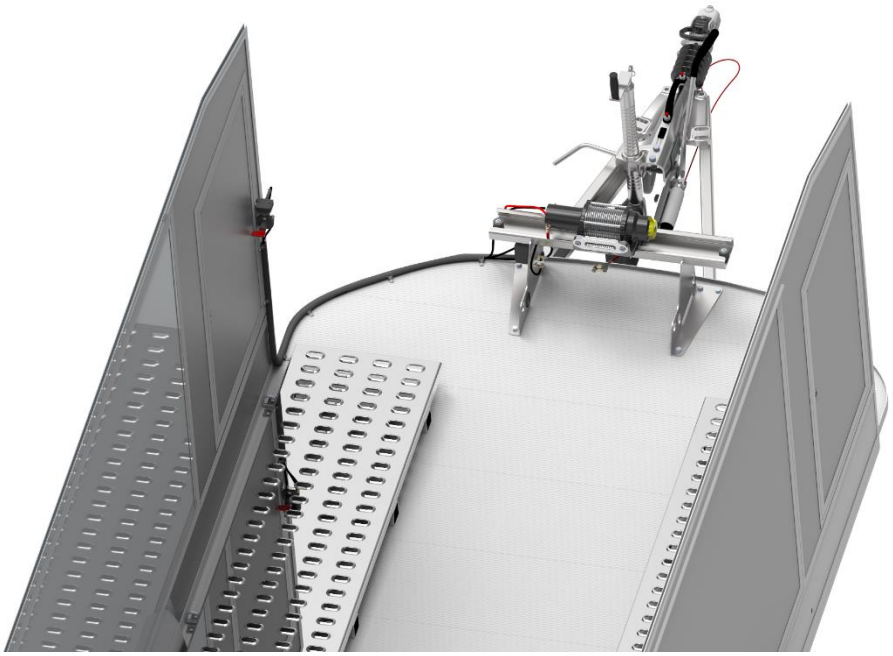




STEP 6

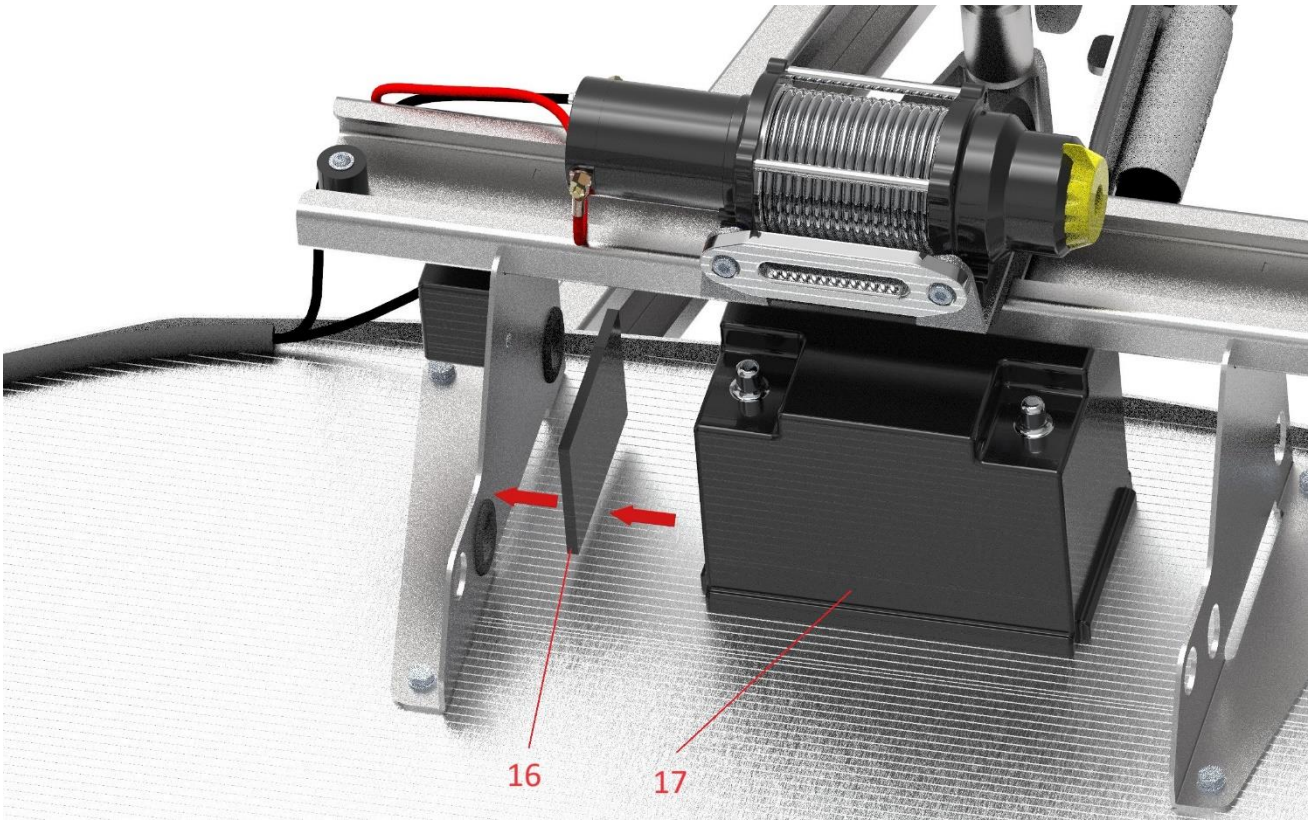


NUMBER	PICTURE	PCS
16		1
17		1

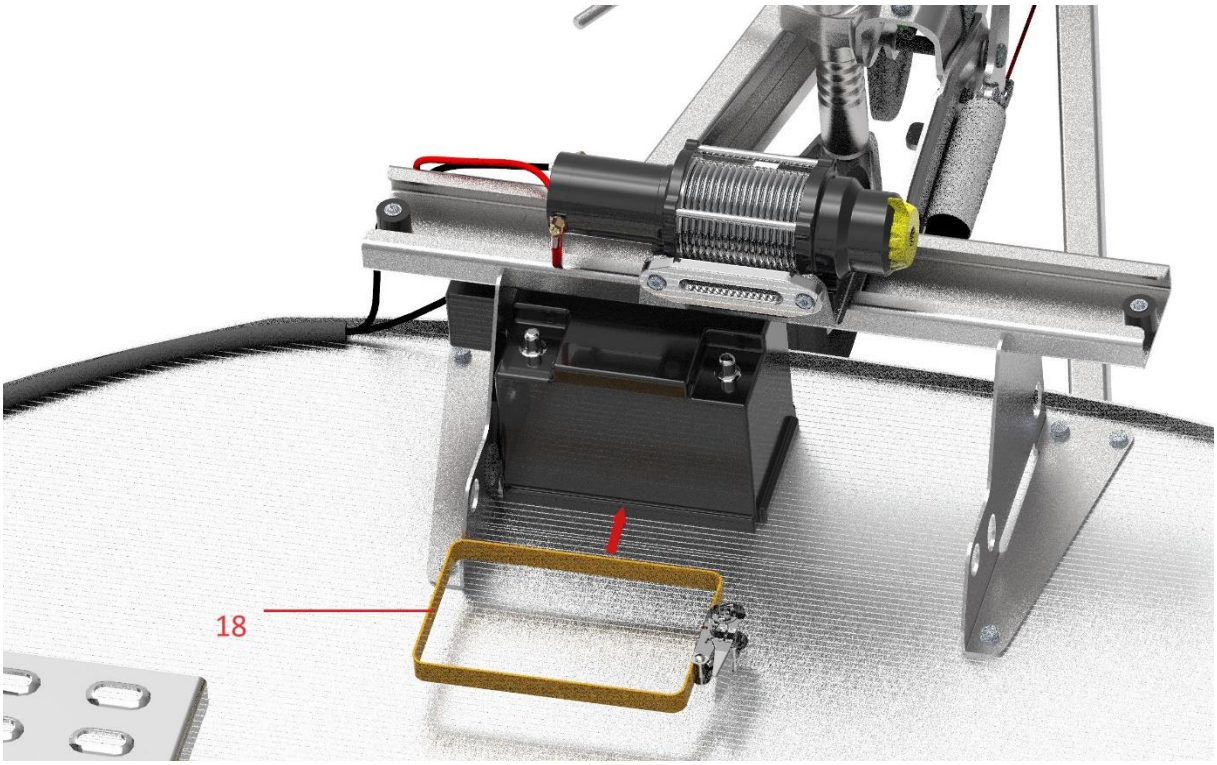


NUMBER	PICTURE	PCS
18		1


CORRECT INSTALLATION

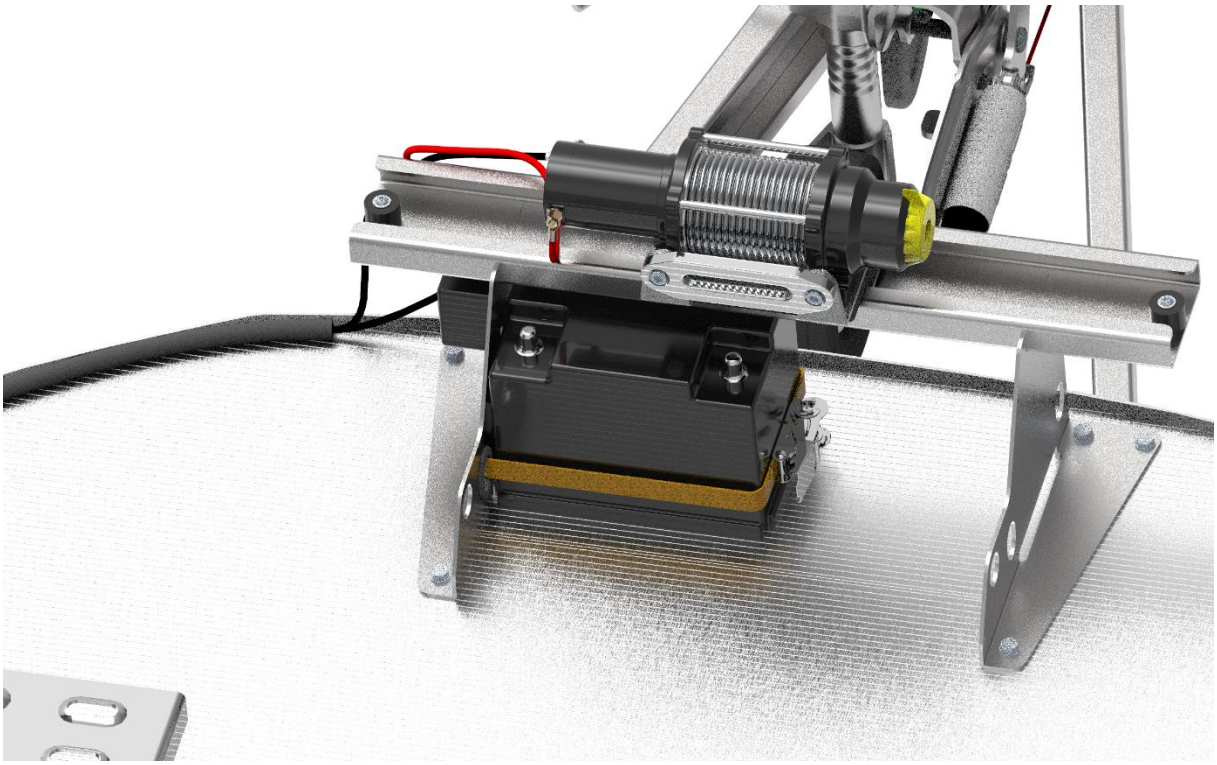


STEP 7

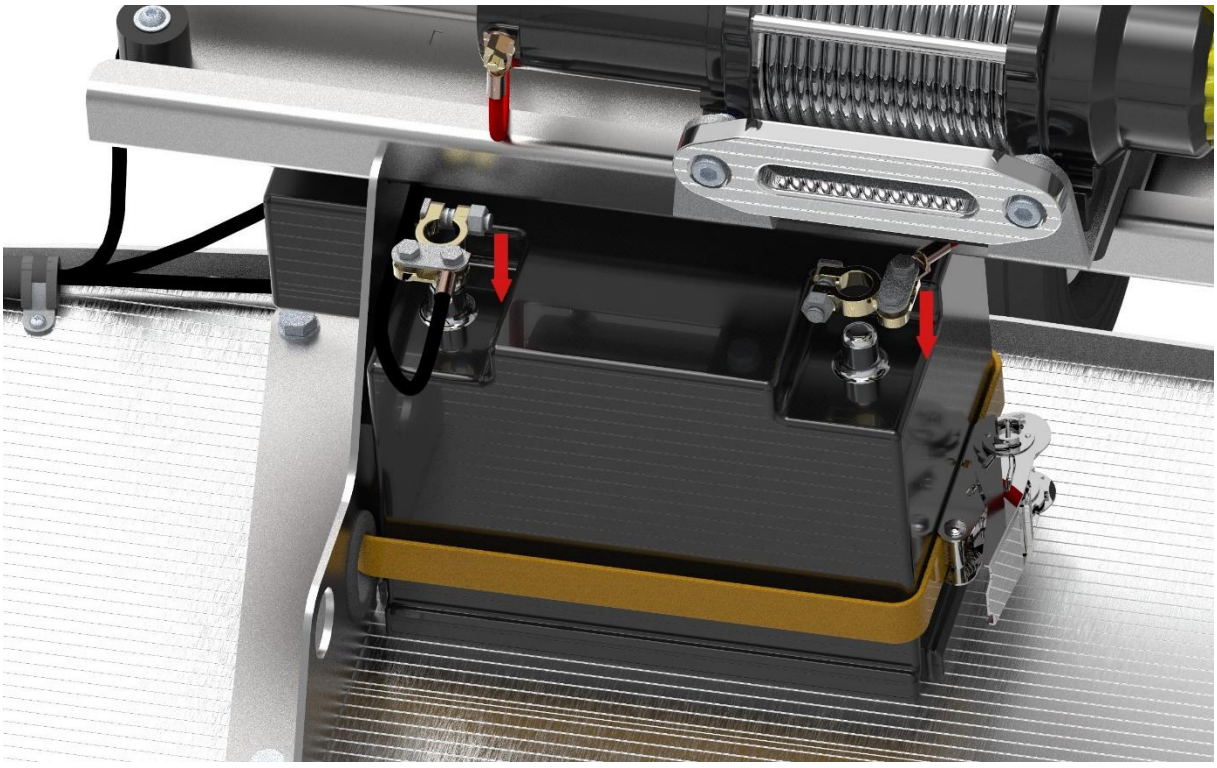

CORRECT INSTALLATION

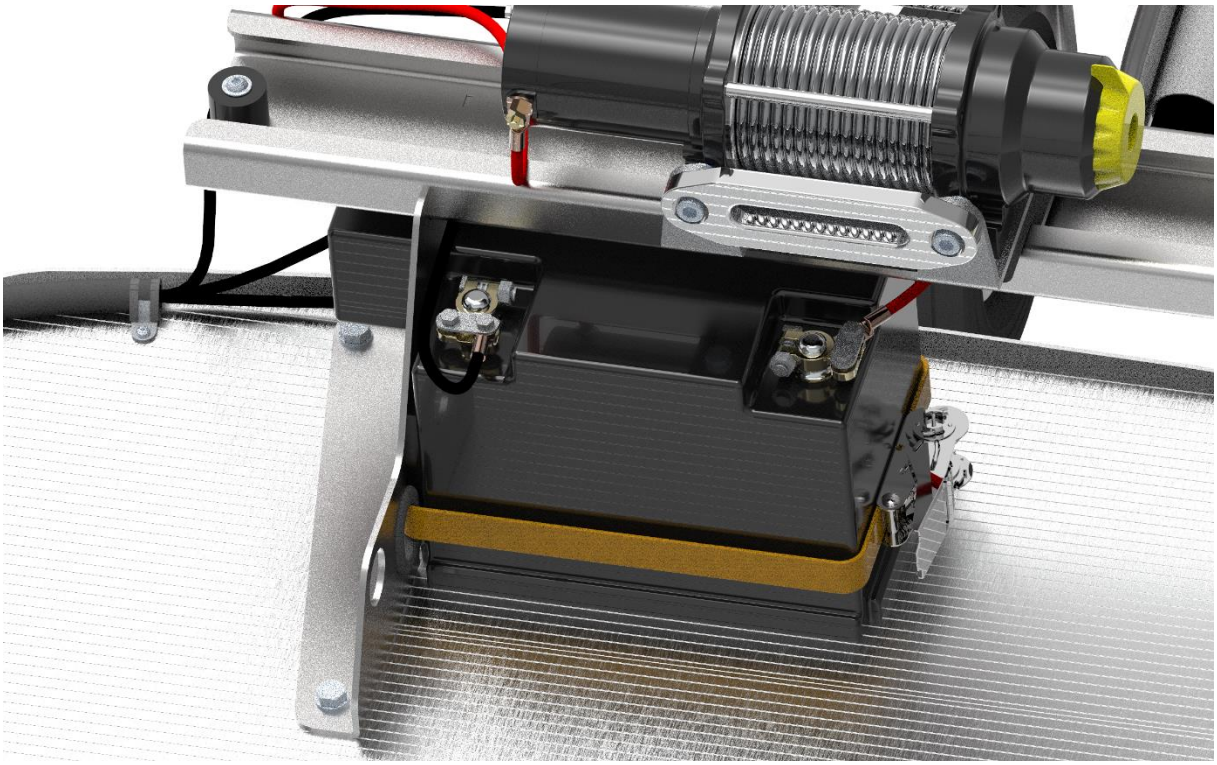


STEP 8

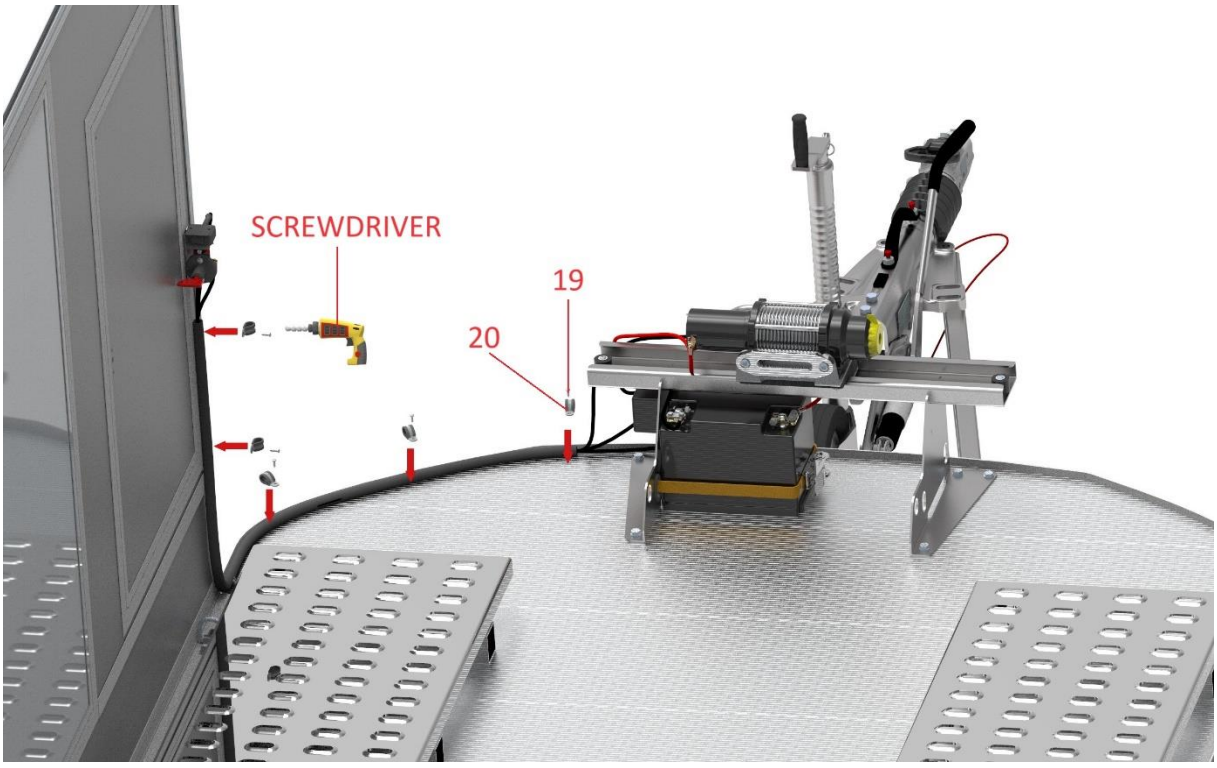


NUMBER	PICTURE	PCS


19		5
20		5


CORRECT INSTALLATION

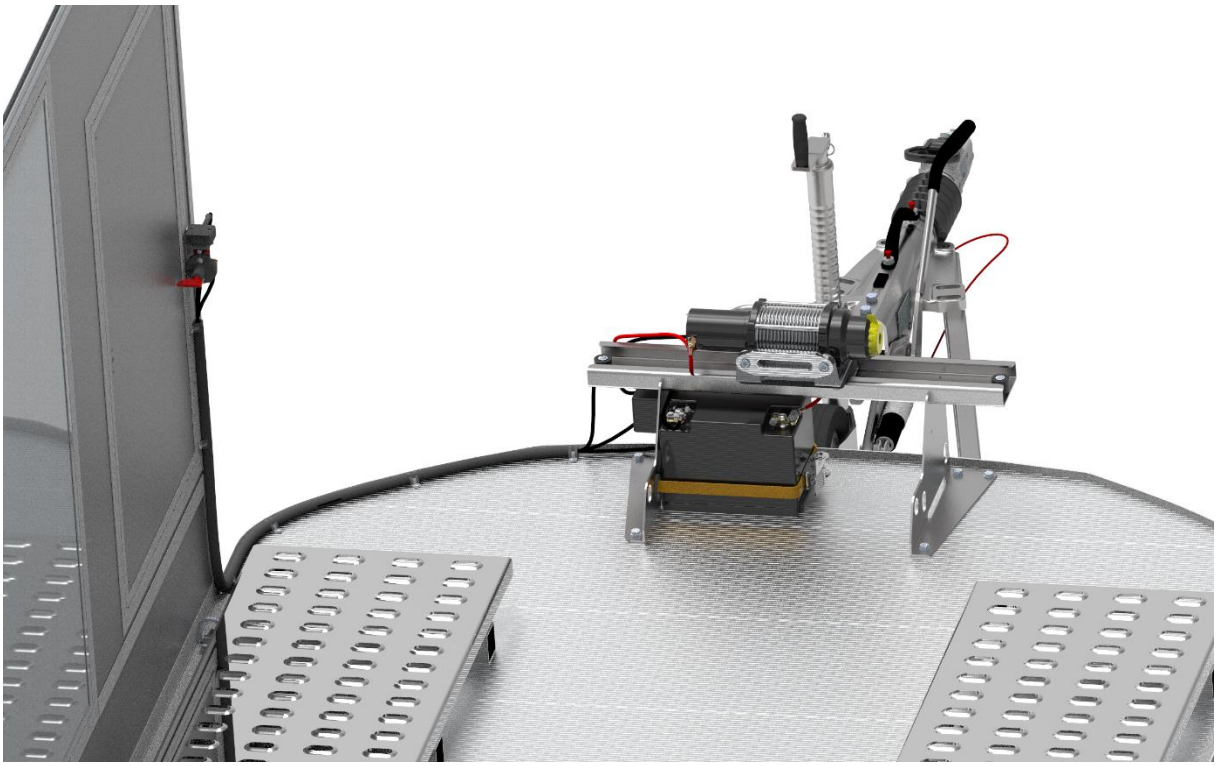

STEP 9

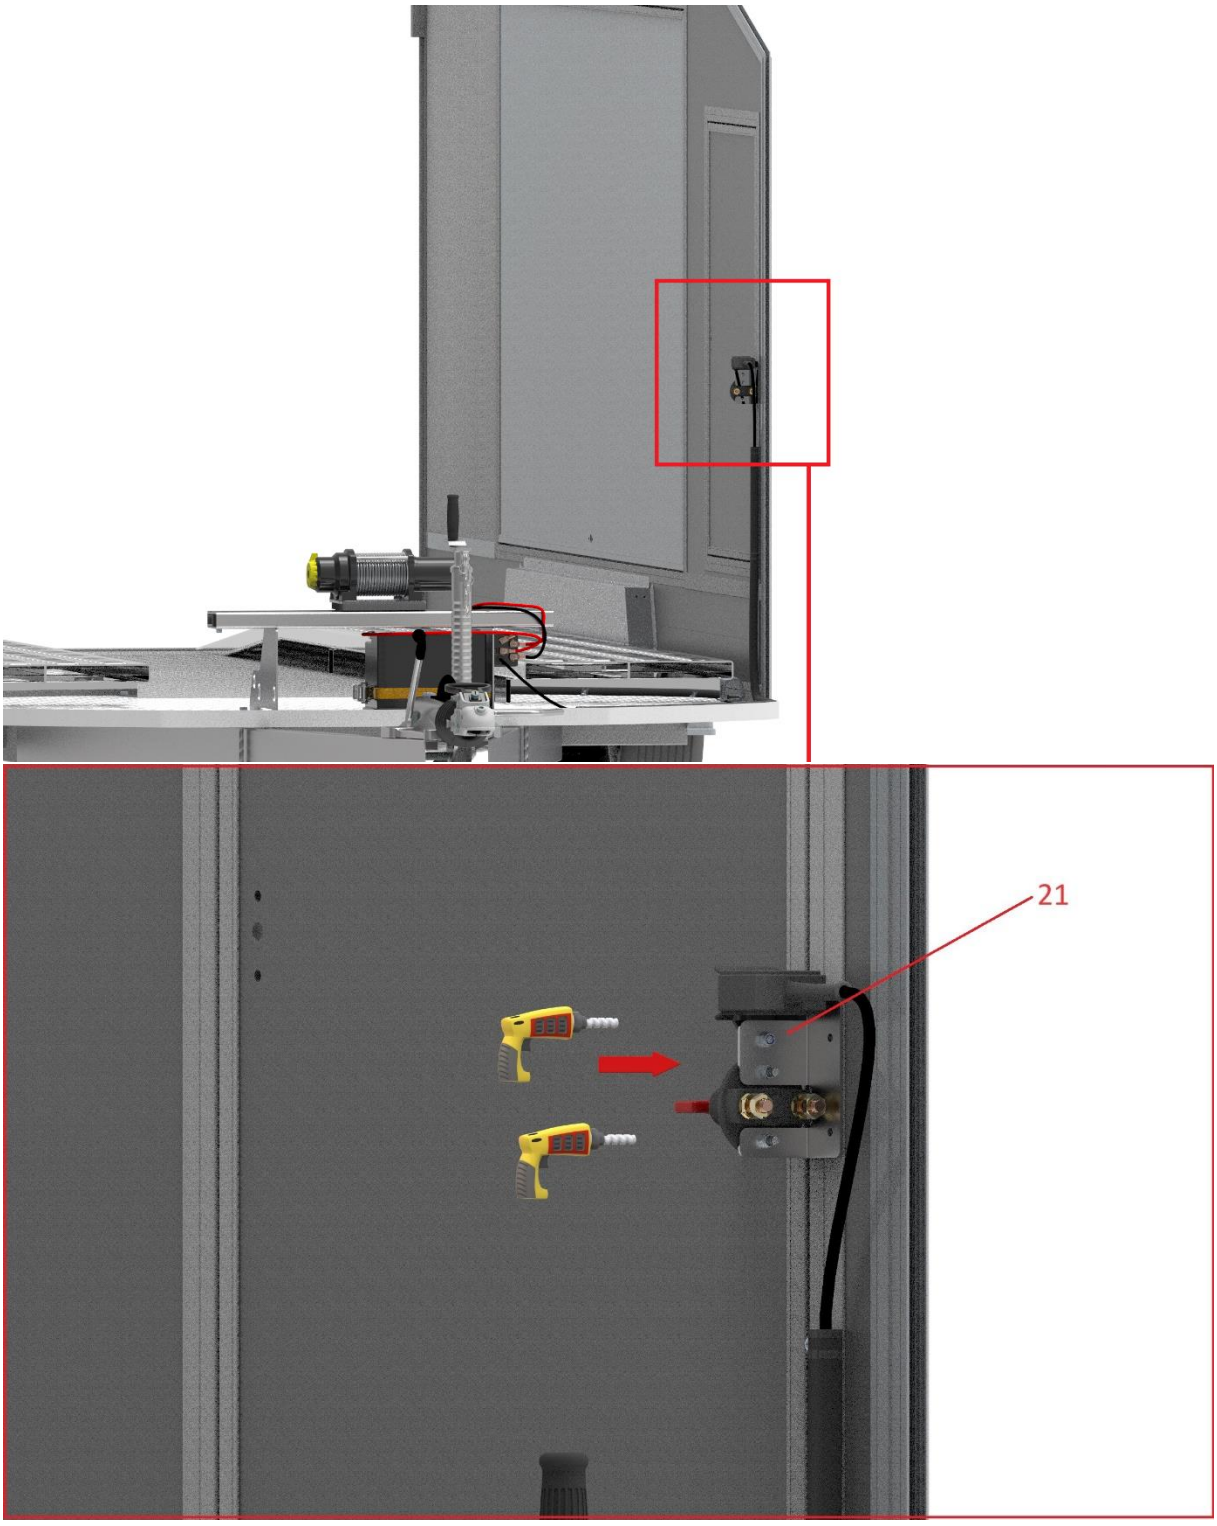

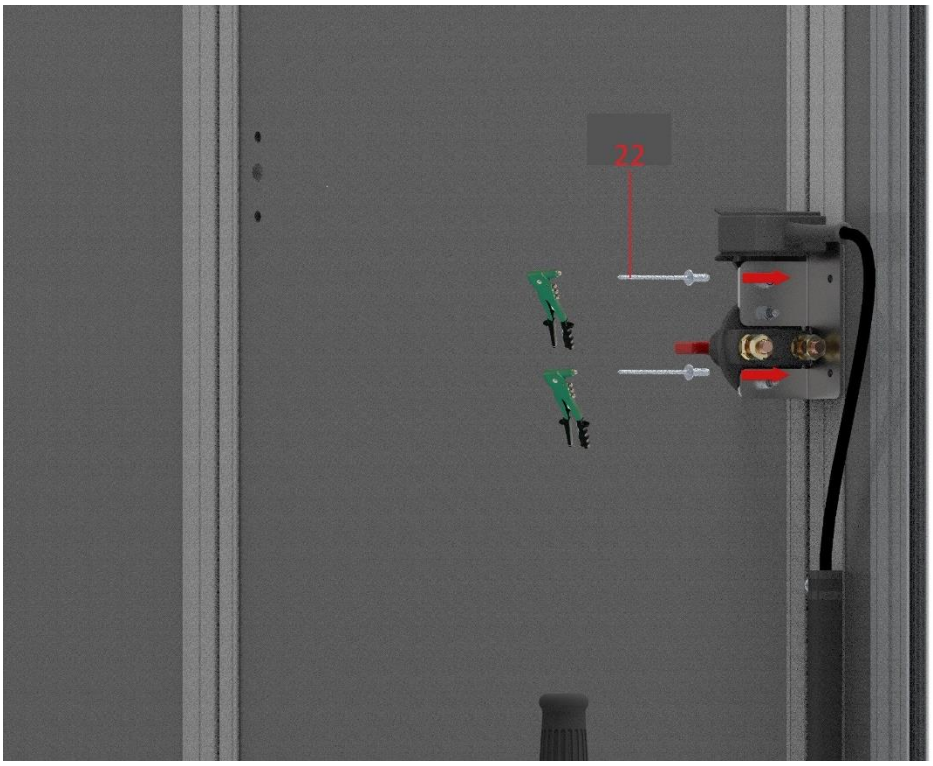

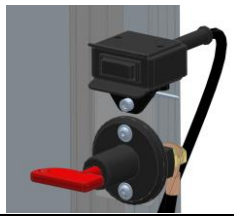NUMBER	PICTURE	PCS
21		1
22		2

CORRECT INSTALLATION

