
ASSEMBLY INSTRUCTIONS FOR THE SPARE WHEEL HOLDER

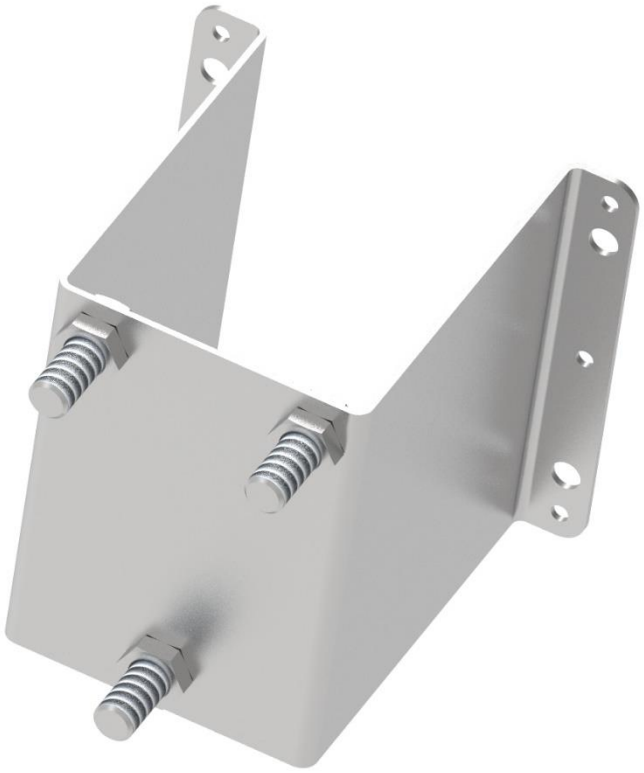

POSSIBLE INSTALLATION

	WALL		
MODEL	**RIGHT**	**LEFT**	**FRONT**
GOLD S	✓	✓	✓
GOLD ALULINE	✓	✓	✓
GOLD ONE	✓	✓	✗
GOLD 2	✓	✓	✗
GOLD 3	✓	✓	✗
GOLD 3 COMPOSITE	✗	✗	✗
TOURING ONE	✓	✓	✗
TOURING JUMPING	✓	✓	✗
TOURING COUNTRY	✓	✓	✗
TOURING 2D	✓	✓	✗

TO INSTALLATION YOU NEED:

1- 

2-  x6

(ALUMINUM WALLS)

3-  x4


(PLYWOOD WALLS)

4-  x4

(PLYWOOD WALLS)


5- 

6- 

7- 

8-  5MM ALUMINUM

 8MM PLYWOOD

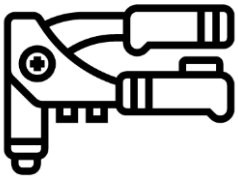
9- 

10-  ACRYLIC PAINT
FOR PLYWOOD WALLS


11-  13mm


ALUMINUM WALLS

STEP 1

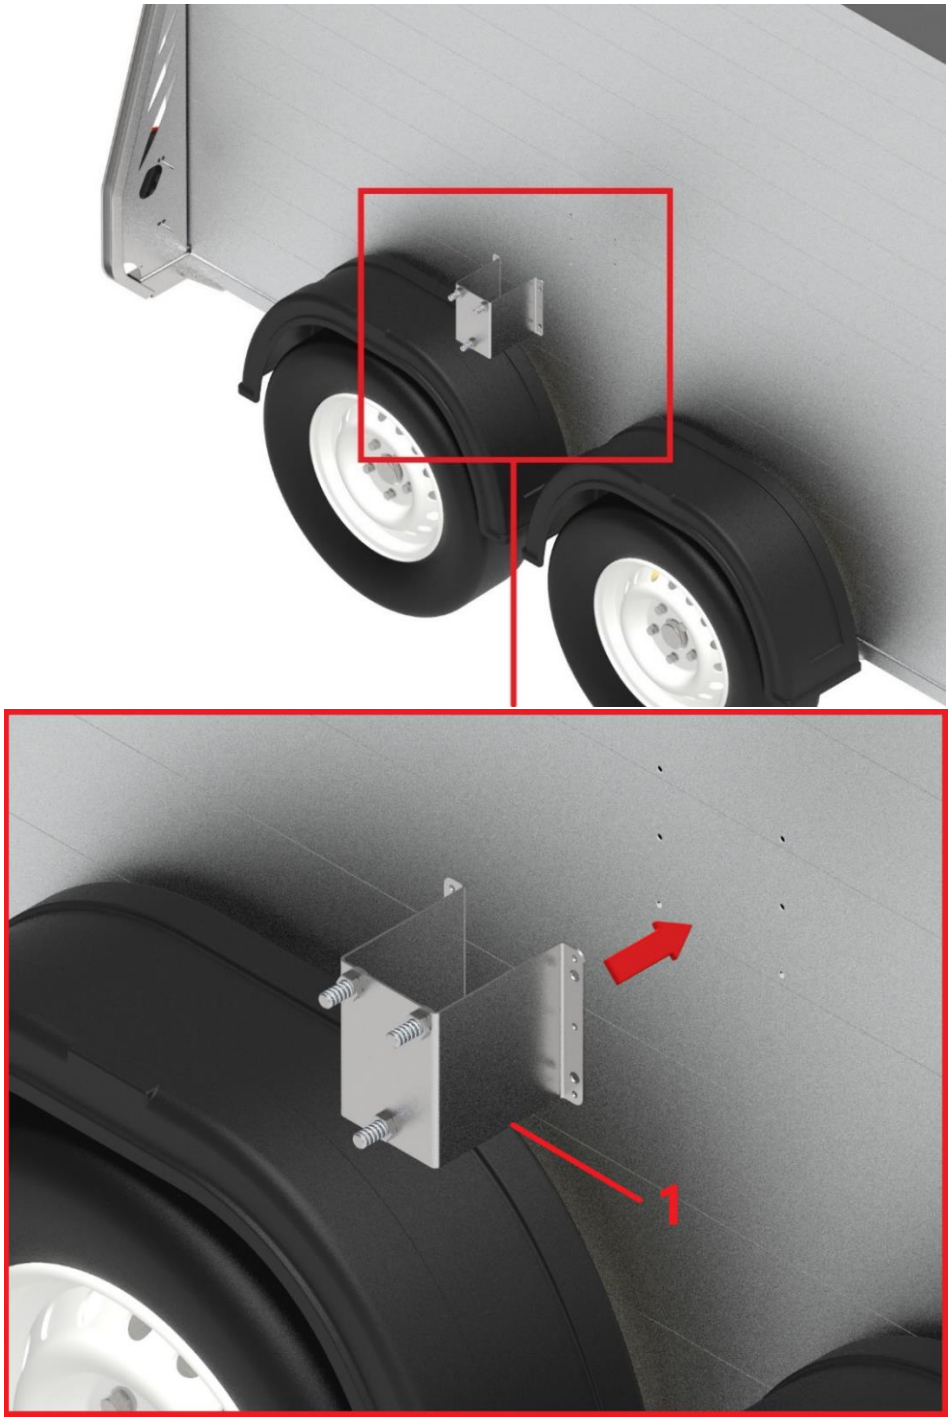

NUMBER	PICTURE	PCS
1		1

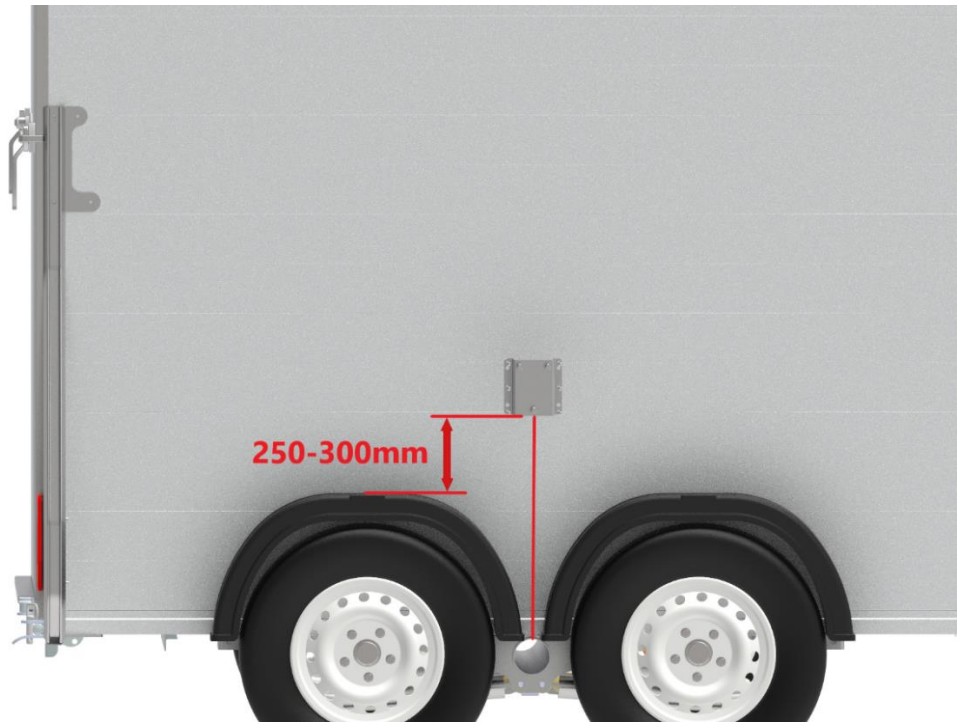


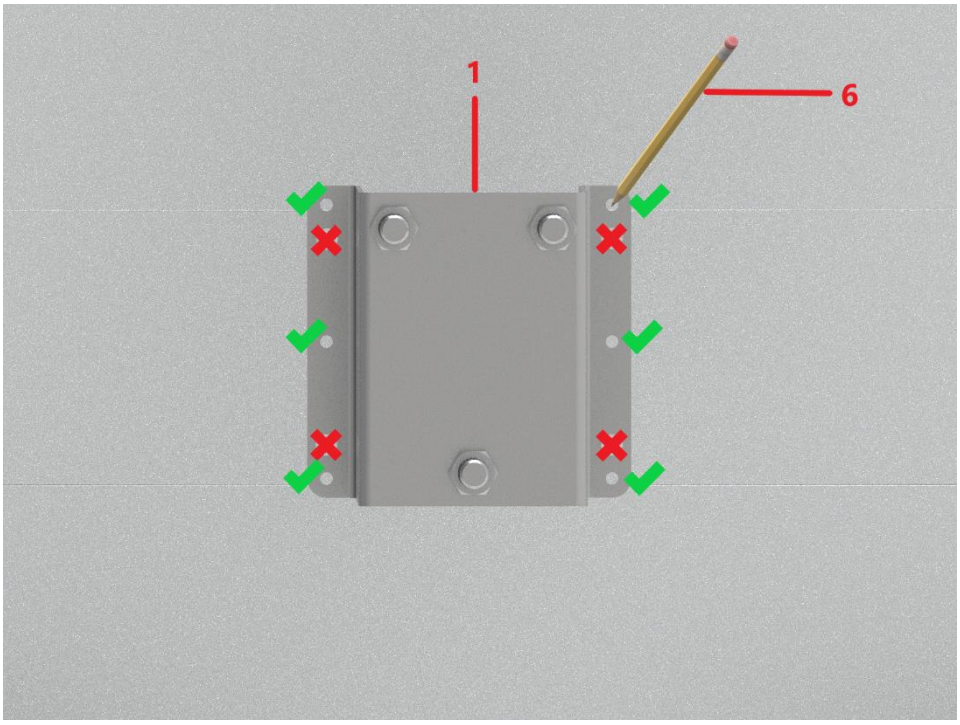


NUMBER	PICTURE
5	
6	


STEP 2




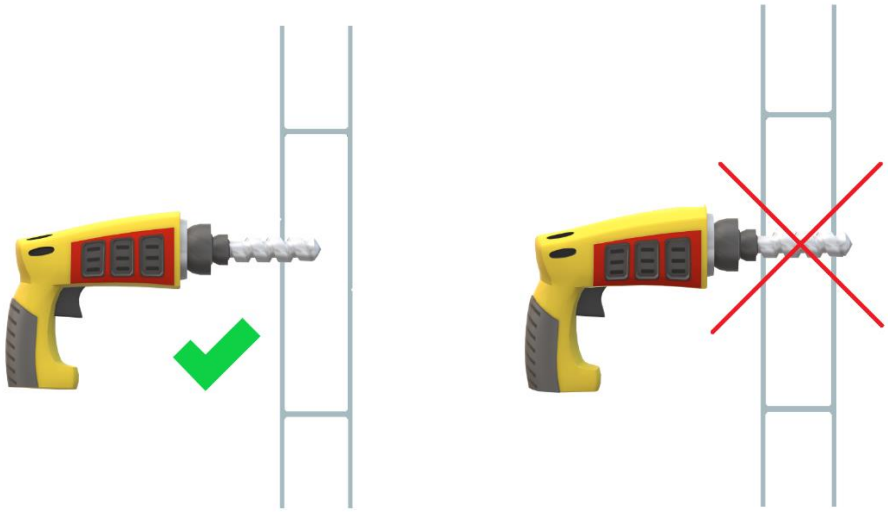


NUMBER	PICTURE
7	
8	 5MM ALUMINUM


STEP 3

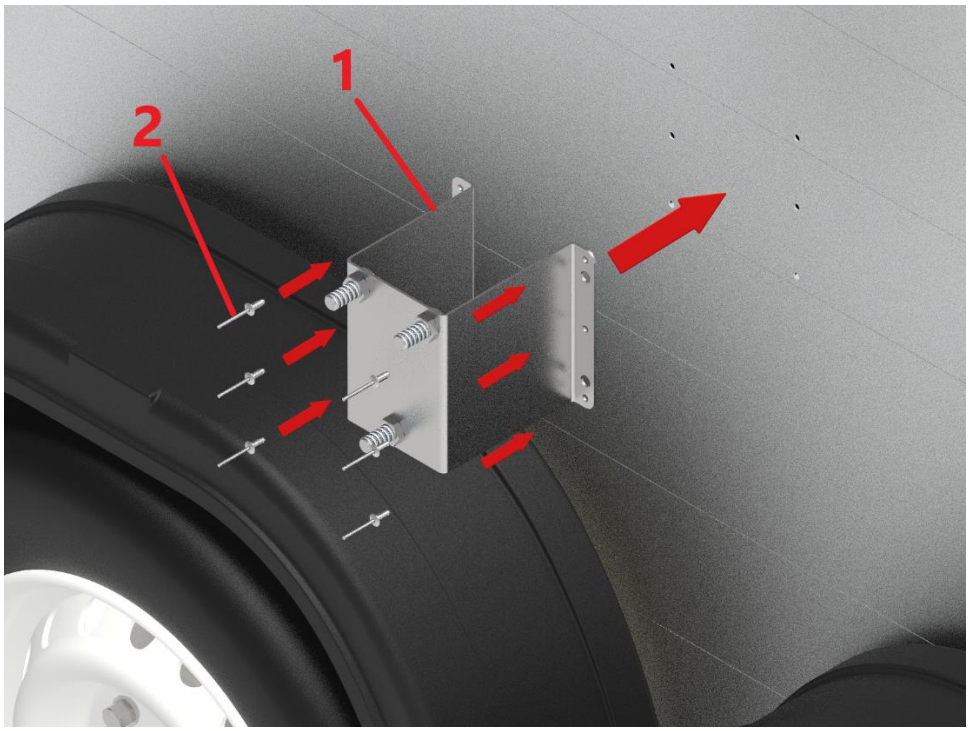

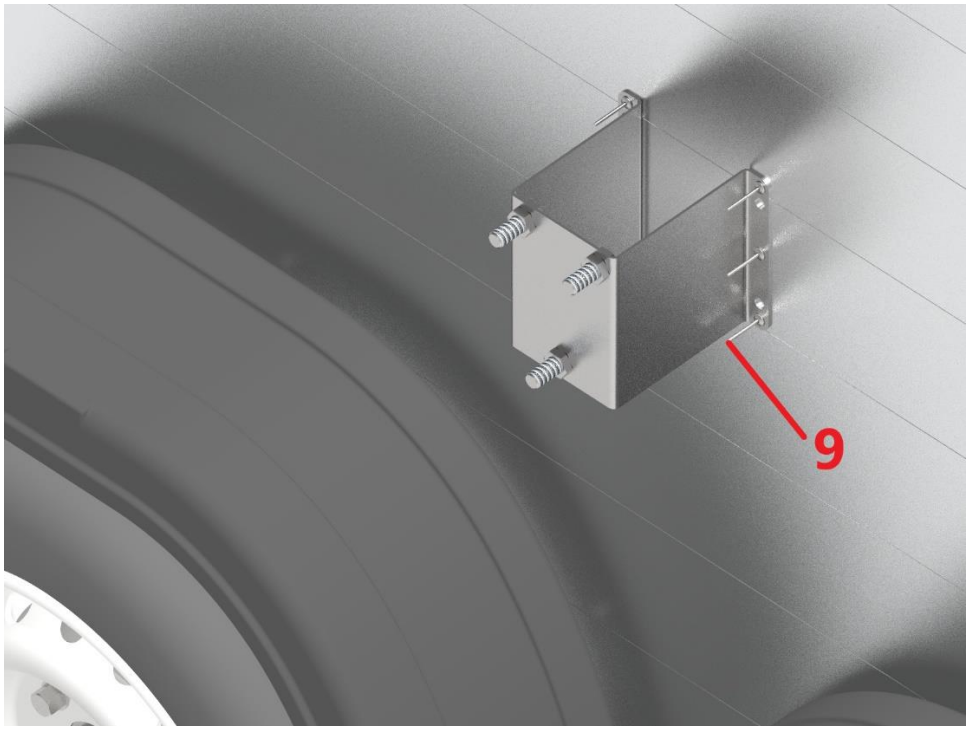

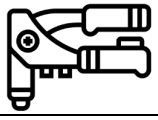
NUMBER	PICTURE	PCS
2		**6**
9		

CORRECT INSTALLATION

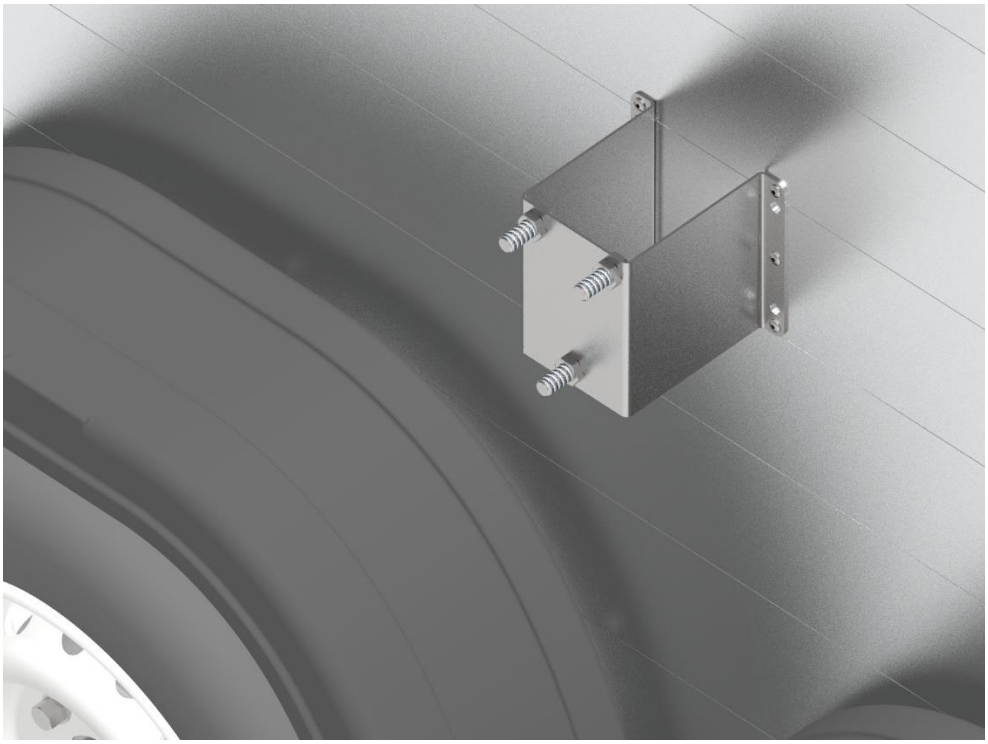



PLYWOOD WALLS

STEP 1

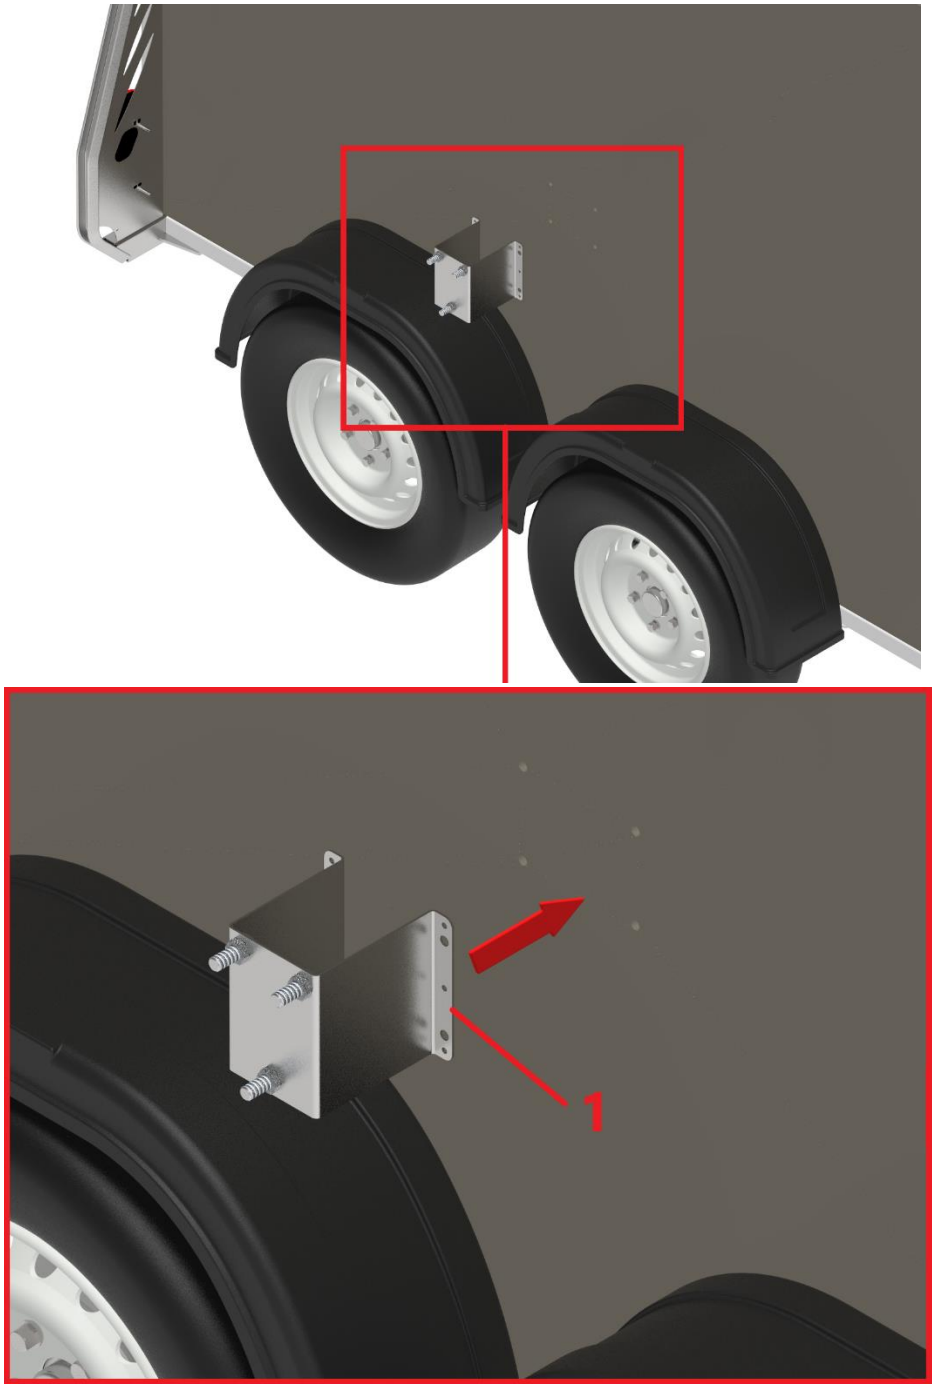


NUMBER	PICTURE	PCS
1		1

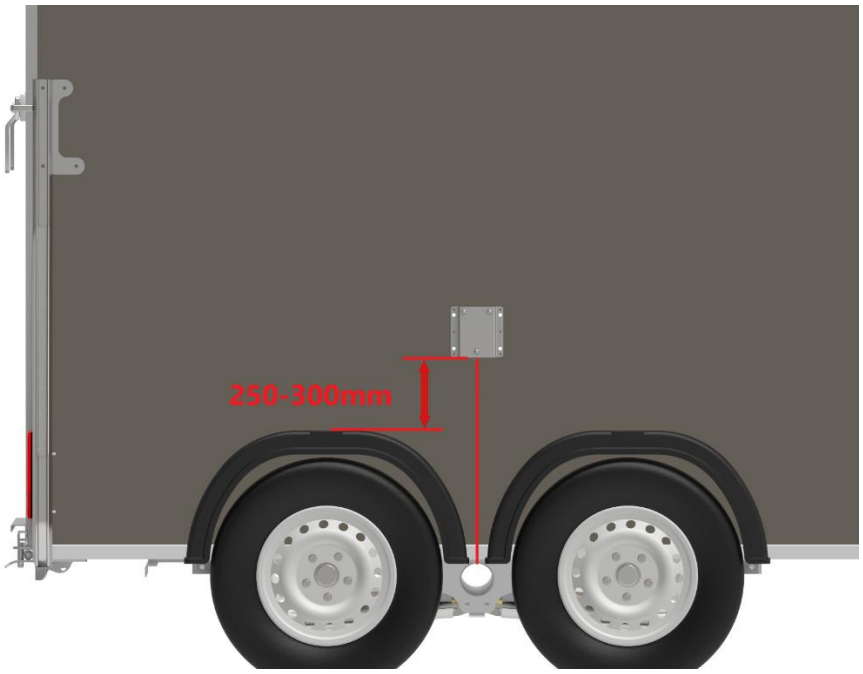


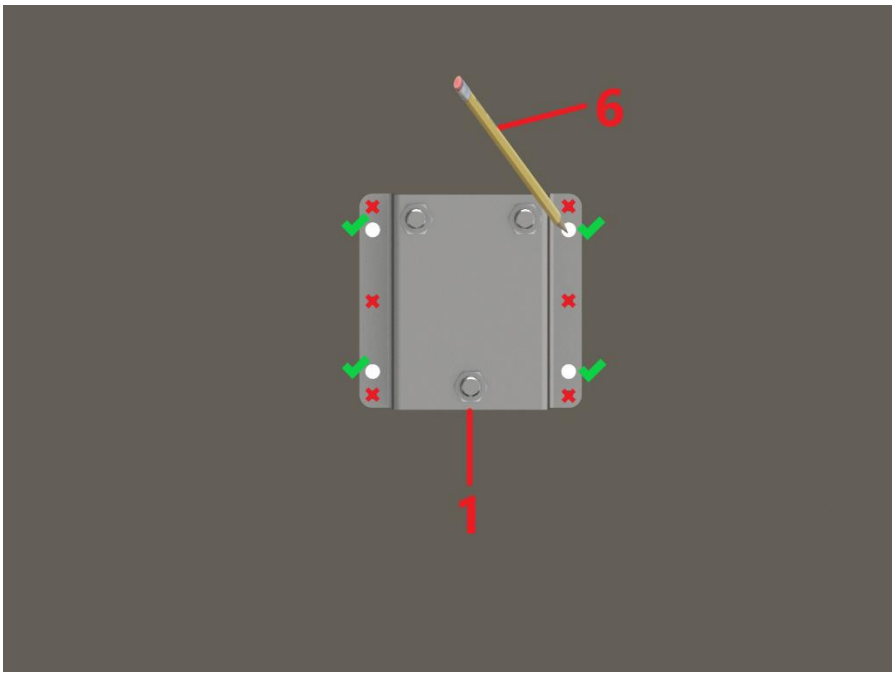


NUMBER	PICTURE
5	
6	


STEP 3

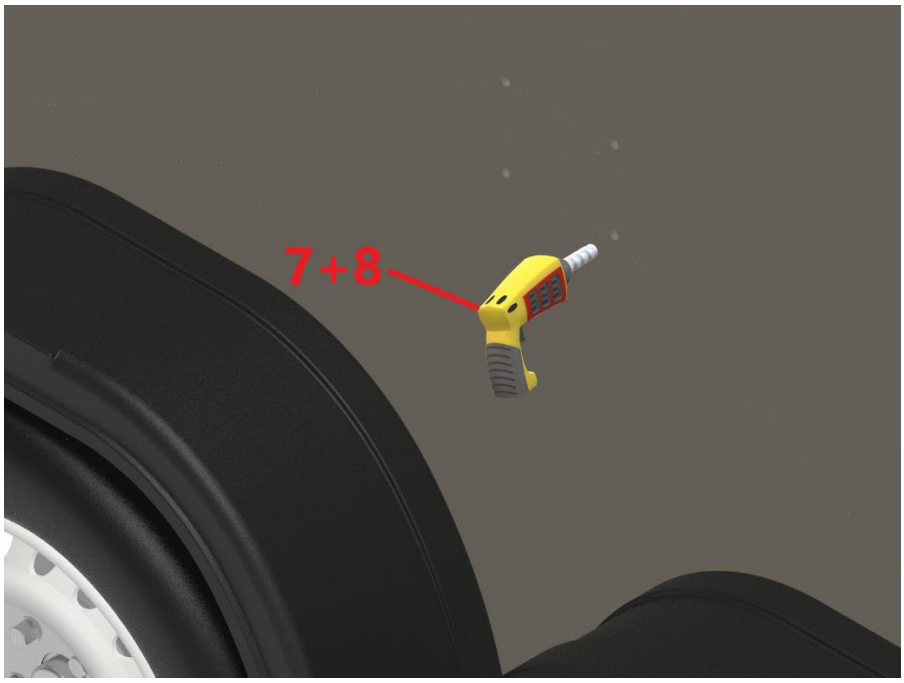

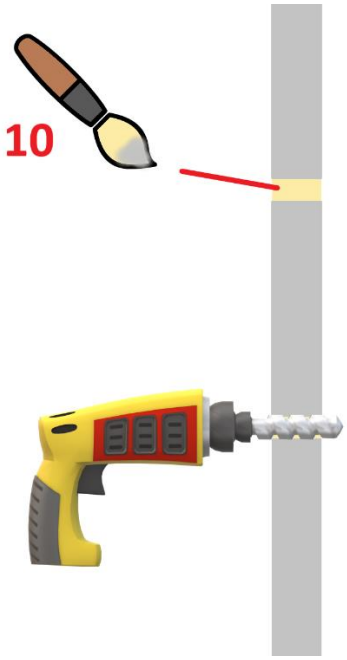


NUMBER	PICTURE
7	
8	 8MM PLYWOOD
10	 ACRYLIC PAINT

STEP 5

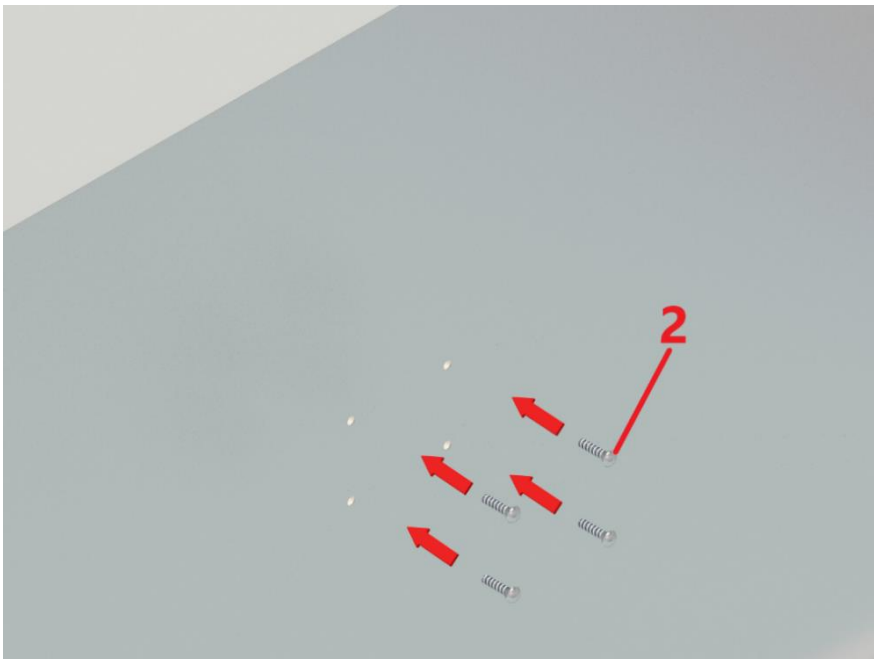


NUMBER	PICTURE	PCS
2		6

STEP 6

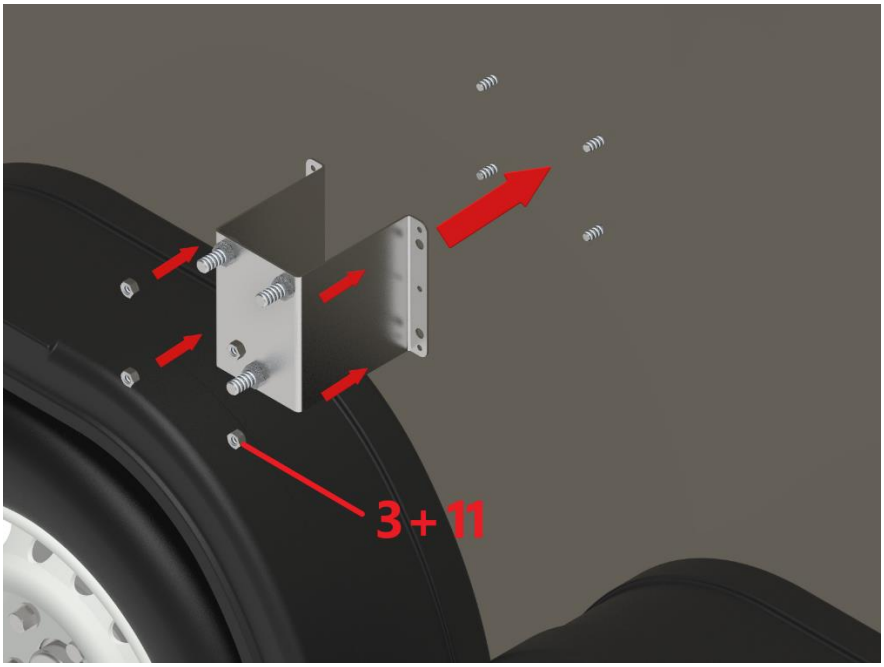

NUMBER	PICTURE	PCS
3		4
11	 13mm	

CORRECT INSTALLATION

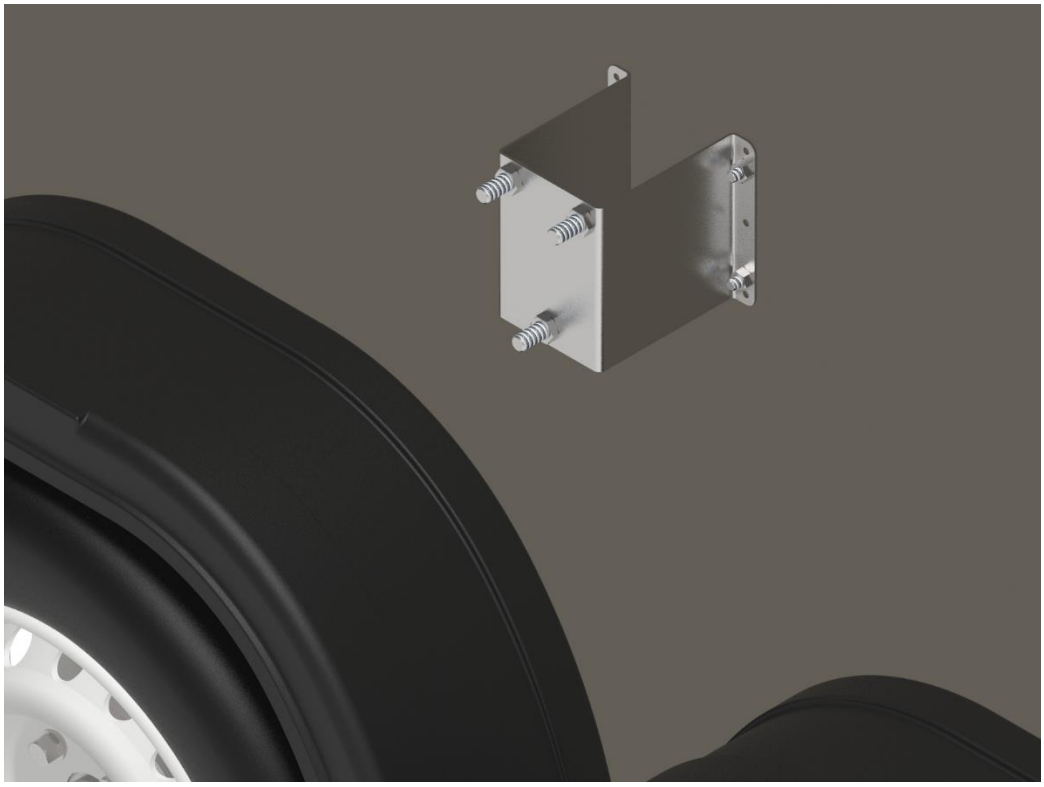

FRONT WALL

